

B49
B36
B63
B64
B53
B37
B44
B61
B38
B39
B46
B34
B43
B60
B35
B57
B42
B56
B41
B62
B32
B47
B31
B52
B4
B54
B21
B40
B48
B33
B45
B55
B26
C2
B5
B25

B 4 Water Temp. Sensor
B 5 Engine Oil Pressure SW
B 21 Alternator
B 25 Back-Up Light SW
B 26 Starter
B 31 Battery Current Sensor
B 32 Engine ECU
B 33 Throttle Body Assembly
B 34 Air Flow Meter
B 35 Camshaft Position Sensor
B 36 Fuel Injector (No.1)
B 37 Fuel Injector (No.2)
B 38 Fuel Injector (No.3)
B 39 Fuel Injector (No.4)
B 40 A/C Compressor
B 41 Alternator
B 42 Crankshaft Position Sensor
B 43 Glow Plug Relay
B 44 VRV (EGR)
B 45 Turbo Pressure Sensor
B 46 Suction Control Valve
B 47 Fuel Temp. Sensor
B 48 Engine Oil Level Sensor
B 49 Glow Plug
B 52 Exhaust Fuel Addition Injector Assembly
B 53 VSV (EGR)
B 54 EGR Valve Position Sensor
B 55 Throttle Body Assembly
B 56 Exhaust Gas Temperature Sensor (Front)
B 57 Exhaust Gas Temperature Sensor (Rear)
B 60 Fuel Pressure Sensor
B 61 Differential Pressure Sensor
B 62 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 63 Injector Driver (EDU)
B 64 Injector Driver (EDU)

C 2 Starter

B 4
Gray

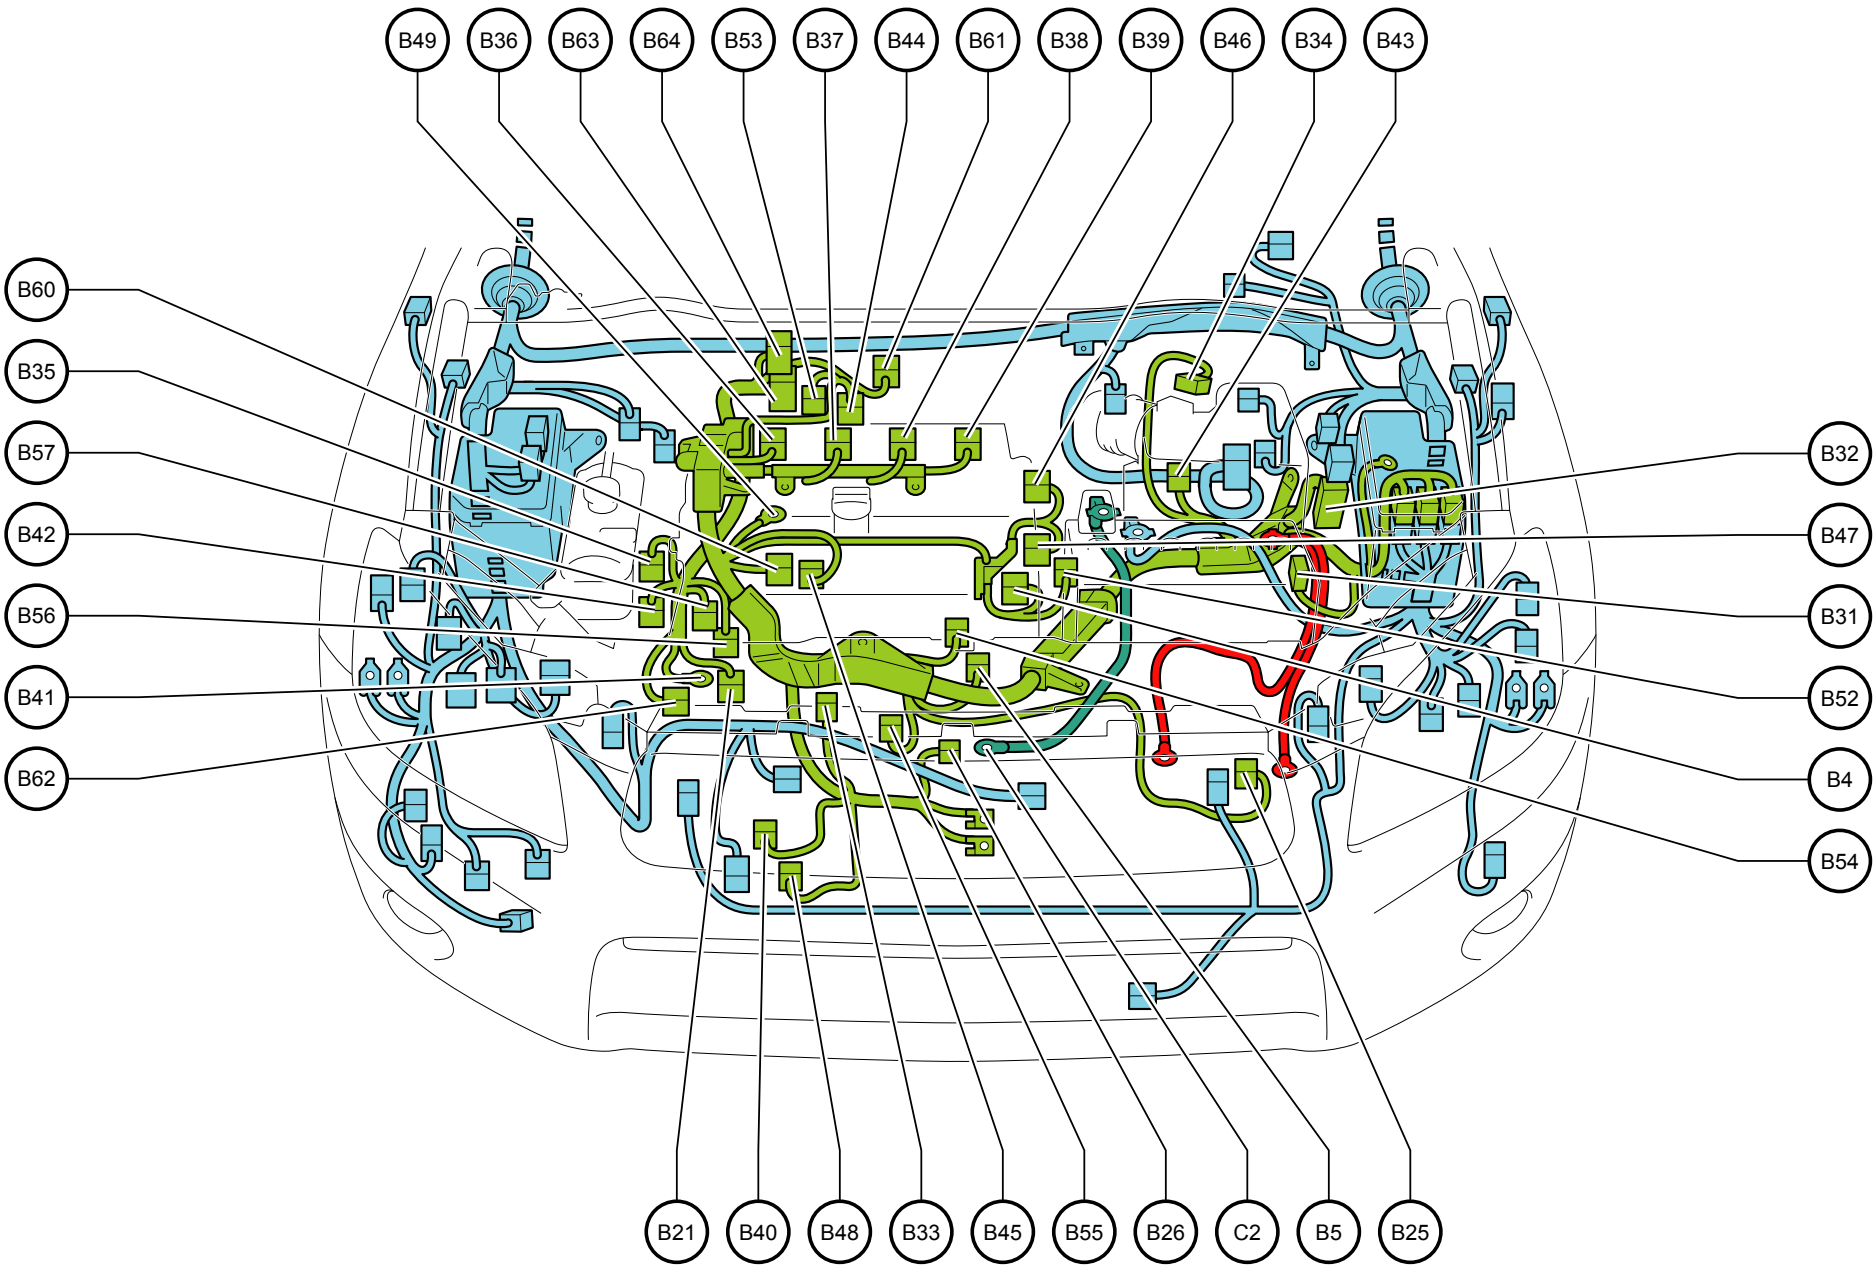


B 5
Gray



B 21
Black




B 25
Gray

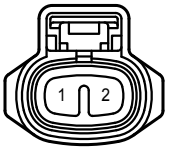


B 26
Black



B 31
Gray

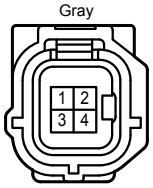


B 32
Black

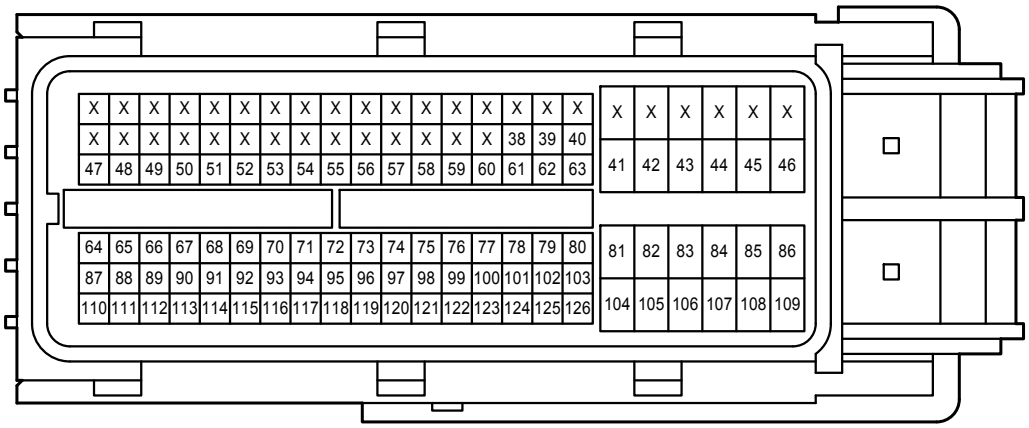

B 33
Black




B 34
Black

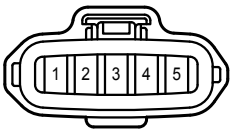

B 35
Black




B 36
Black




(2AD-FTV)

B 37
Gray

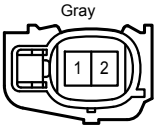


(2AD-FTV)

B 38
Black




(2AD-FTV)

B 39
Gray

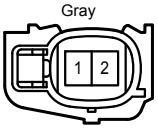


(2AD-FTV)

B 40
Black

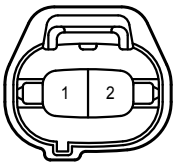

B 41




B 42
Gray




B 43
Gray



B 44
Black

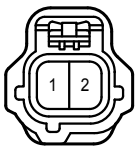

B 45
Black

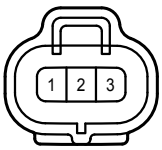


B 46
Gray




B 47
Gray



B 48
Gray

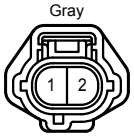


B 49




B 52
Black



B 53
Black

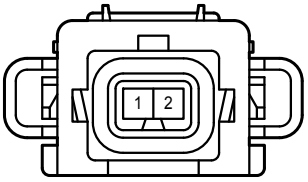

B 54
Black

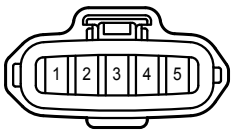

B 55
Black



B 56
Gray



B 57
Dark Gray




B 60
Black



(2AD-FTV)


B 61
Black

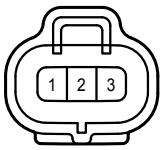


B 62
Dark Gray



B 63
Dark Gray

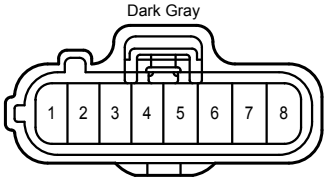

B 64
Black

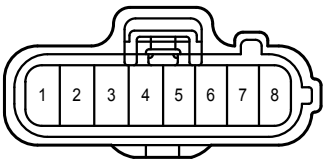

C 2

