



(*4)
(*4)
(*4)
E70
E93
E92
E73
E91
E77
E90
* 4:w/o Navigation System (Map Type)
E81
E85
E84
E86
E78
E83
E89
E72
E87
E71
E96
E94
E95
E82
E88

E 70 Air Inlet Control Servo Motor
E 71 Short Connector
E 72 Short Connector
E 73 Junction Connector
E 77 Junction Connector
E 78 Diode (Rear Wiper)
E 81 Turn Signal Flasher
E 82 Double Locking ECU
E 83 Theft Warning ECU
E 84 Junction Connector
E 85 Junction Connector
E 86 Junction Connector
E 87 Junction Connector
E 88 Junction Connector
E 89 Junction Connector
E 90 Radio Receiver Assembly
E 91 Radio Receiver Assembly
E 92 Radio Receiver Assembly
E 93 Diode (Heater)
E 94 Heated Oxygen Sensor (Bank 1 Sensor 2)
E 95 Steering Sensor
E 96 Traction Control Switch


E 70
Black

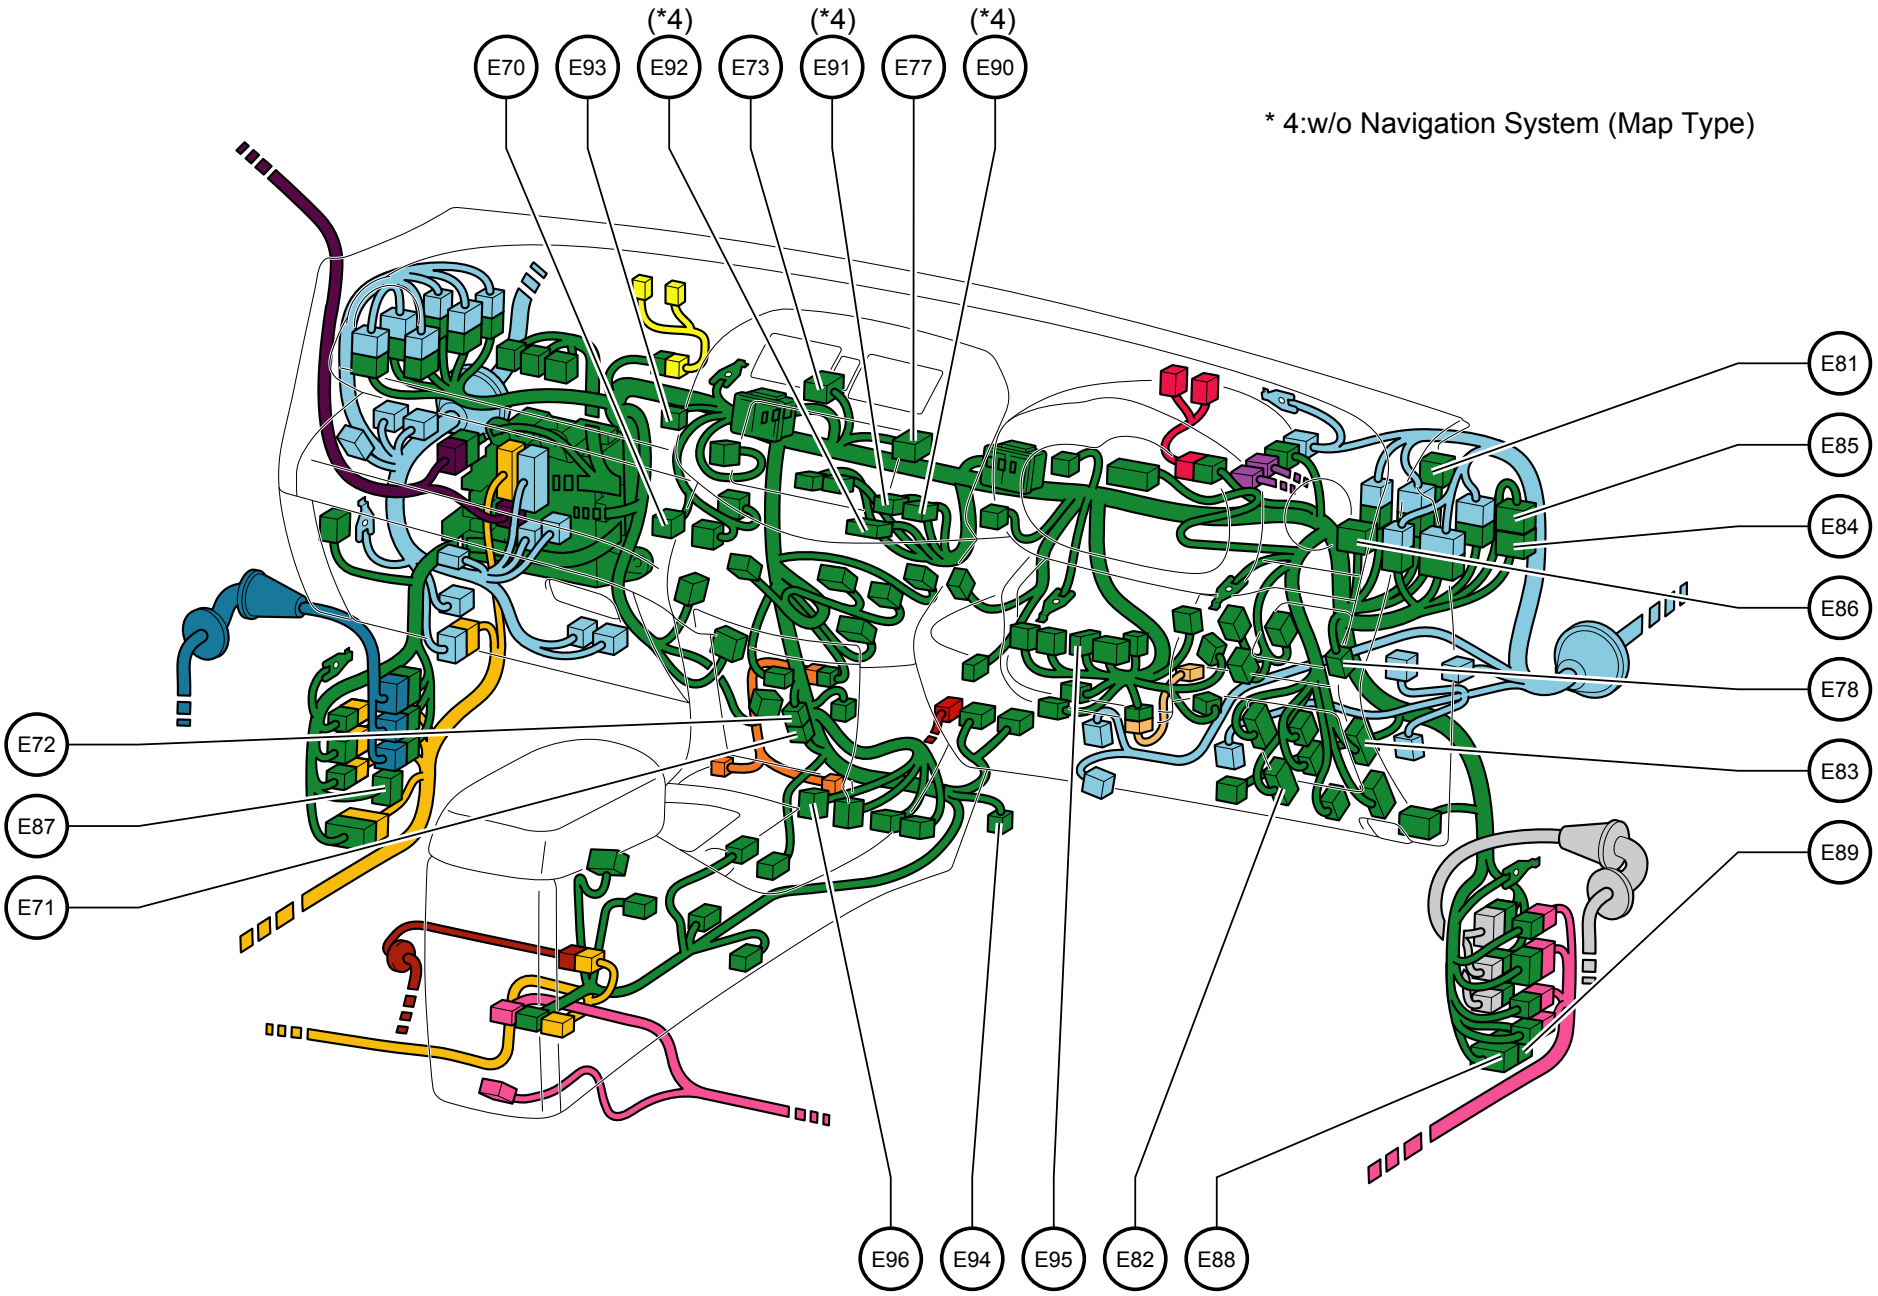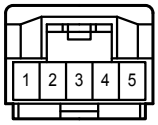


E 71
White

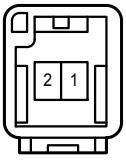


E 72
White



E 73
Black



E 77
Gray

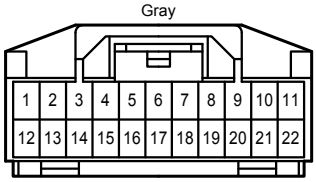


E 78
Black




E 81
Black




E 82
White




E 83
White

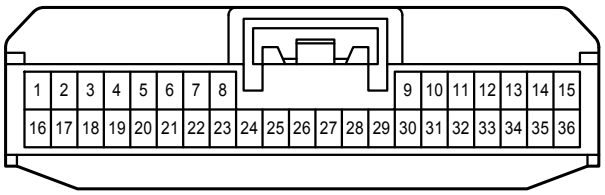


E 84
White

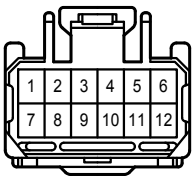


E 85
White

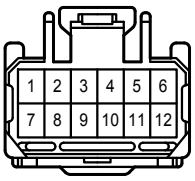


E 86
White




E 87
Gray

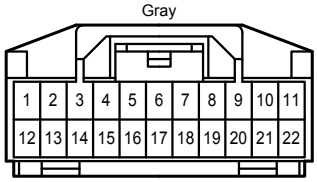


E 88
Blue

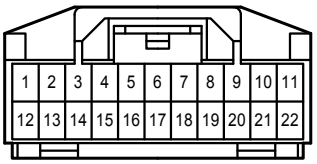

E 89
Blue

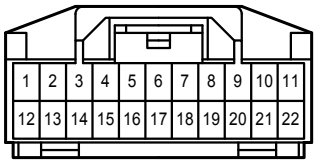


E 90
White

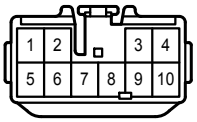

E 91
White



E 92
White

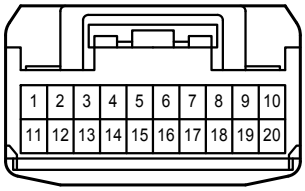


E 93
Black



E 94
Gray



E 95
White

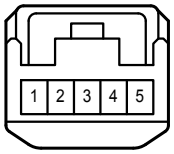

E 96
White

