




(BAT)
20A
RAD
NO. 1
(ACC)
7. 5A
ACC
J2
Speaker
(Rear LH)
I2
Speaker
(Rear RH)
E52(A), E53(B), E54(D), E56(C), E57(E)
Navigation Receiver Assembly
B
ACC
RL+
RL–
RR+
RR–
GND
FL+
FL–
FR+
FR–
SW1
SWG
SW2
TWL+
TWL–
TWR+
TWR–
H6
Tweeter (Front LH)
G7
Tweeter (Front RH)
H1
Speaker
(Front Door LH)
G1
Speaker
(Front Door RH)
AU1
EAU
AU2
Seek+
MODE
Seek–
Vol+
Vol–
Steering Pad SW
E10
Spiral Cable
E5

∗ 1 : w/ Audio SW in Steering Wheel
∗ 2 : RHD Short Body
∗ 3 : Except ∗2
∗ 4 : w/ Parking Assist (Rear View Monitor)
∗ 5 : Europe, Before Aug. 2008 Production Except Europe
∗ 6 : From Aug. 2008 Production Except Europe
∗ 9 : LHD From Aug. 2008 Production
∗10 : RHD, LHD Before Aug. 2008 Production

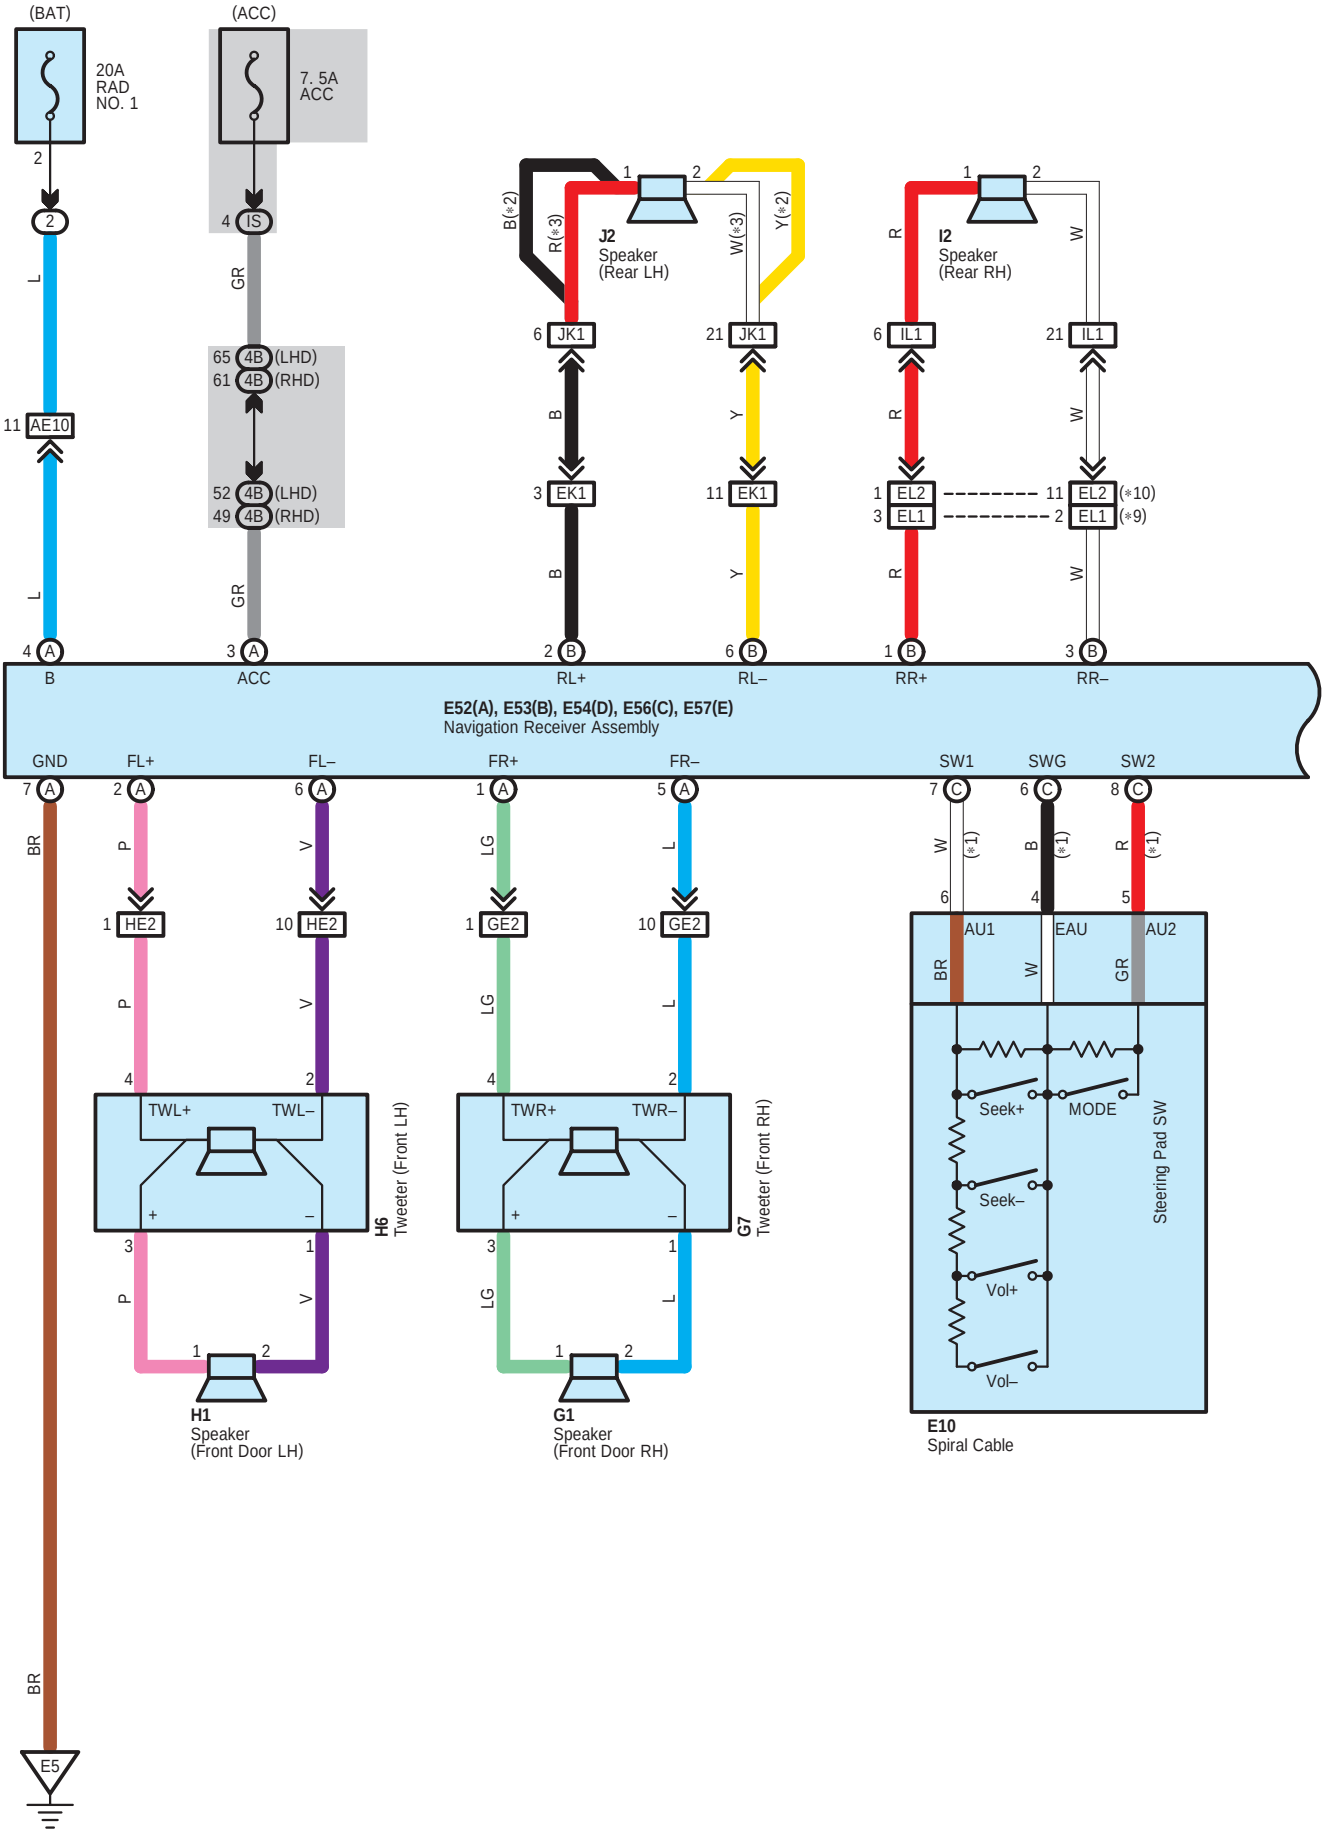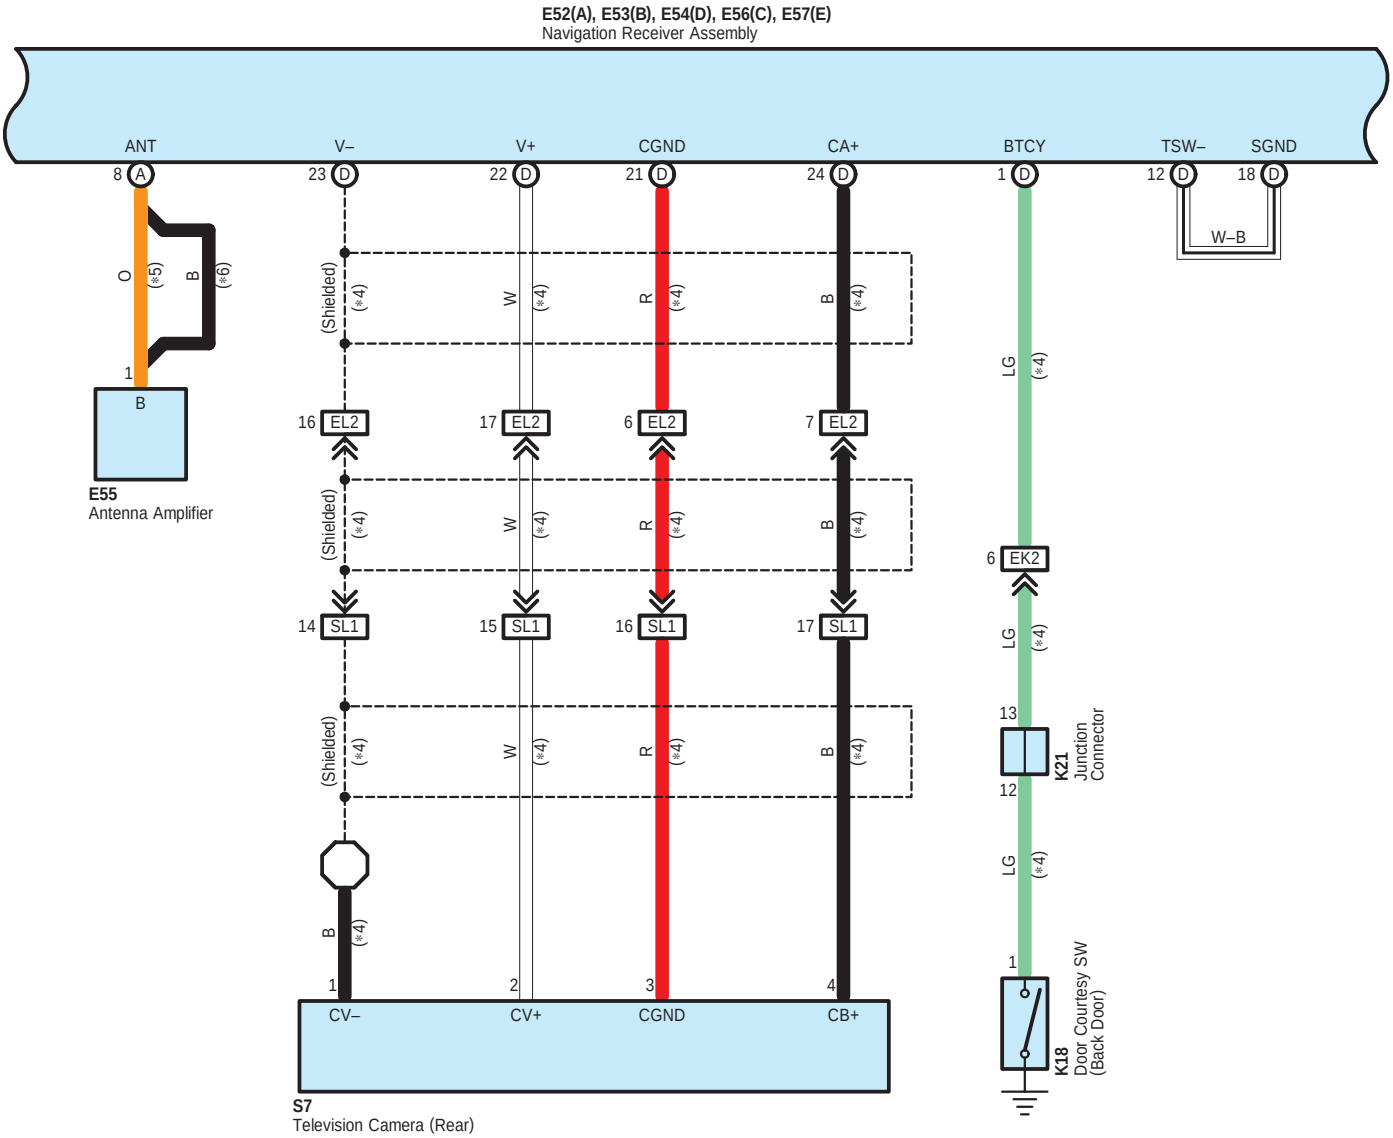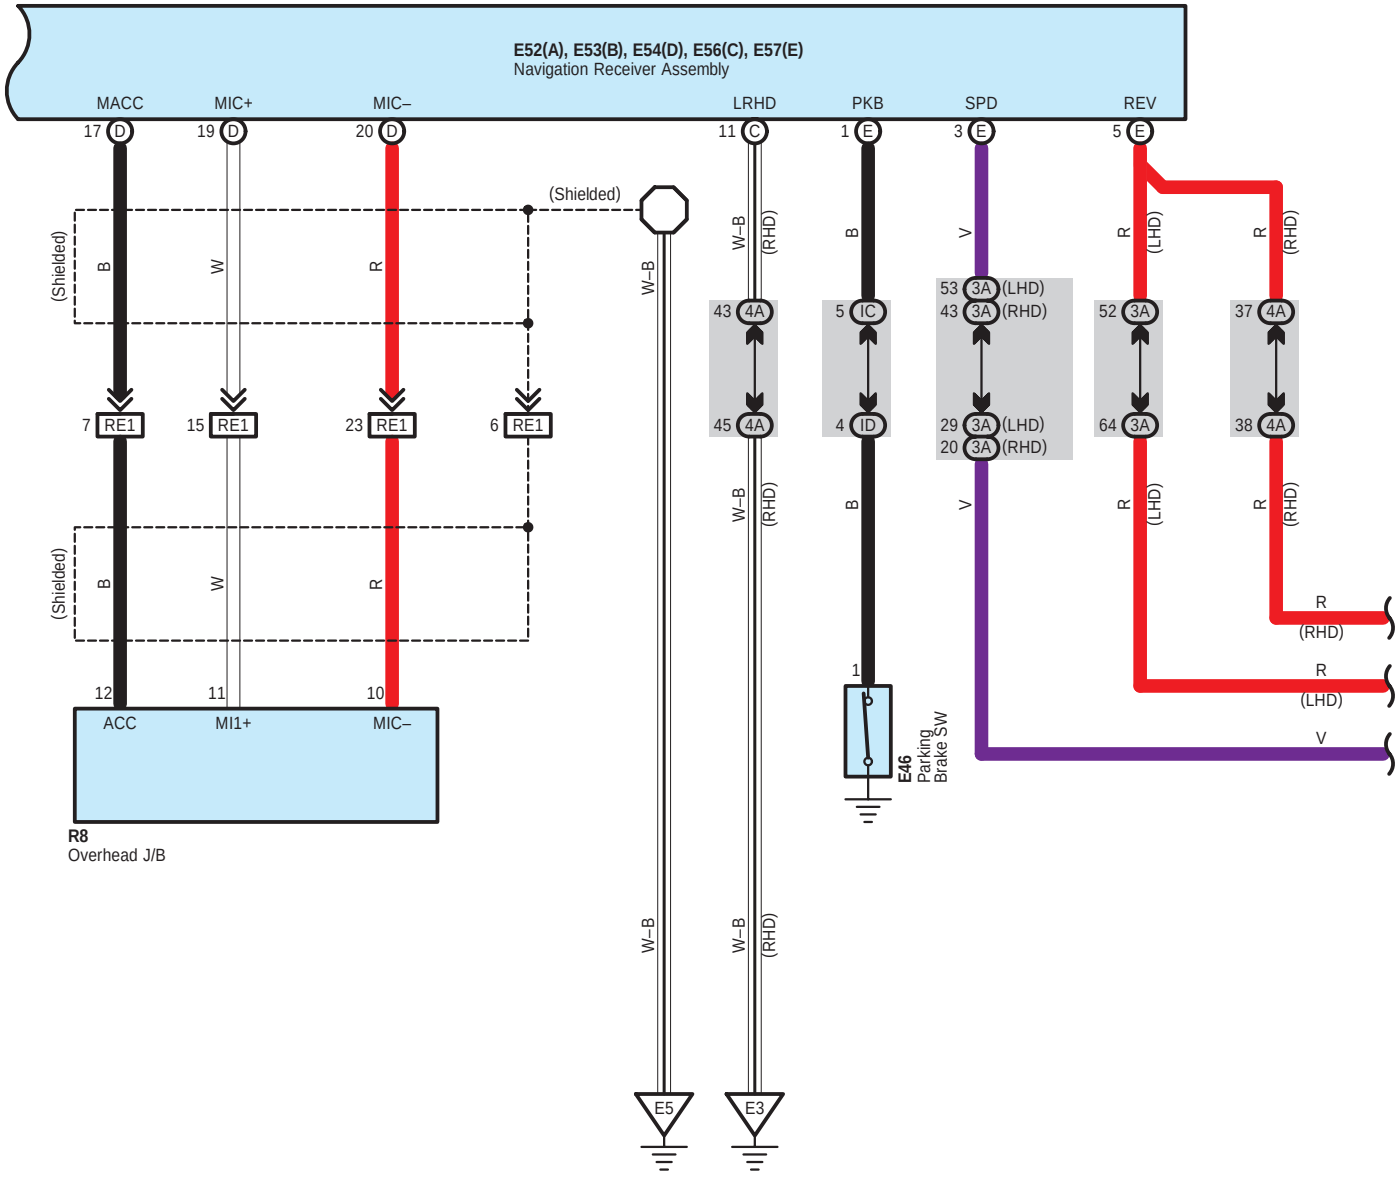


* 5 : Europe, Before Aug. 2008 Production Except Europe
* 6 : From Aug. 2008 Production Except Europe

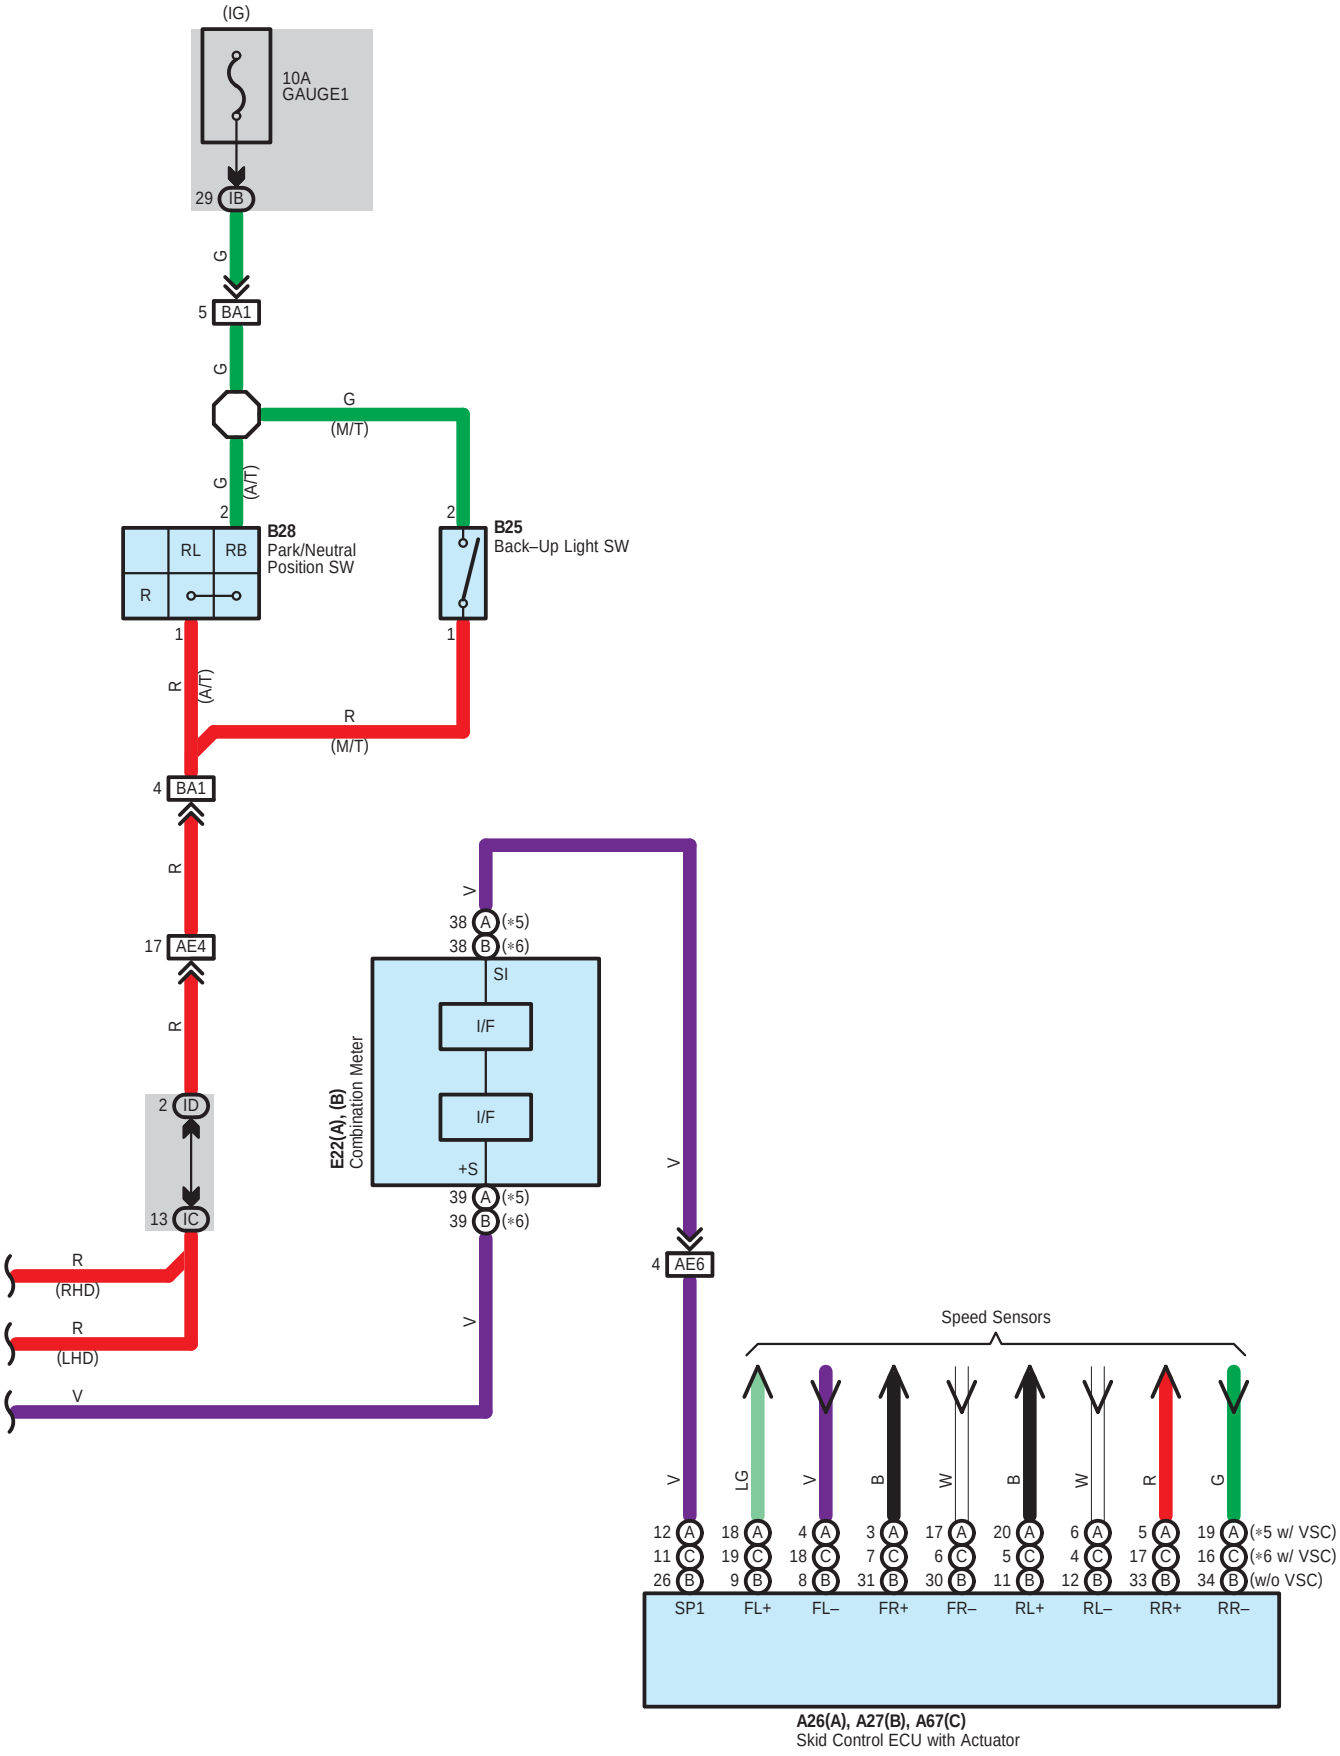



(IG)
10A
GAUGE1
29 IB
G
5 BA1
G
G
(M/T)
G
(A/T)
2
2
B28
Park/Neutral
Position SW
RL
RB
R
B25
Back–Up Light SW
1
1
R
(A/T)
R
(M/T)
4 BA1
R
17 AE4
R
2 ID
13 IC
R
(RHD)
R
(LHD)
V
V
38 A (*5)
38 B (*6)
SI
I/F
I/F
+S
39 A (*5)
39 B (*6)
E22(A), (B)
Combination Meter
V
V
4 AE6
Speed Sensors
V
LG
V
B
W
B
W
R
G
12 A
11 C
26 B
18 A
19 C
9 B
4 A
18 C
8 B
3 A
7 C
31 B
17 A
6 C
30 B
20 A
5 C
11 B
6 A
4 C
12 B
5 A
17 C
33 B
19 A
16 C
34 B
(*5 w/ VSC)
(*6 w/ VSC)
(w/o VSC)
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
A26(A), A27(B), A67(C)
Skid Control ECU with Actuator


A 26
Black

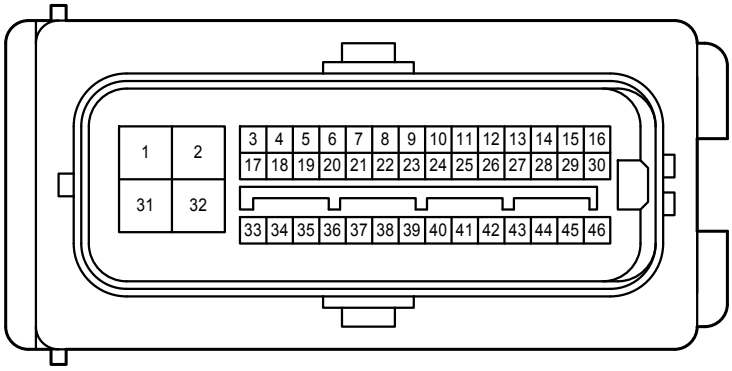


A 27
Black

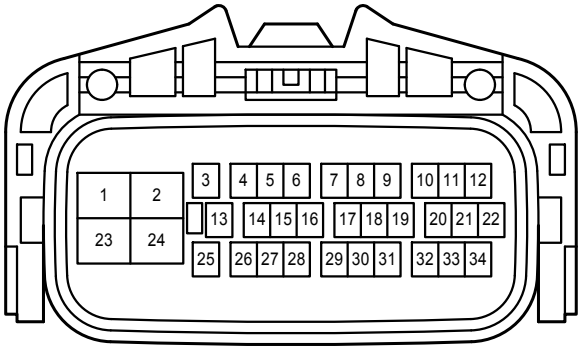


A 67
Black

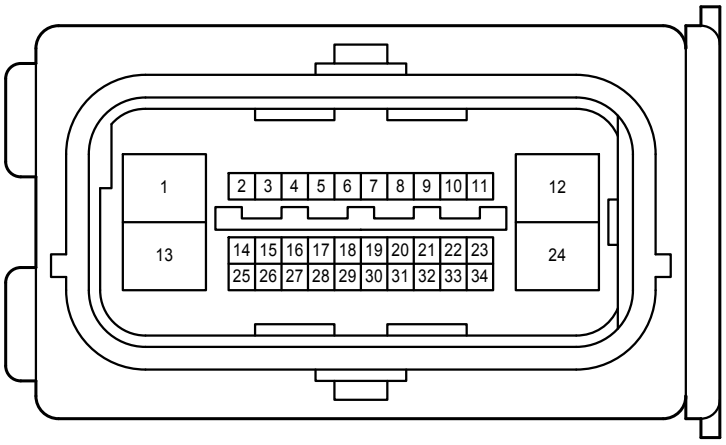

B 25
Gray

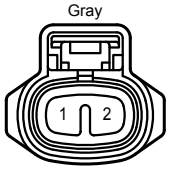


B 28
Gray

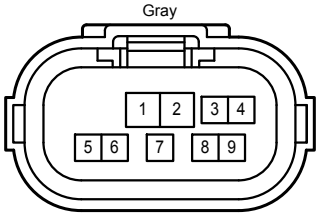

E 10
Black




E 22
White

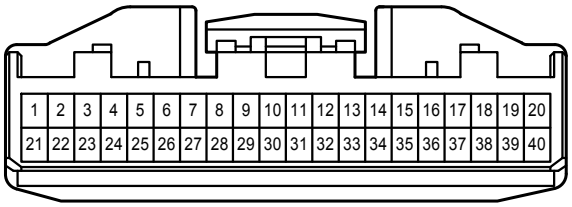

E 46
Black




E 52
White

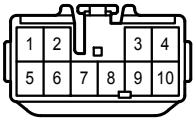

E 53
White




E 54
White

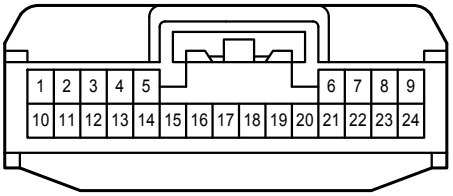


E 55
White



E 56
White

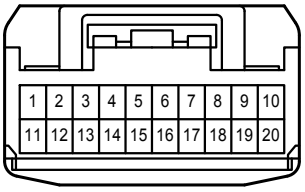


E 57
Gray

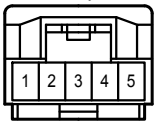

G 1
White




G 7
White



H 1
White



H 6
White



I 2
White




J 2
White




K 18
White




K 21
White

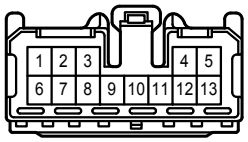


R 8
Black

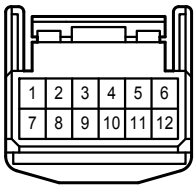


S 7
White

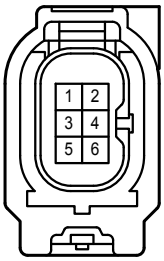


3A
White

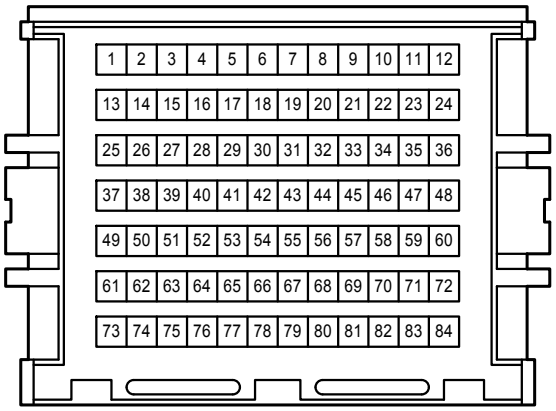


4A
White

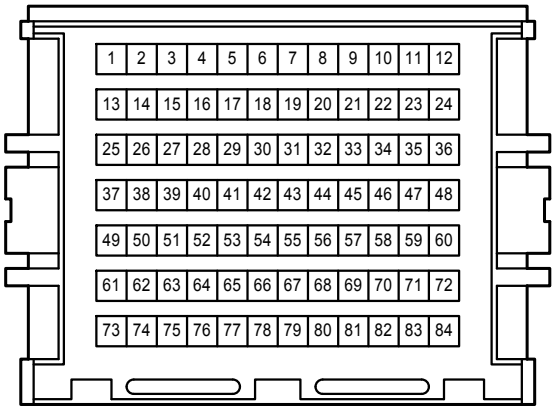


4B
White

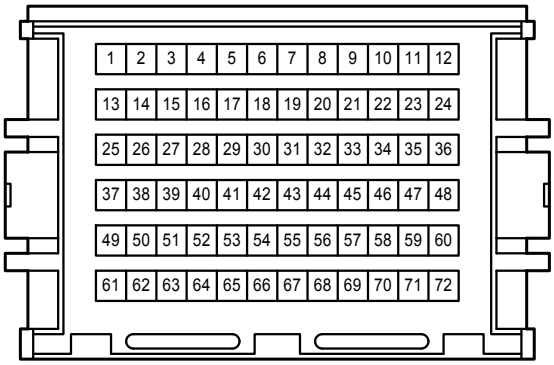


IB
White

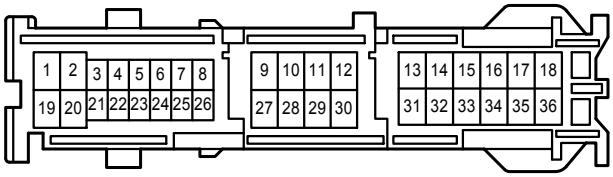


IC
White

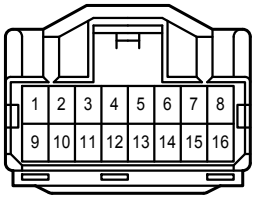


ID
White

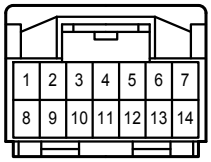


IS
White

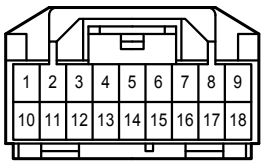


AE4
Gray

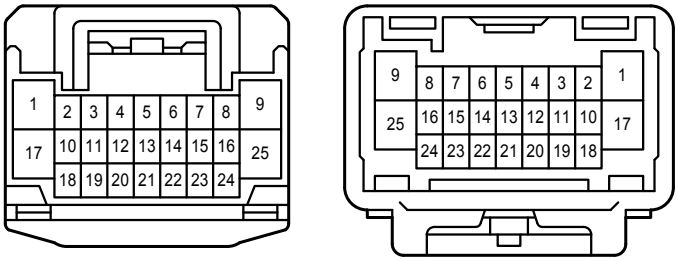


AE6
White

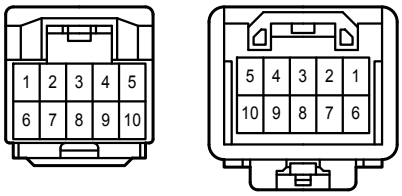


AE10
White

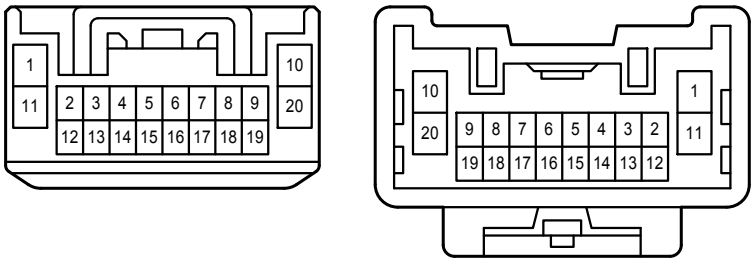


BA1
White

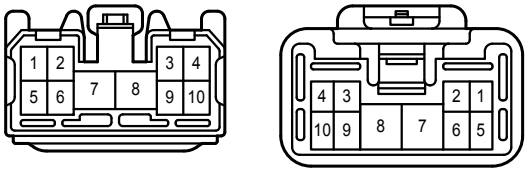


EK1
White

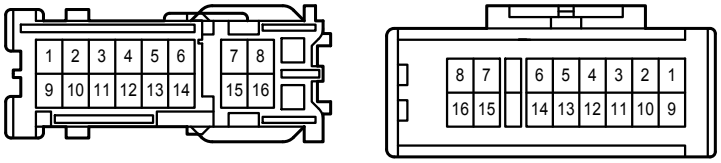


EK2
White

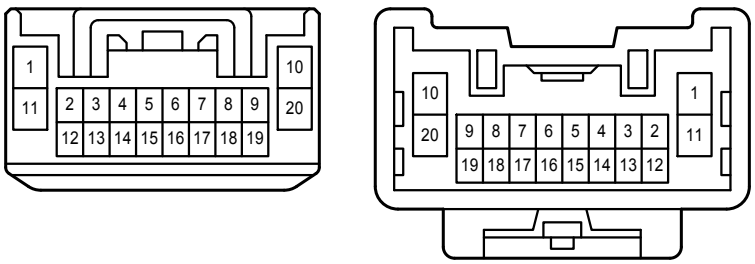


EL1
White

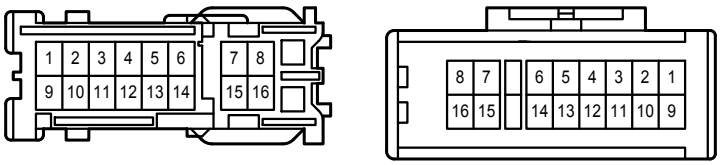


EL2
White

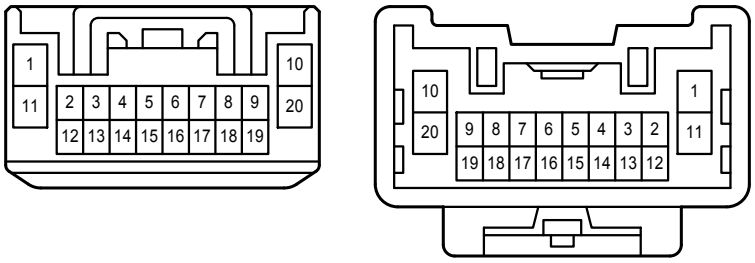


GE2
White

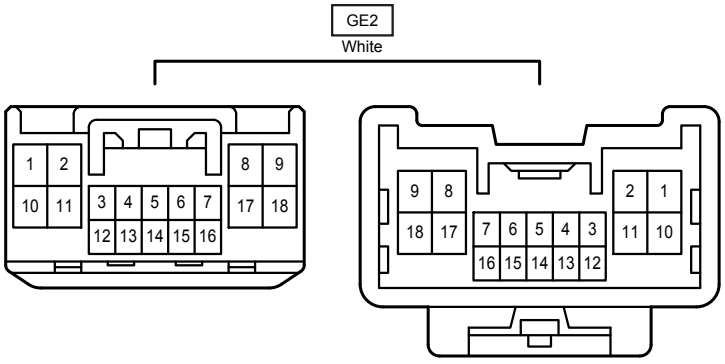


HE2
White

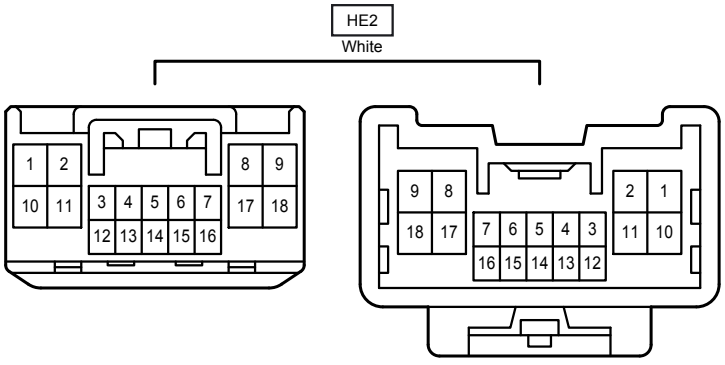


IL1
White

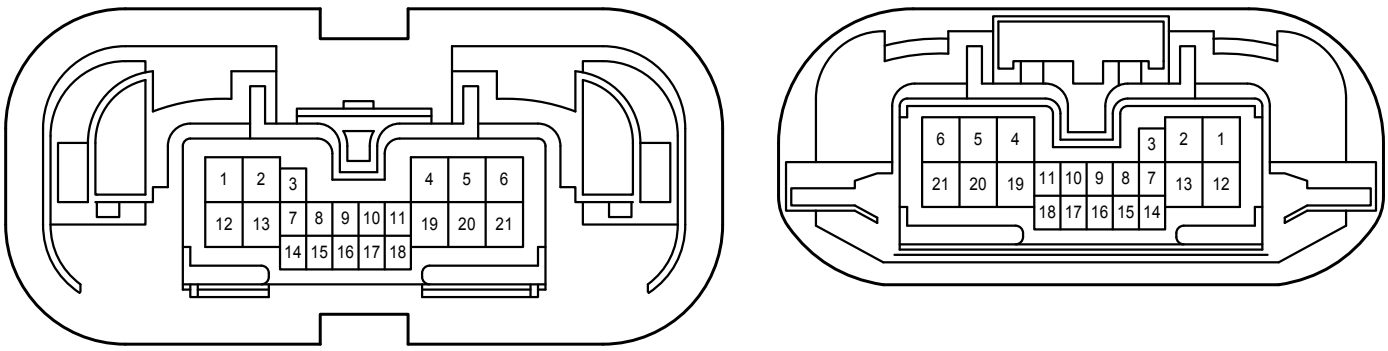

JK1
White

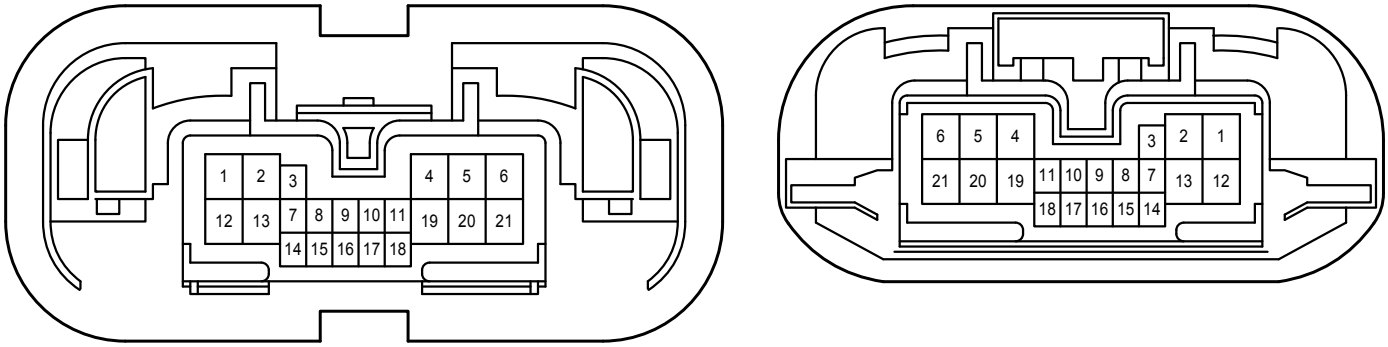

RE1
White

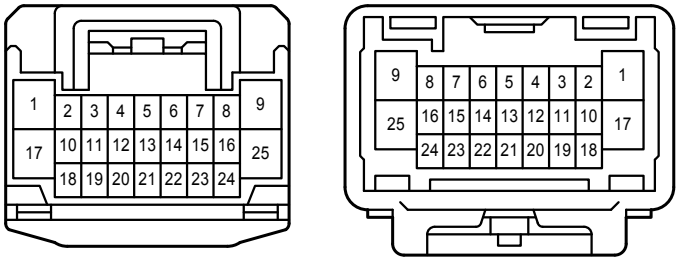

SL1
White

