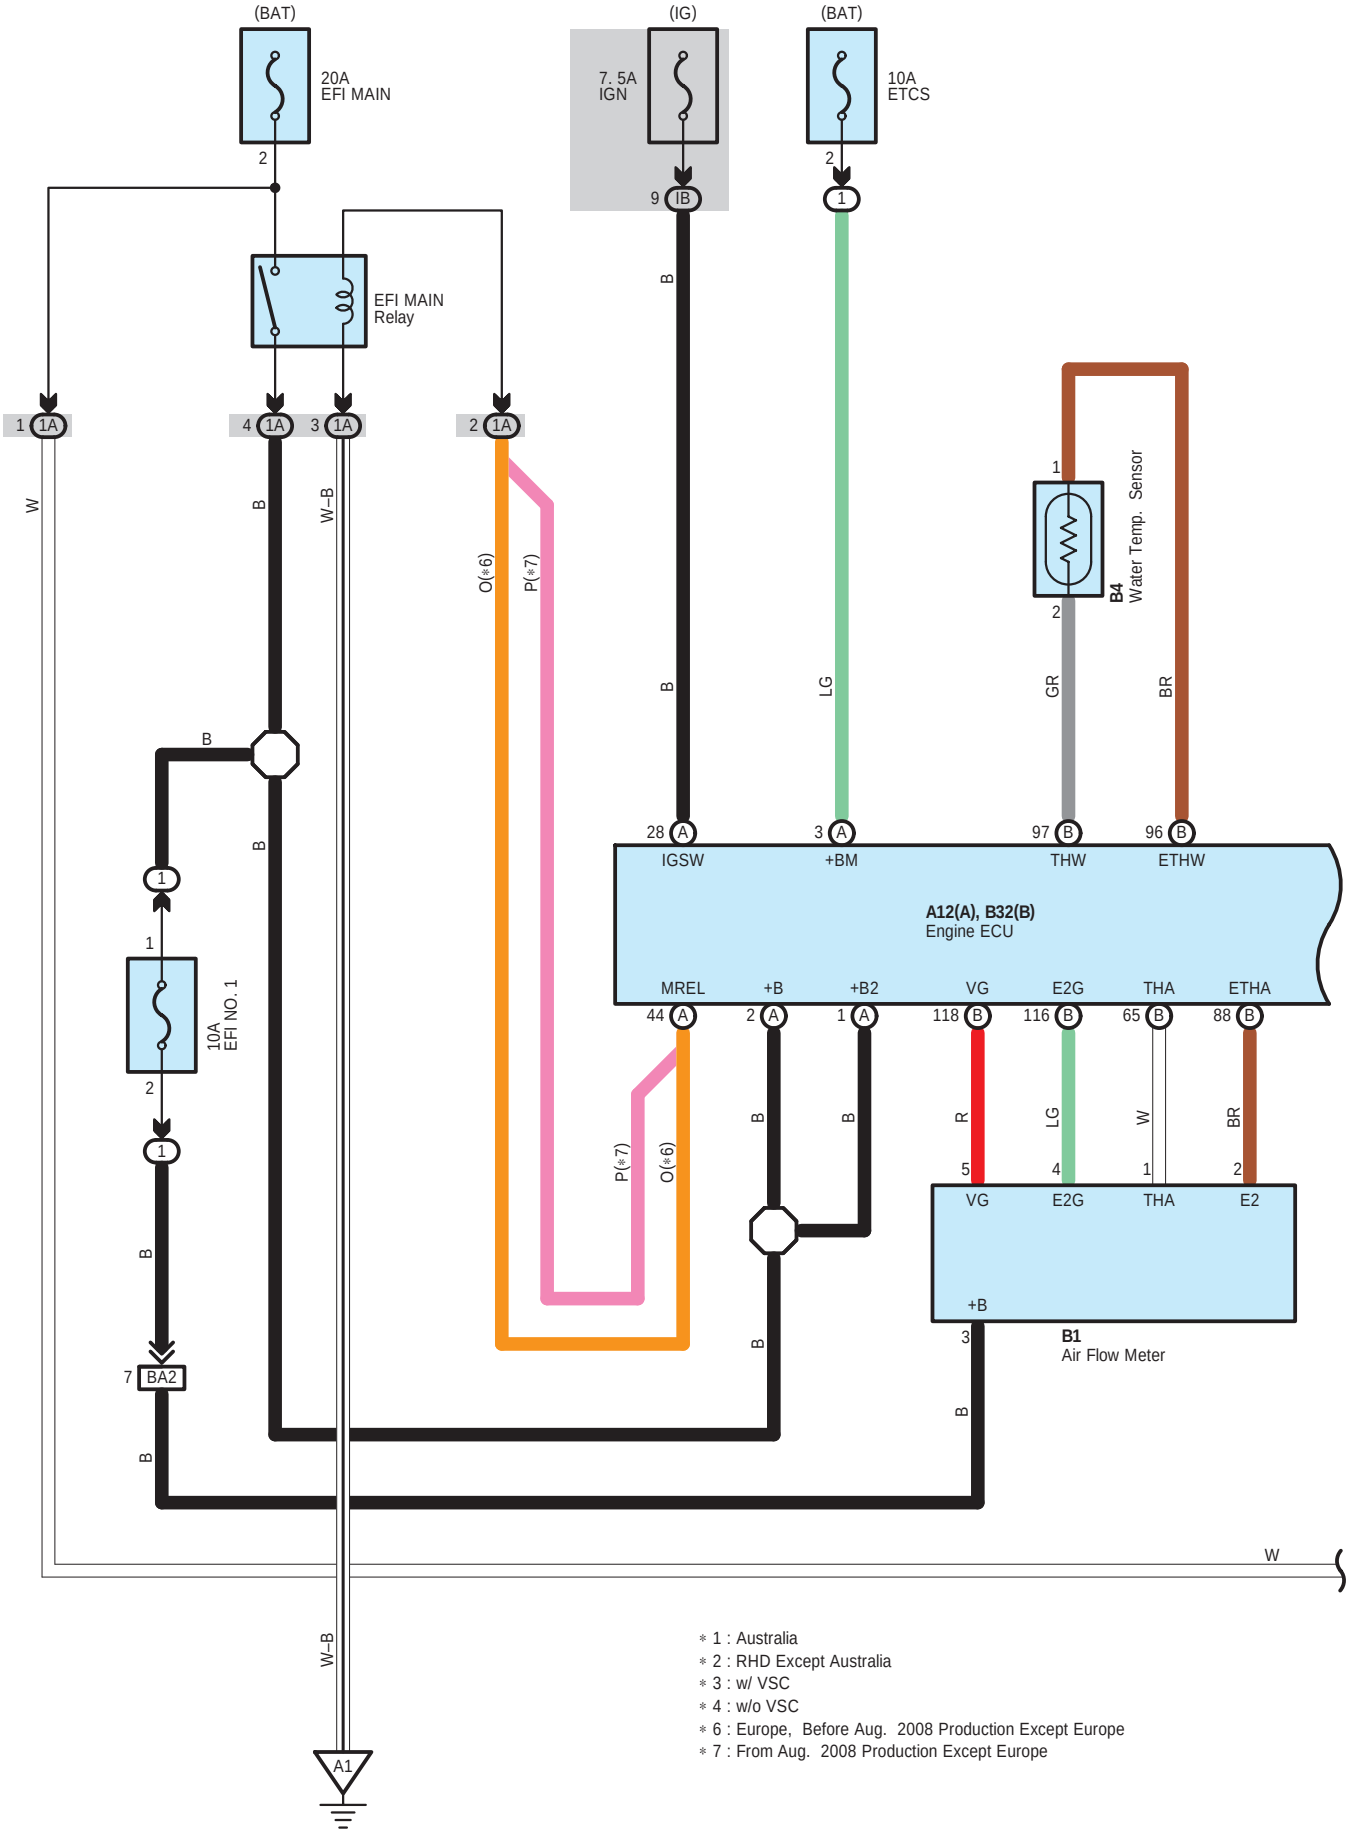
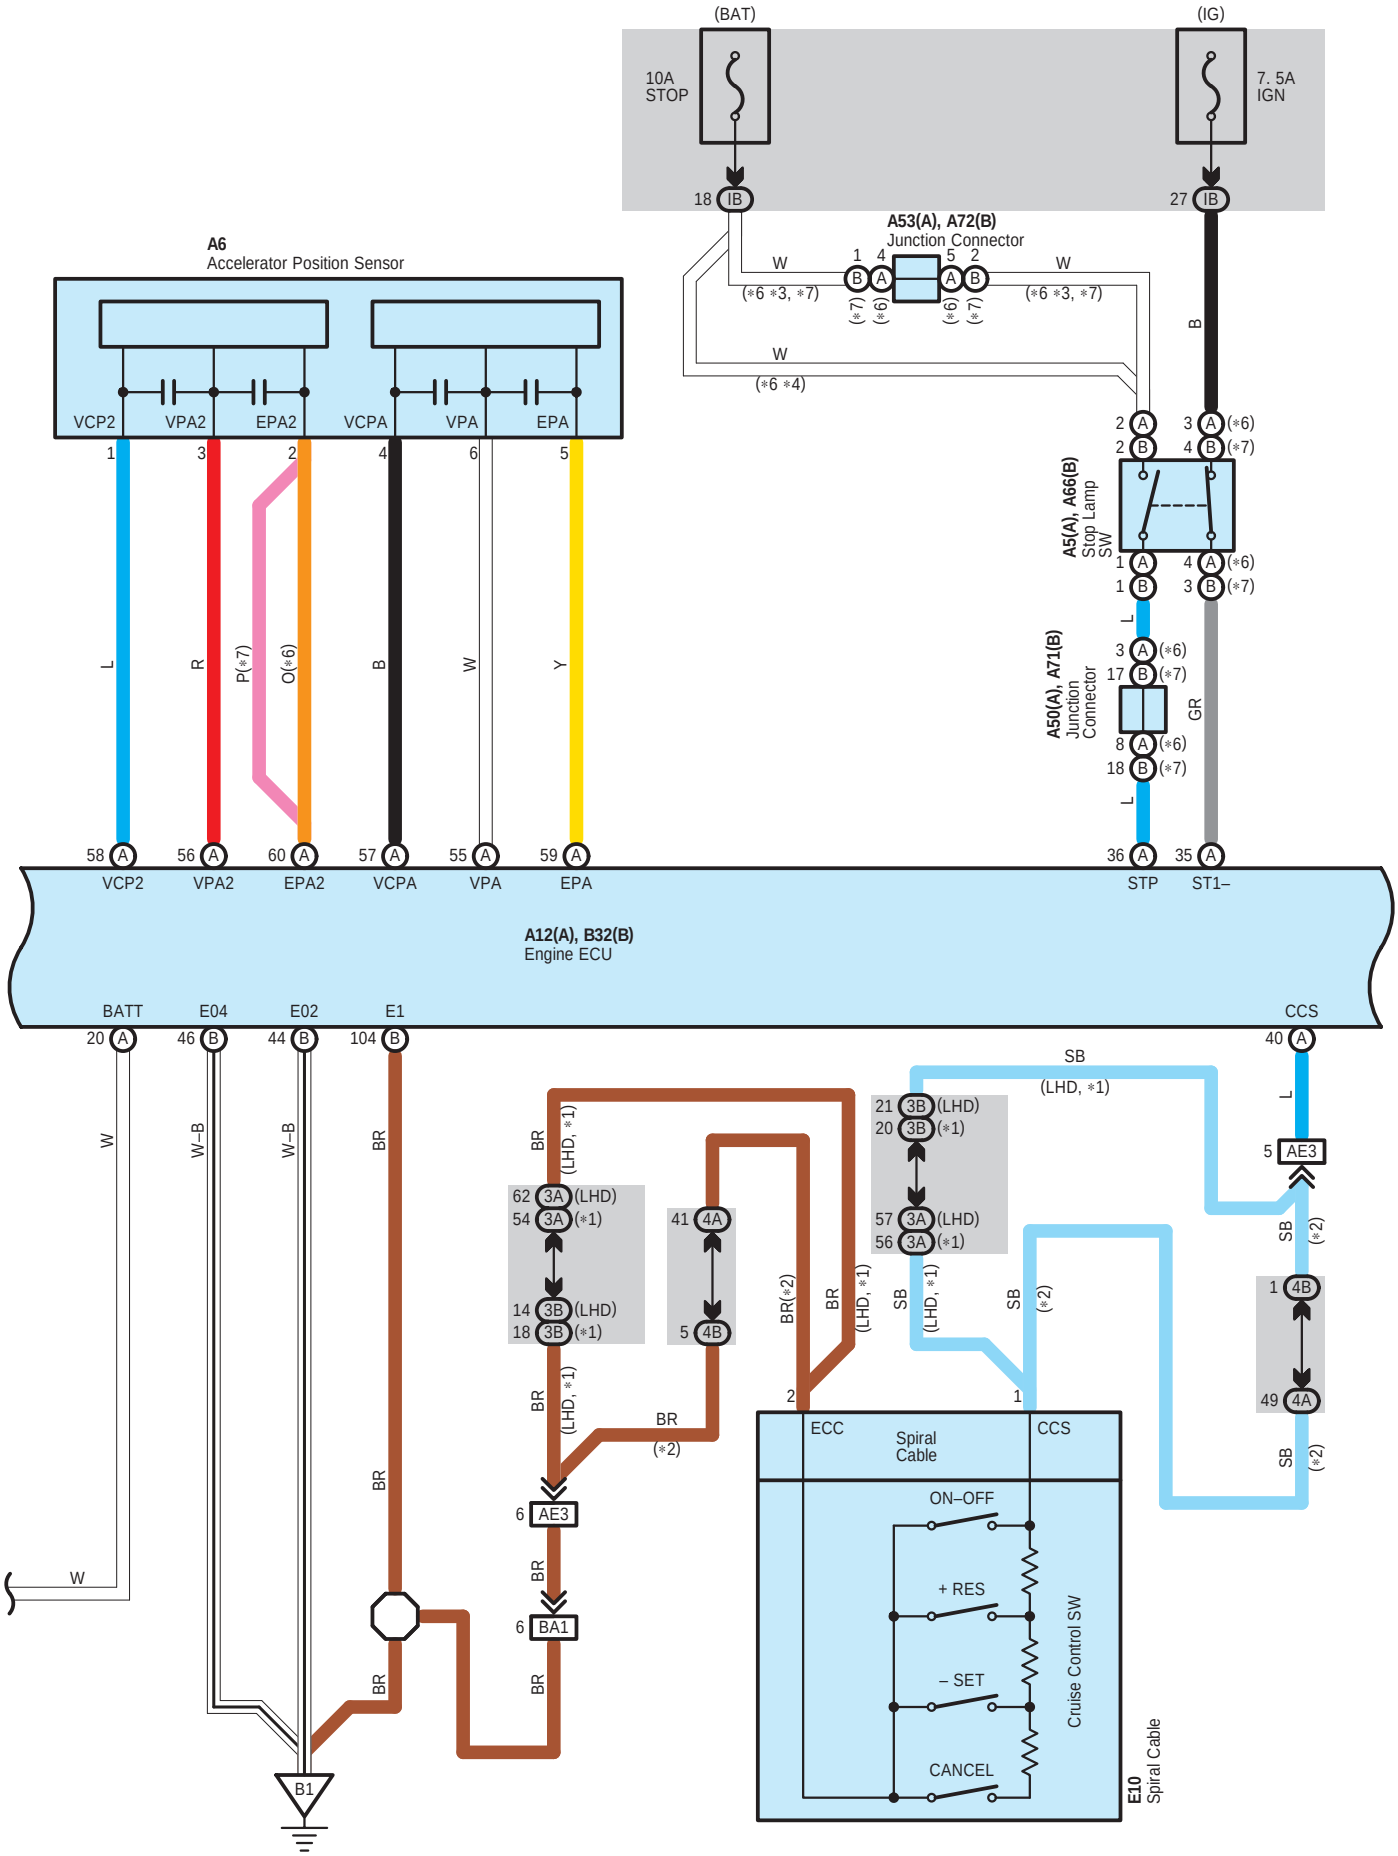
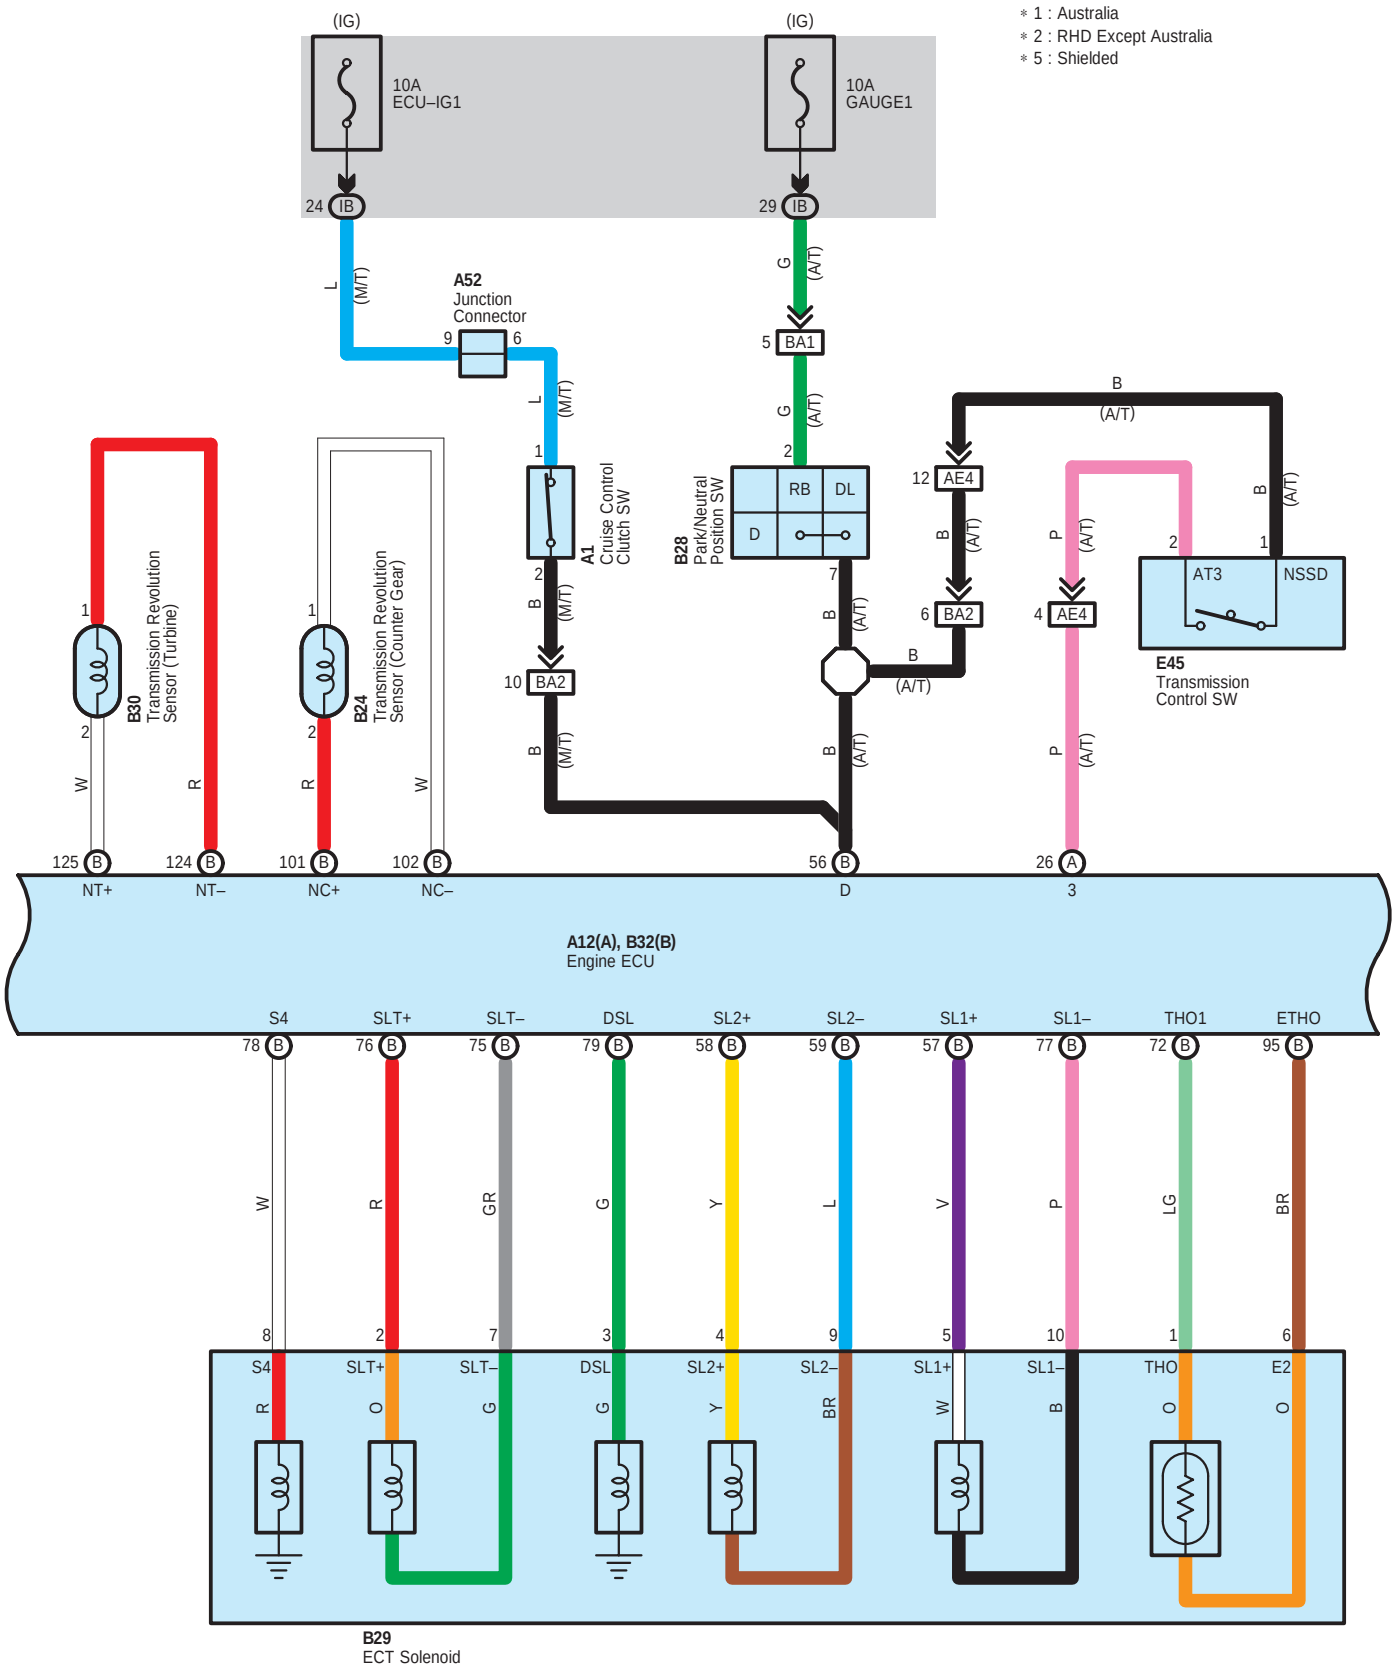
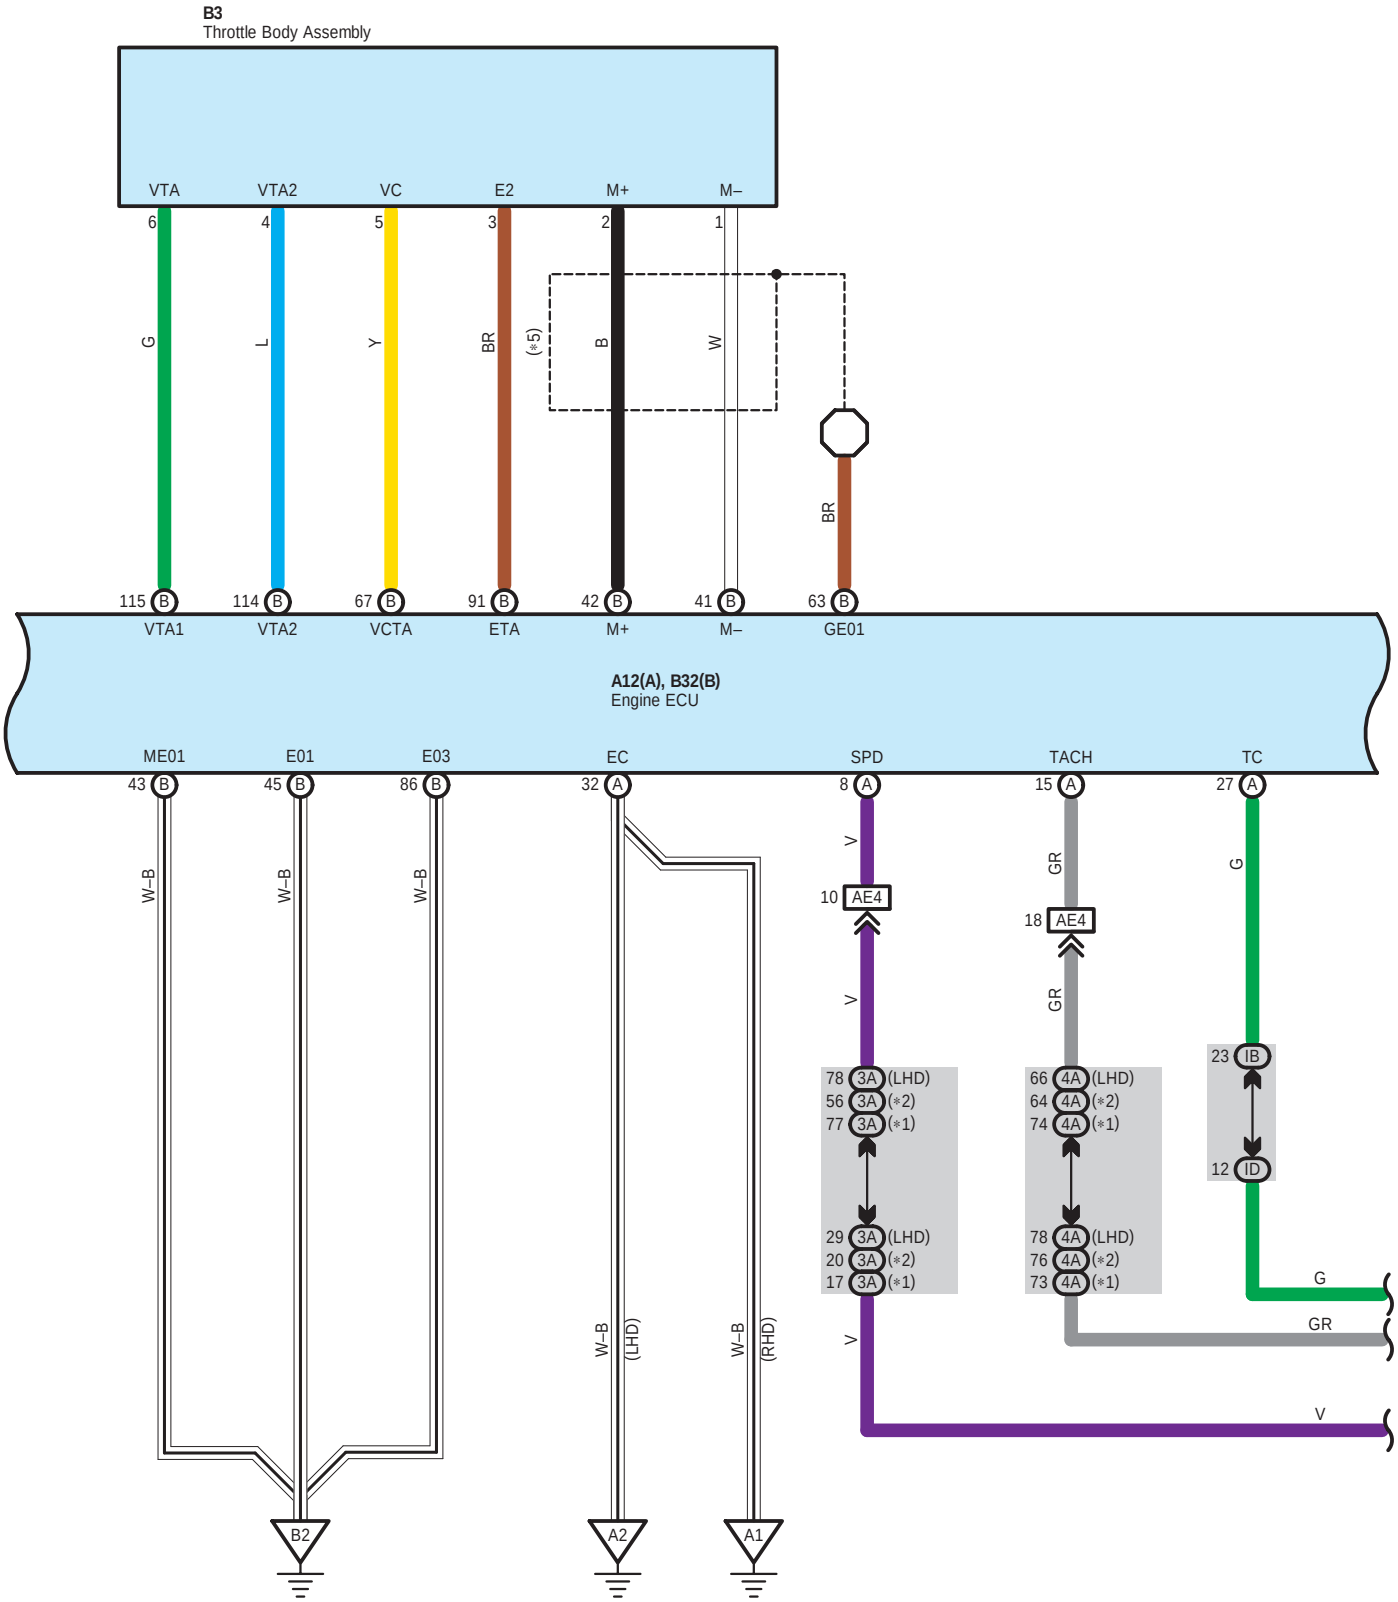
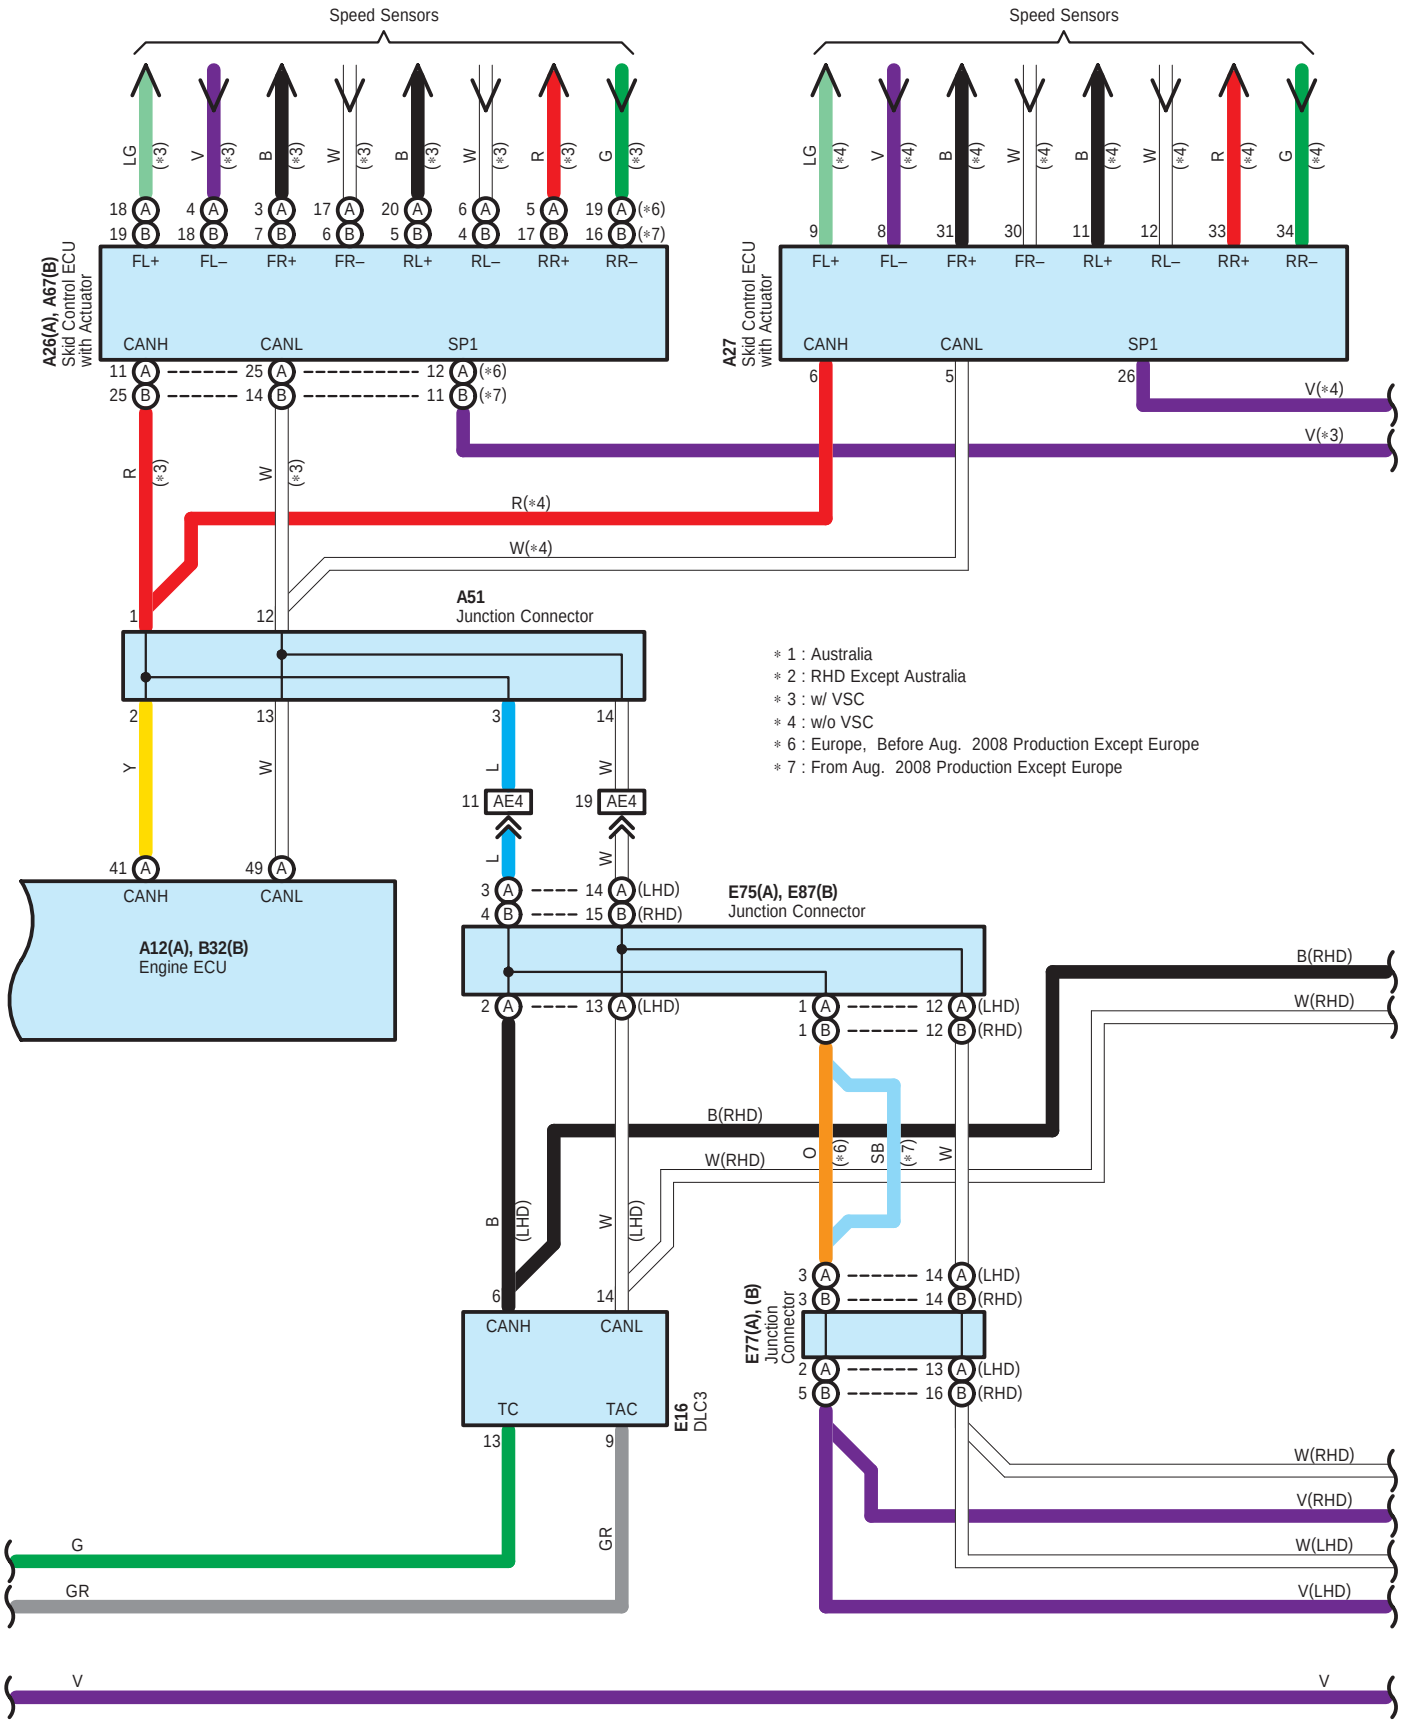



* 1 : Australia
* 2 : RHD Except Australia
* 3 : w/ VSC
* 4 : w/o VSC
* 6 : Europe, Before Aug. 2008 Production Except Europe
* 7 : From Aug. 2008 Production Except Europe


(BAT)
(IG)
10A
STOP
7. 5A
IGN
18 IB
27 IB
A53(A), A72(B)
Junction Connector
A6
Accelerator Position Sensor
VCP2
VPA2
EPA2
VCPA
VPA
EPA
A5(A), A66(B)
Stop Lamp
SW
A50(A), A71(B)
Junction
Connector
58 A
56 A
60 A
57 A
55 A
59 A
36 A
35 A
STP
ST1–
A12(A), B32(B)
Engine ECU
BATT
E04
E02
E1
CCS
20 A
46 B
44 B
104 B
40 A
AE3
BA1
B1
ECC
Spiral
Cable
CCS
ON–OFF
+ RES
– SET
CANCEL
Cruise Control SW
E10
Spiral Cable



* 1 : Australia
* 2 : RHD Except Australia
* 5 : Shielded
(IG)
10A
ECU–IG1
24 IB
(IG)
10A
GAUGE1
29 IB
L (M/T)
A52
Junction
Connector
9
6
L (M/T)
1
A1
Cruise Control
Clutch SW
2
B (M/T)
10 BA2
B (M/T)
G (A/T)
5 BA1
G (A/T)
2
B28
Park/Neutral
Position SW
RB
DL
D
7
B (A/T)
B
(A/T)
B
(A/T)
12 AE4
B (A/T)
6 BA2
B
(A/T)
P (A/T)
4 AE4
P (A/T)
2
1
AT3
NSSD
E45
Transmission
Control SW
1
B30
Transmission Revolution
Sensor (Turbine)
2
W
R
125 B
124 B
NT+
NT–
1
B24
Transmission Revolution
Sensor (Counter Gear)
2
R
W
101 B
102 B
NC+
NC–
56 B
D
26 A
3
A12(A), B32(B)
Engine ECU
S4
SLT+
SLT–
DSL
SL2+
SL2–
SL1+
SL1–
THO1
ETHO
78 B
76 B
75 B
79 B
58 B
59 B
57 B
77 B
72 B
95 B
W
R
GR
G
Y
L
V
P
LG
BR
8
2
7
3
4
9
5
10
1
6
S4
SLT+
SLT–
DSL
SL2+
SL2–
SL1+
SL1–
THO
E2
R
O
G
G
Y
BR
W
B
O
O
B29
ECT Solenoid


B3
Throttle Body Assembly
VTA
VTA2
VC
E2
M+
M–
6
4
5
3
2
1
G
L
Y
BR
(*5)
B
W
BR
115 B
114 B
67 B
91 B
42 B
41 B
63 B
VTA1
VTA2
VCTA
ETA
M+
M–
GE01
A12(A), B32(B)
Engine ECU
ME01
E01
E03
EC
SPD
TACH
TC
43 B
45 B
86 B
32 A
8 A
15 A
27 A
W–B
W–B
W–B
V
GR
G
10 AE4
18 AE4
V
GR
78 3A (LHD)
56 3A (*2)
77 3A (*1)
66 4A (LHD)
64 4A (*2)
74 4A (*1)
23 IB
12 ID
29 3A (LHD)
20 3A (*2)
17 3A (*1)
78 4A (LHD)
76 4A (*2)
73 4A (*1)
G
GR
V
V
W–B (LHD)
W–B (RHD)
B2
A2
A1



Speed Sensors
Speed Sensors
A26(A), A67(B)
Skid Control ECU
with Actuator
A27
Skid Control ECU
with Actuator
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
CANH
CANL
SP1
A51
Junction Connector
A12(A), B32(B)
Engine ECU
E75(A), E87(B)
Junction Connector
E77(A), (B)
Junction Connector
E16
DLC3
TC
TAC
AE4
(LHD)
(RHD)
B(RHD)
W(RHD)
R(*4)
W(*4)
V(*4)
V(*3)
G
GR
V
W(LHD)
V(LHD)
* 1 : Australia
* 2 : RHD Except Australia
* 3 : w/ VSC
* 4 : w/o VSC
* 6 : Europe, Before Aug. 2008 Production Except Europe
* 7 : From Aug. 2008 Production Except Europe

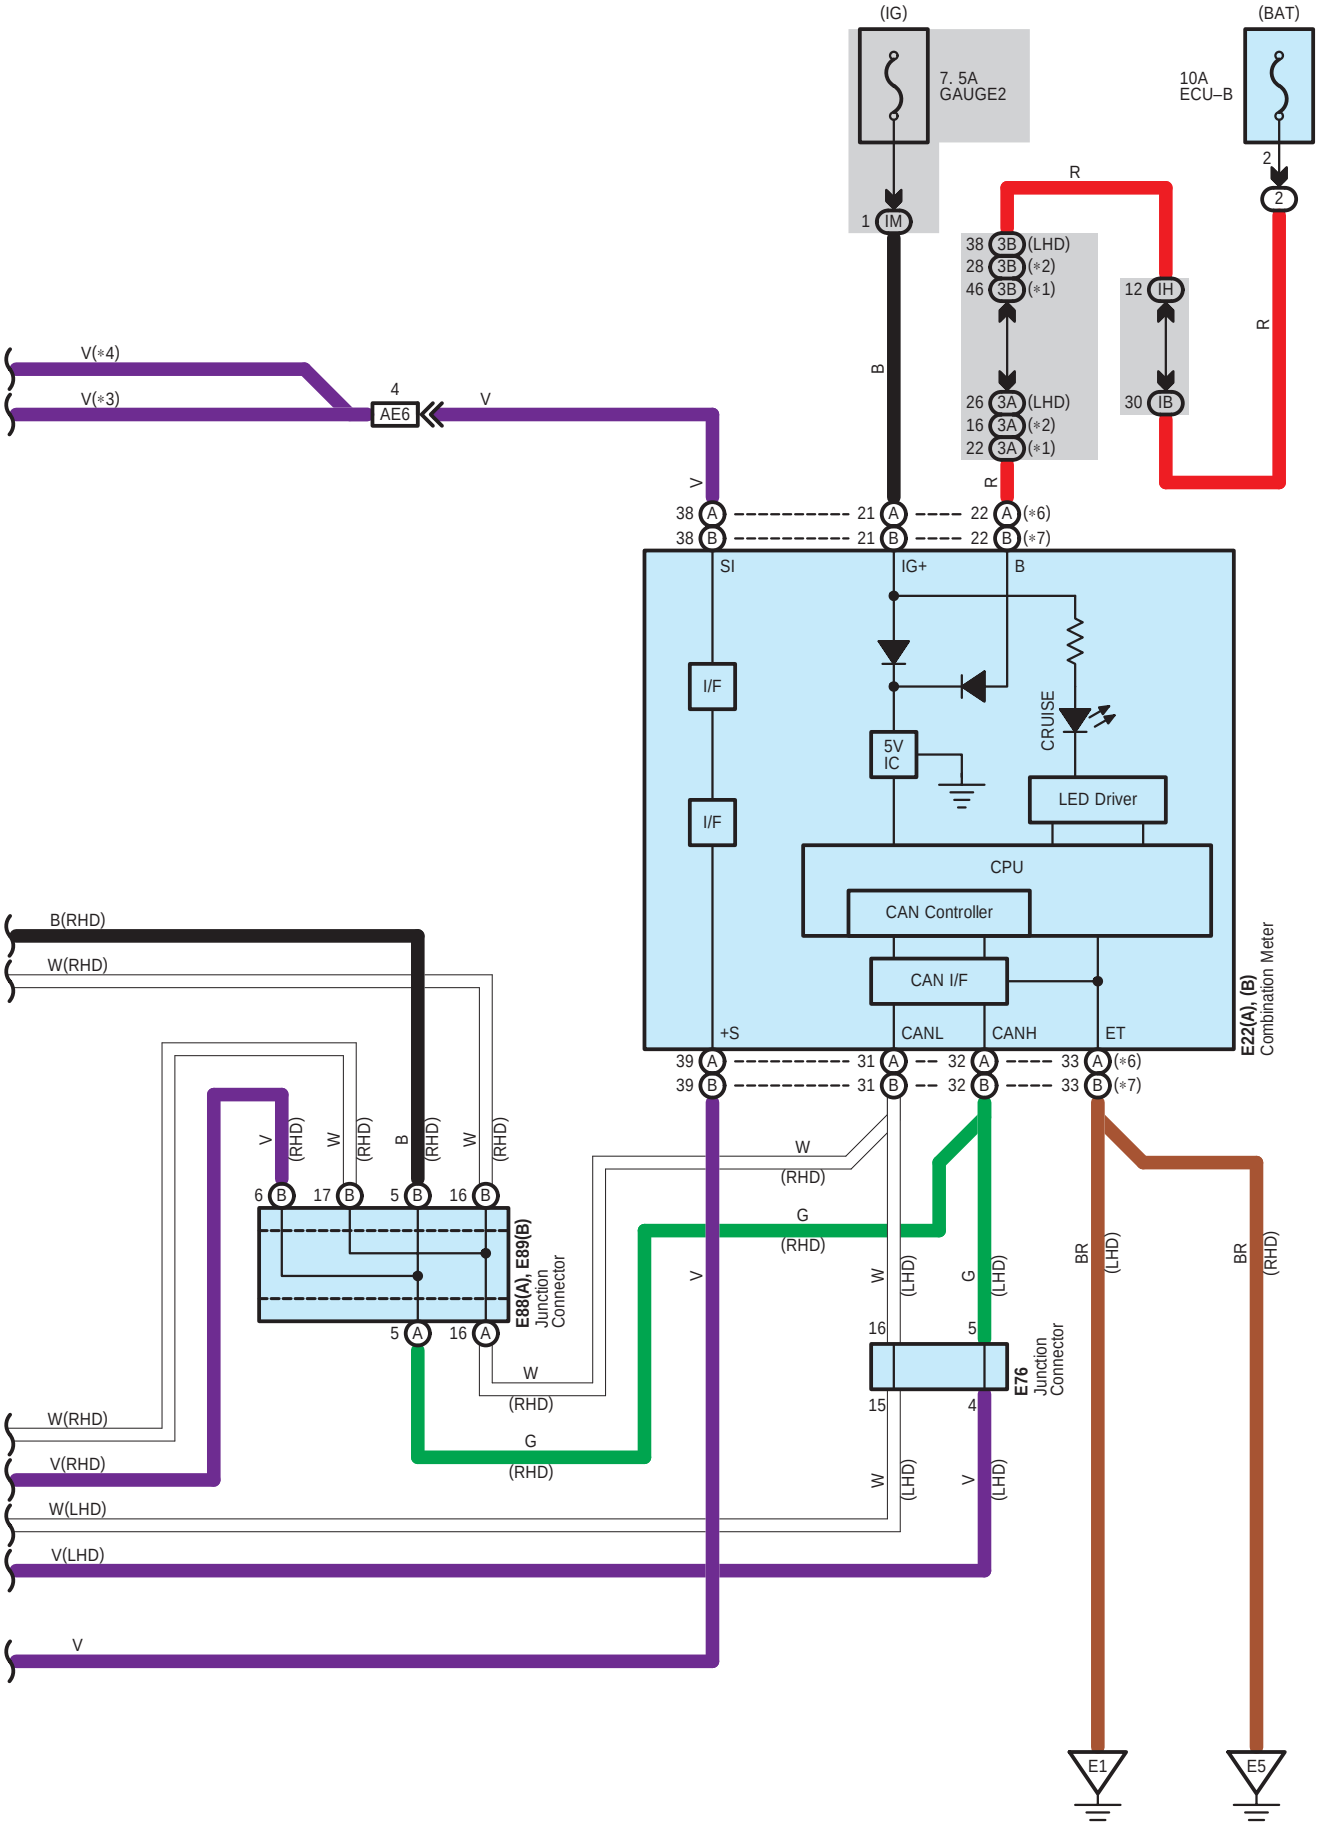
(IG)
7. 5A
GAUGE2
(BAT)
10A
ECU–B
1 IM
2
R
38 3B (LHD)
28 3B (*2)
46 3B (*1)
12 IH
30 IB
26 3A (LHD)
16 3A (*2)
22 3A (*1)
B
R
V(*4)
V(*3)
4
AE6
V
38 A
38 B
21 A
21 B
22 A (*6)
22 B (*7)
SI
IG+
B
I/F
I/F
5V
IC
CRUISE
LED Driver
CPU
CAN Controller
CAN I/F
+S
CANL
CANH
ET
39 A
39 B
31 A
31 B
32 A
32 B
33 A (*6)
33 B (*7)
E22(A), (B)
Combination Meter
B(RHD)
W(RHD)
V
(RHD)
W
(RHD)
B
(RHD)
W
(RHD)
6 B
17 B
5 B
16 B
5 A
16 A
E88(A), E89(B)
Junction
Connector
W
(RHD)
G
(RHD)
W
(LHD)
G
(LHD)
16
5
15
4
E76
Junction
Connector
BR
(LHD)
BR
(RHD)
W(RHD)
V(RHD)
W(LHD)
V(LHD)
V
E1
E5


A 1
White




A 5
Black

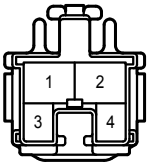


A 6
Black

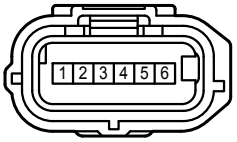


A 12
Black

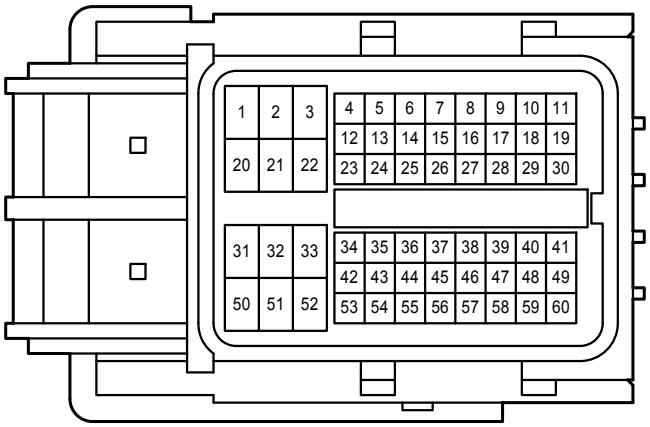


A 26
Black

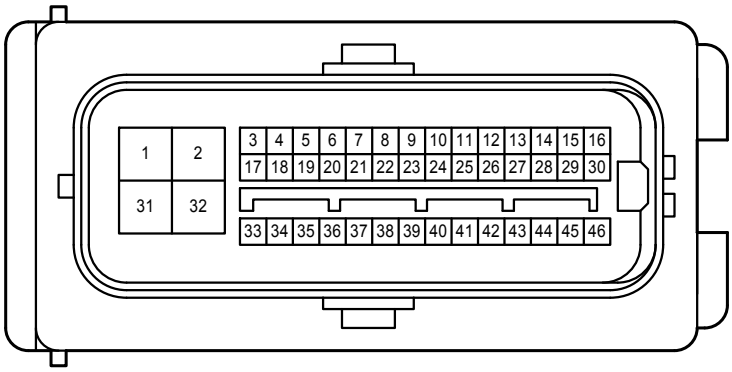


A 27
Black

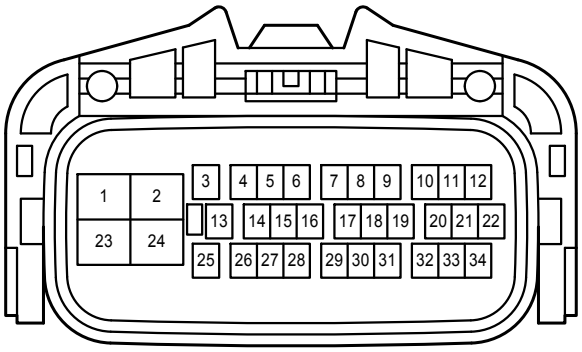


A 50
White

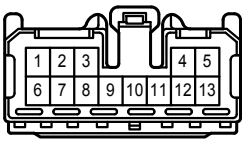


A 51
Gray

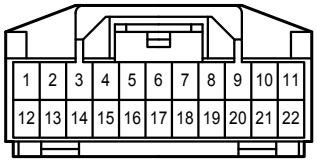


A 52
Gray

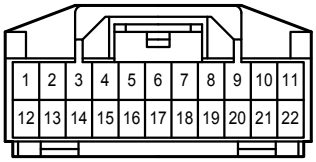


A 53
Black




A 66
White




A 67
Black

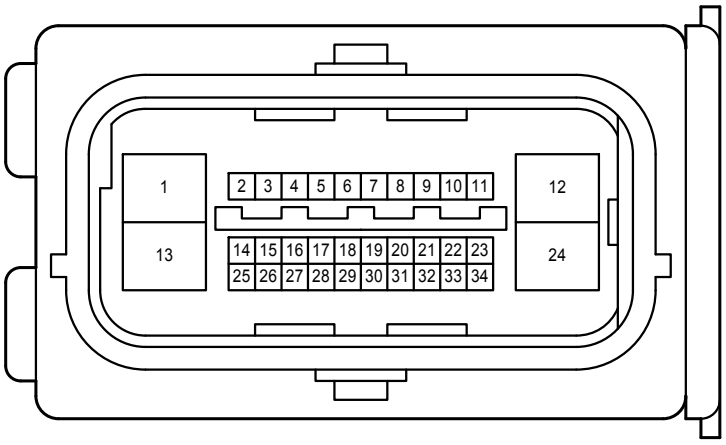

A 71
White

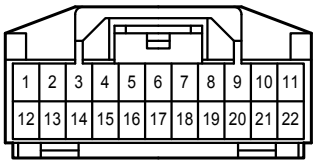


A 72
Gray



B 1
Black




B 3
Black

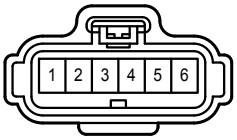


B 4
Gray




B 24
Black

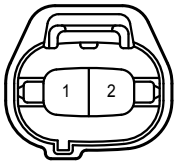


B 28
Gray

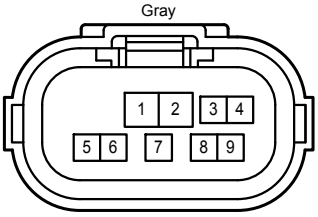


B 29
Gray

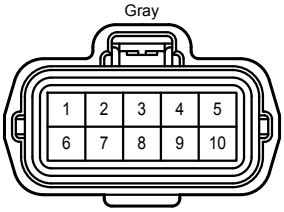

B 30
Black

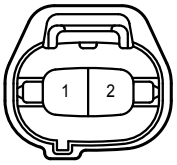


B 32
Black

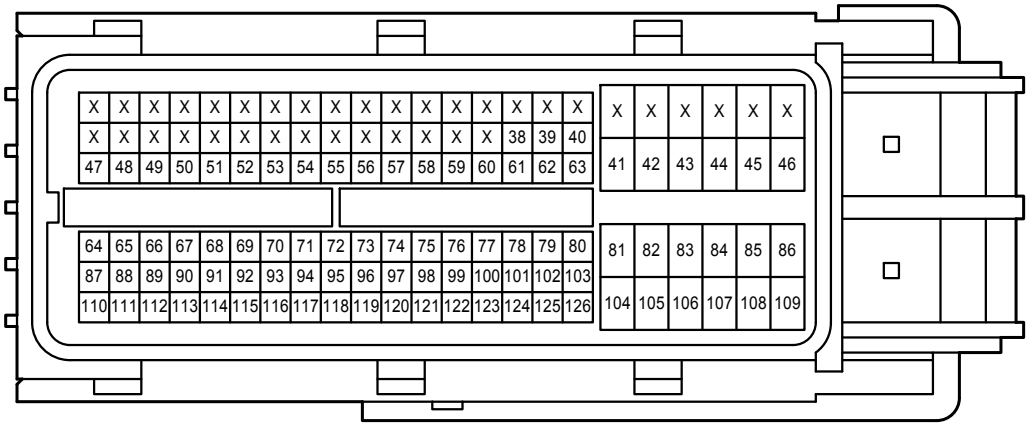


E 10
Black




E 16
White

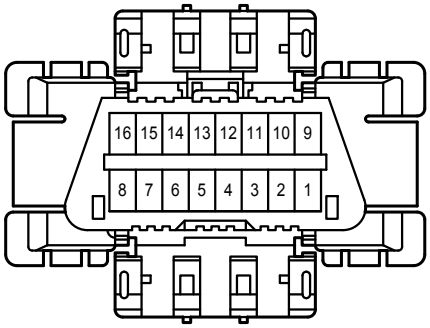


E 22
White

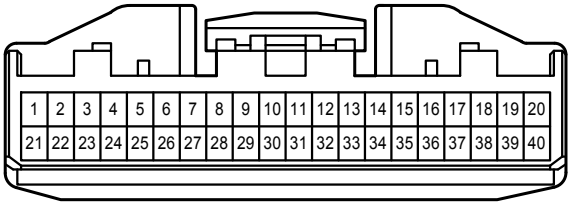


E 45
White

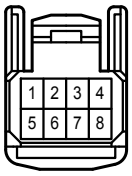


E 75
Gray

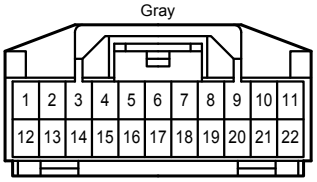


E 76
Black

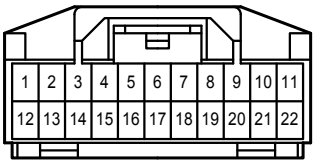


E 77
Gray

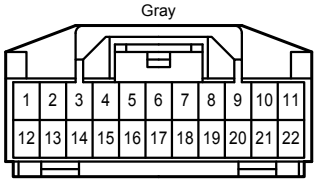


E 87
Gray

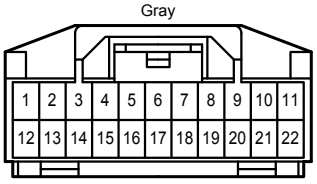


E 88
Blue

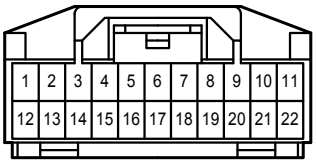


E 89
Blue

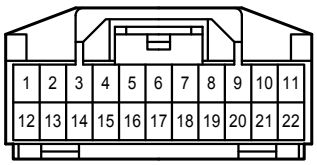


1A
White

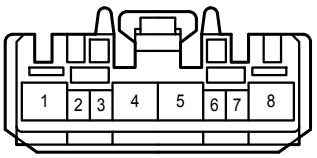


3A
White

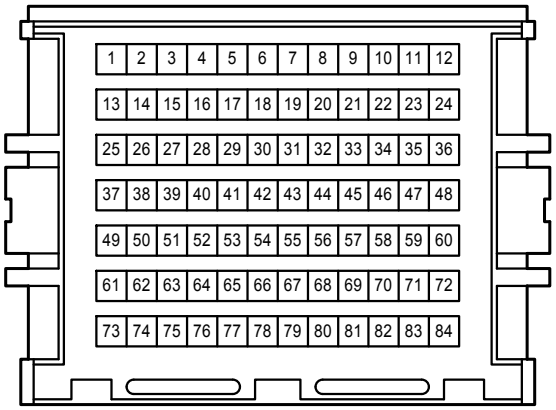


3B
White

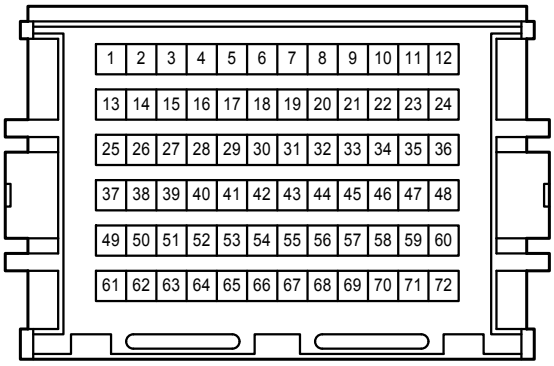


4A
White

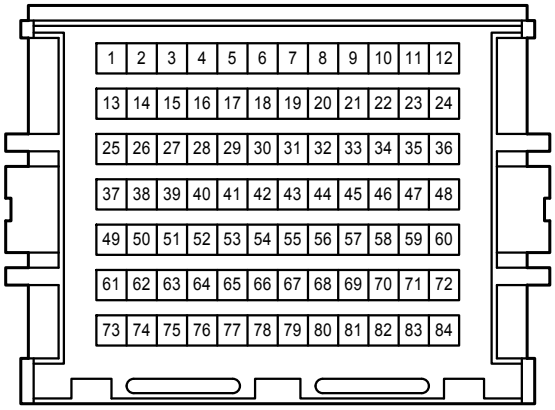


4B
White

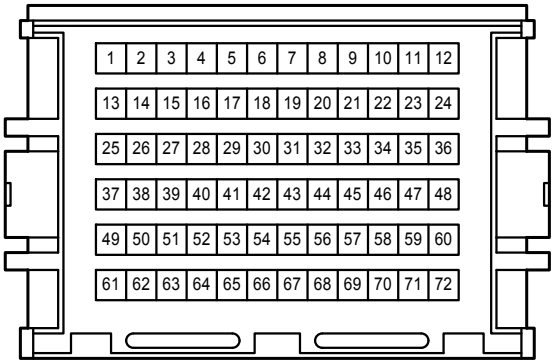


IB
White

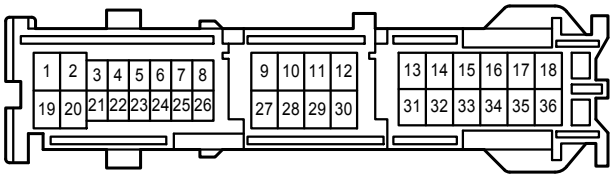


ID
White

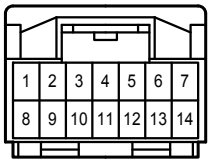


IH
White

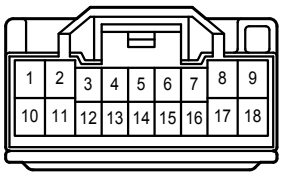


IM
White

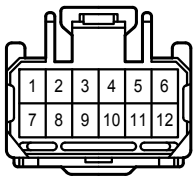


AE3
Black

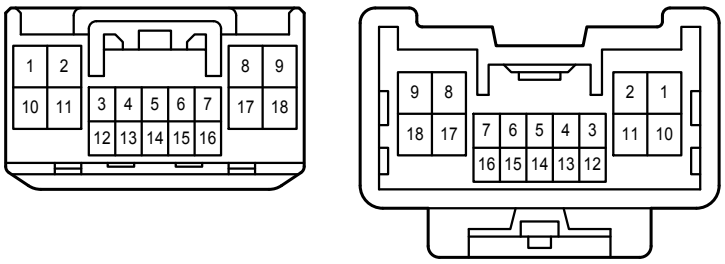


AE4
Gray

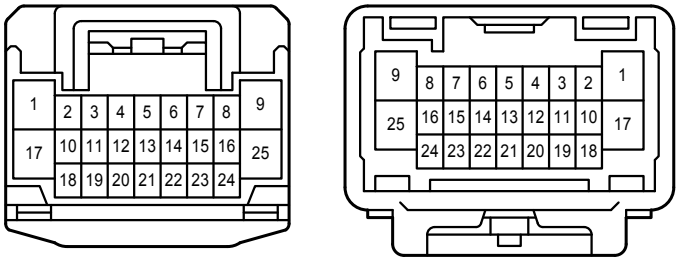

AE6
White

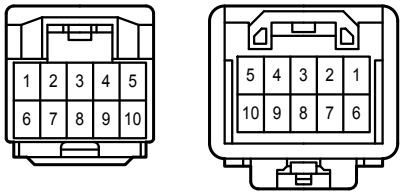

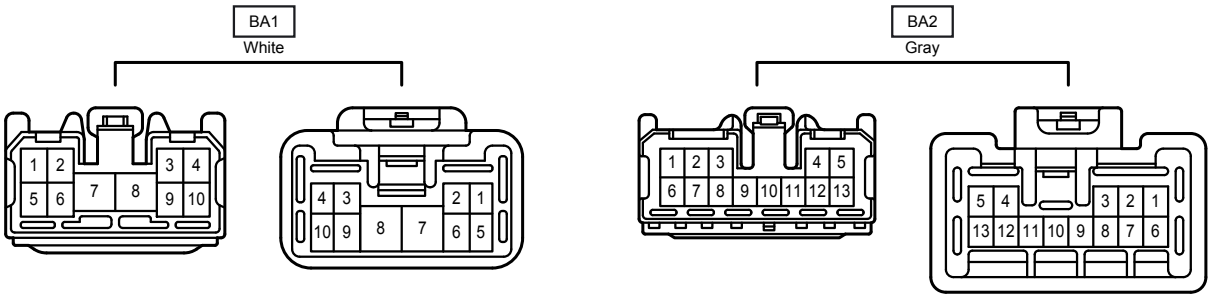
BA1
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5
BA2
Gray
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6