REAR DOOR OUTER PANEL (ASSY): Short Body




F24685A


Symbol meaning

: Spot MIG Weld : Body Sealer

F24685B

REMOVAL

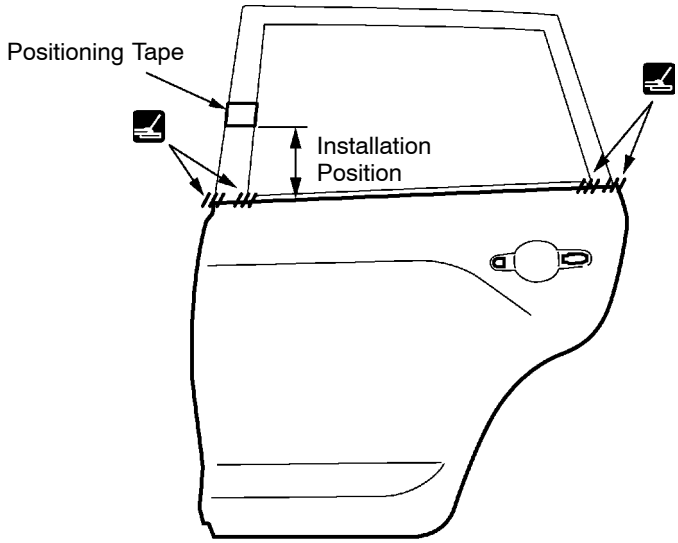

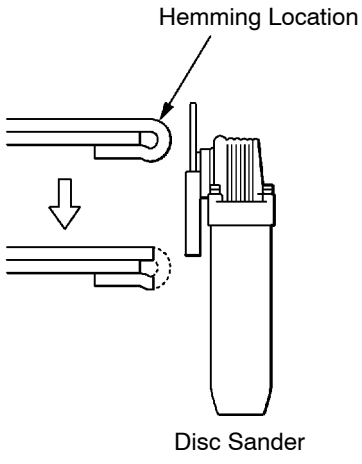

F24685

REMOVAL POINT


1 Before removing the outer panel, mark the installation position with tape.
2 Before removing the outer panel, establish its exact position in relation to the window frame using a reference marker, etc.
3 After grinding off the hemming location, remove the outer panel.

Symbol meaning

+ : Spot MIG Weld : Body Sealer

F24686B

INSTALLATION

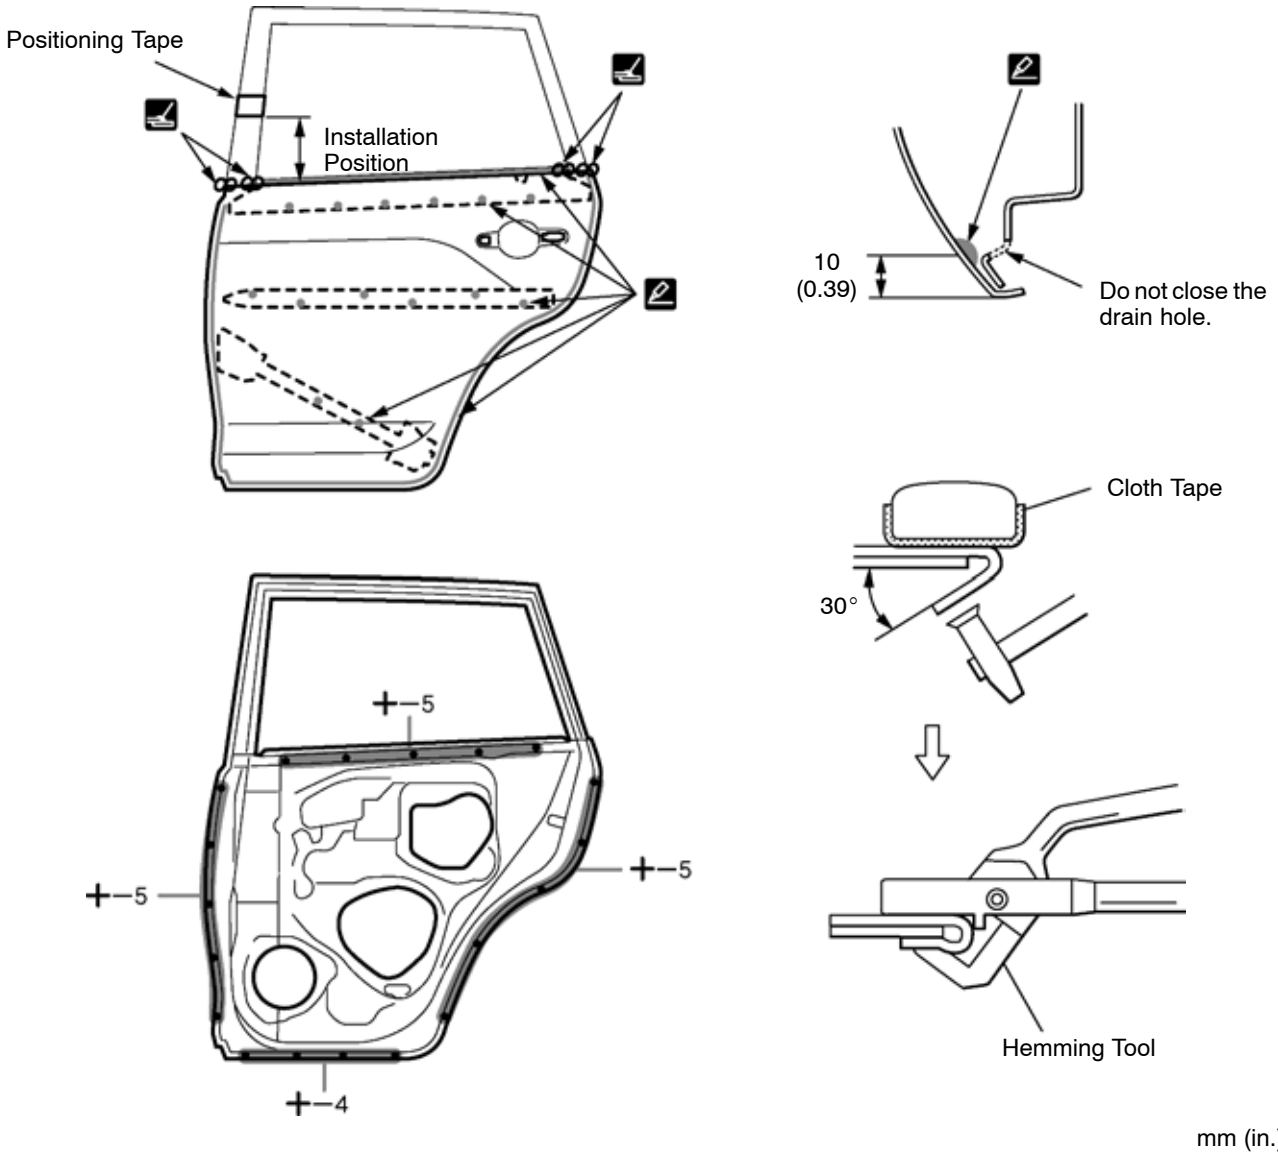

mm (in.)

F24686

INSTALLATION POINT

1 Before temporarily installing the new parts, apply body sealer to the reinforcement, side impact protection beam and backside of the new parts.
HINT:
1) Apply sealer evenly about 10 mm (0.39 in.) from the flange and 3 mm (0.12 in.) in diameter on the outer panel and apply just enough sealer for the reinforcement and side impact protection beam to make contact.

2 Bend the flange hem about 30° with a hemmer and dolly. Then, fasten tightly with a hemming tool.
HINT:
1) Perform hemming in three steps, being careful not to warp the panel.
2) If a hemming tool cannot be used, hem with a hammer and dolly.

3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.