# REAR DOOR OUTER PANEL (ASSY): Long Body




F24687A


Symbol meaning

+ : Spot MIG Weld  : Body Sealer

F24687B

**REMOVAL**

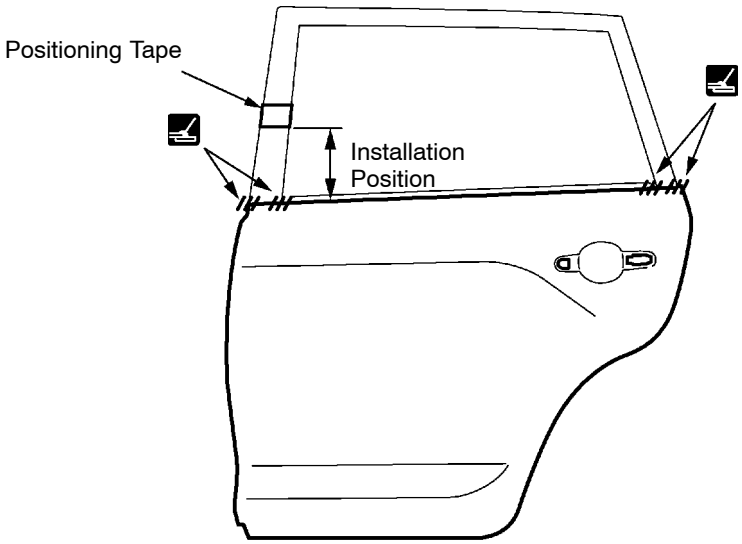

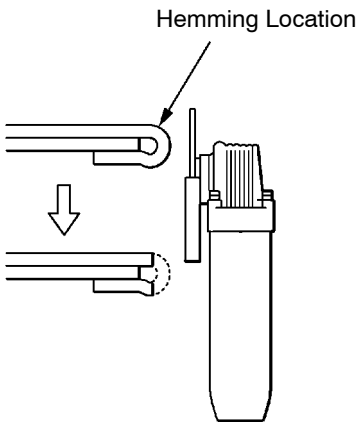
F24687

**REMOVAL POINT**


1 Before removing the outer panel, mark the installation position with tape.
2 Before removing the outer panel, establish its exact position in relation to the window frame using a reference marker, etc.
3 After grinding off the hemming location, remove the outer panel.

Symbol meaning

+ : Spot MIG Weld  : Body Sealer

F24688B

**INSTALLATION**

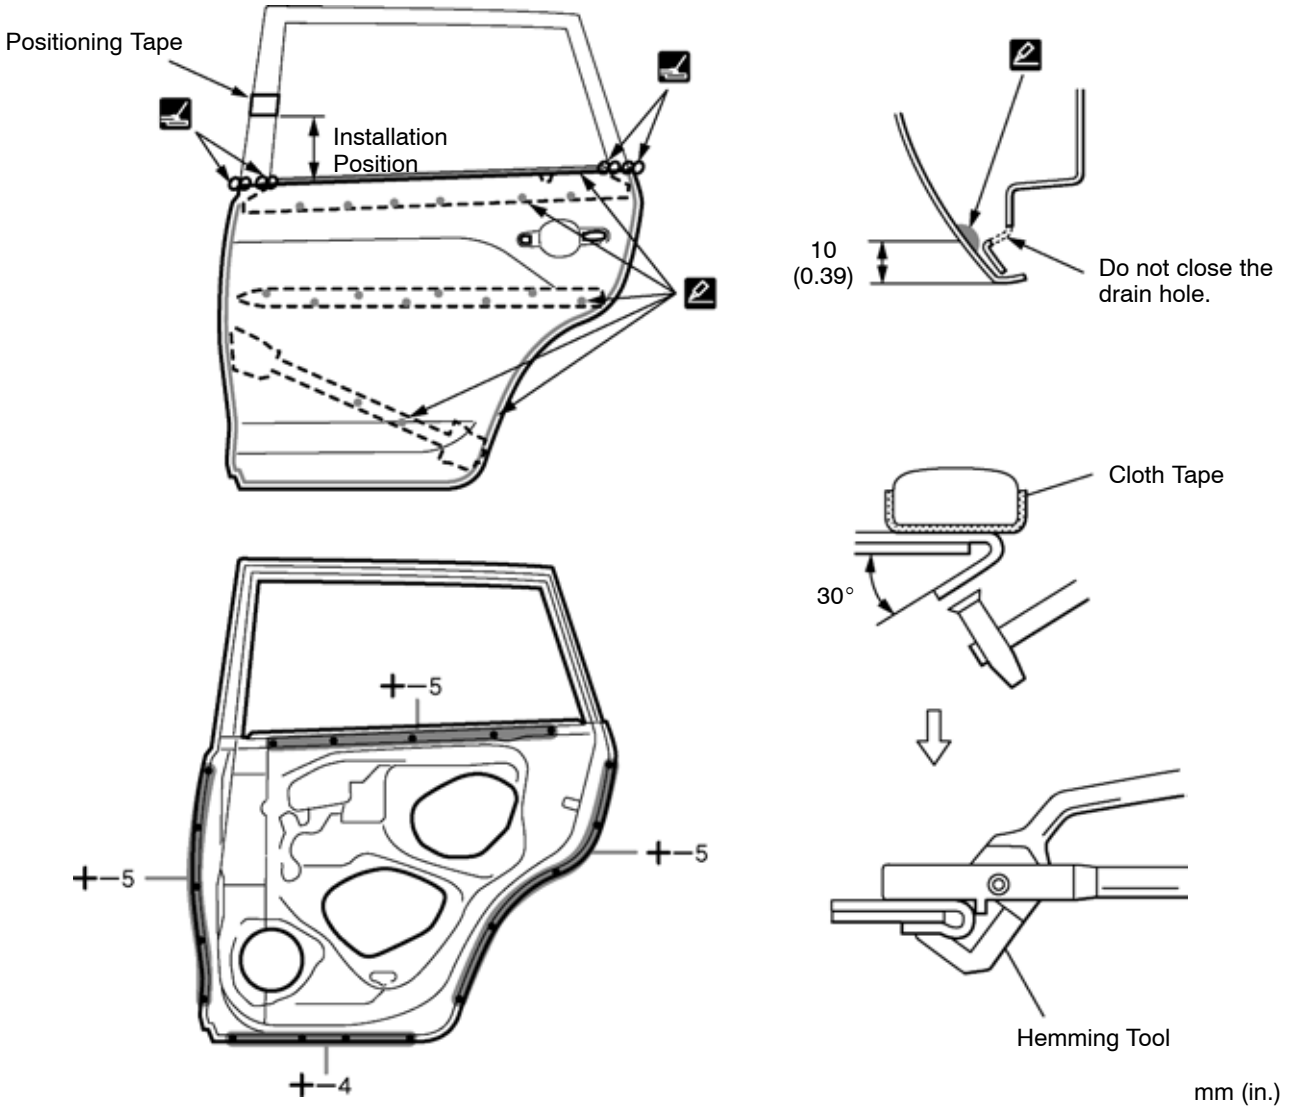


F24688

**INSTALLATION POINT**

1 Before temporarily installing the new parts, apply body sealer to the reinforcement, side impact protection beam and backside of the new parts.
*HINT:*
*1) Apply sealer evenly about 10 mm (0.39 in.) from the flange and 3 mm (0.12 in.) in diameter on the outer panel and apply just enough sealer for the reinforcement and side impact protection beam to make contact.*

2 Bend the flange hem about 30° with a hammer and dolly. Then, fasten tightly with a hemming tool.
*HINT:*
*1) Perform hemming in three steps, being careful not to warp the panel.*
*2) If a hemming tool cannot be used, hem with a hammer and dolly.*

3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.