QUARTER WHEEL HOUSING OUTER PANEL (ASSY): Short Body


F24700A

With the quarter panel removed.


Symbol meaning

REMOVAL : Remove Weld Points : Cut and Join Location

INSTALLATION : MIG Plug Weld : Spot Weld : Butt Weld

F24700B

REMOVAL·INSTALLATION

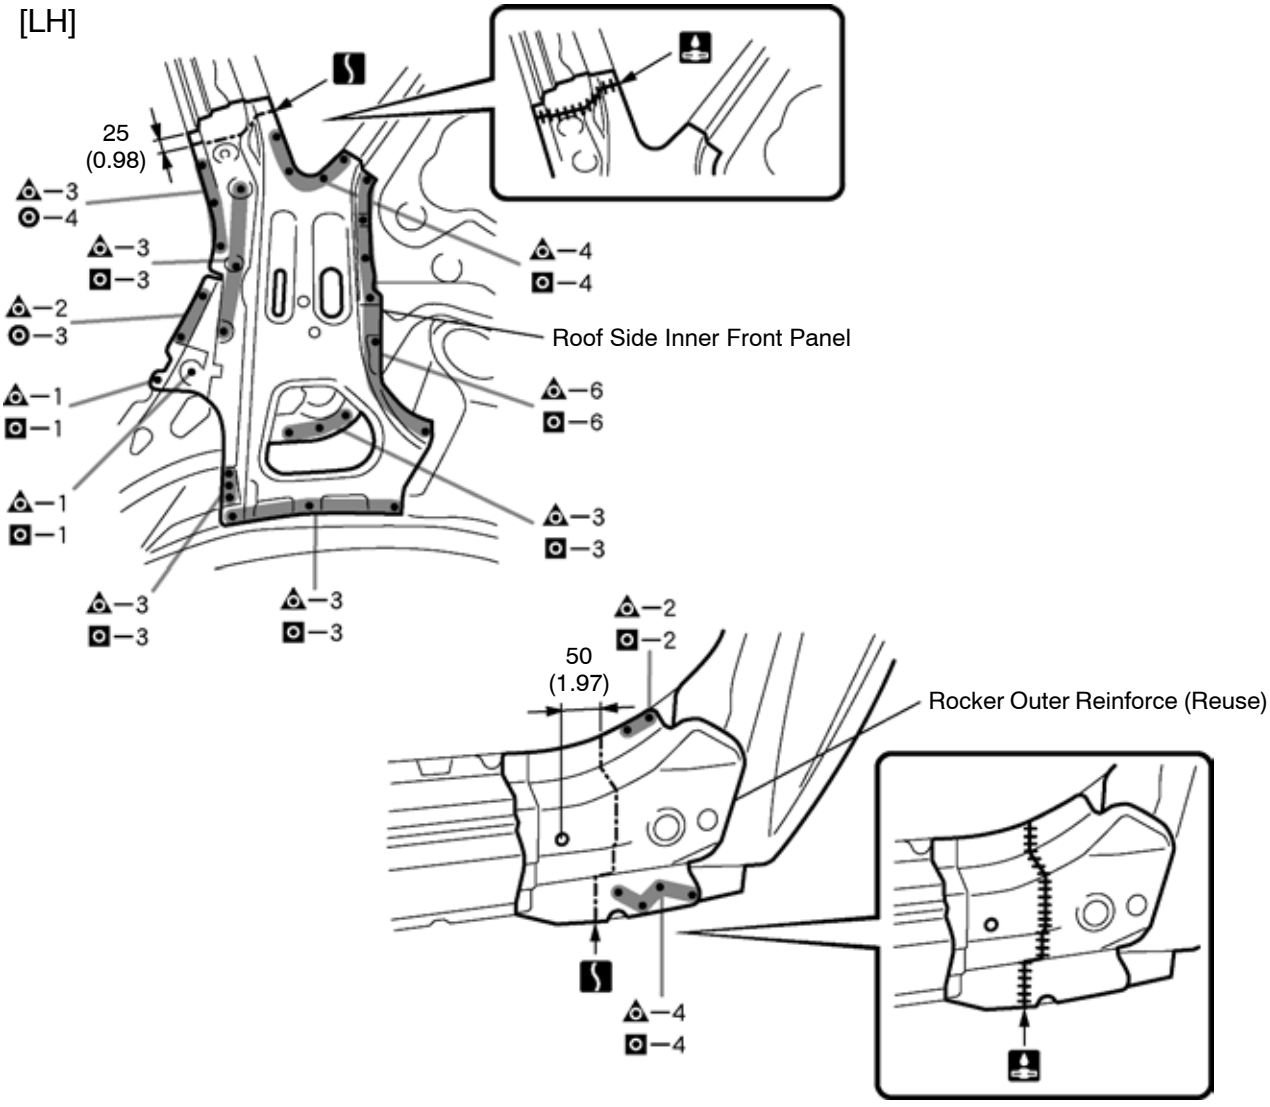


F24700

REMOVAL POINT

1 After removing the roof side inner front panel and rocker outer reinforce, remove the quarter wheel housing outer panel.

INSTALLATION POINT

1 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side inner front panel and rocker outer reinforce.

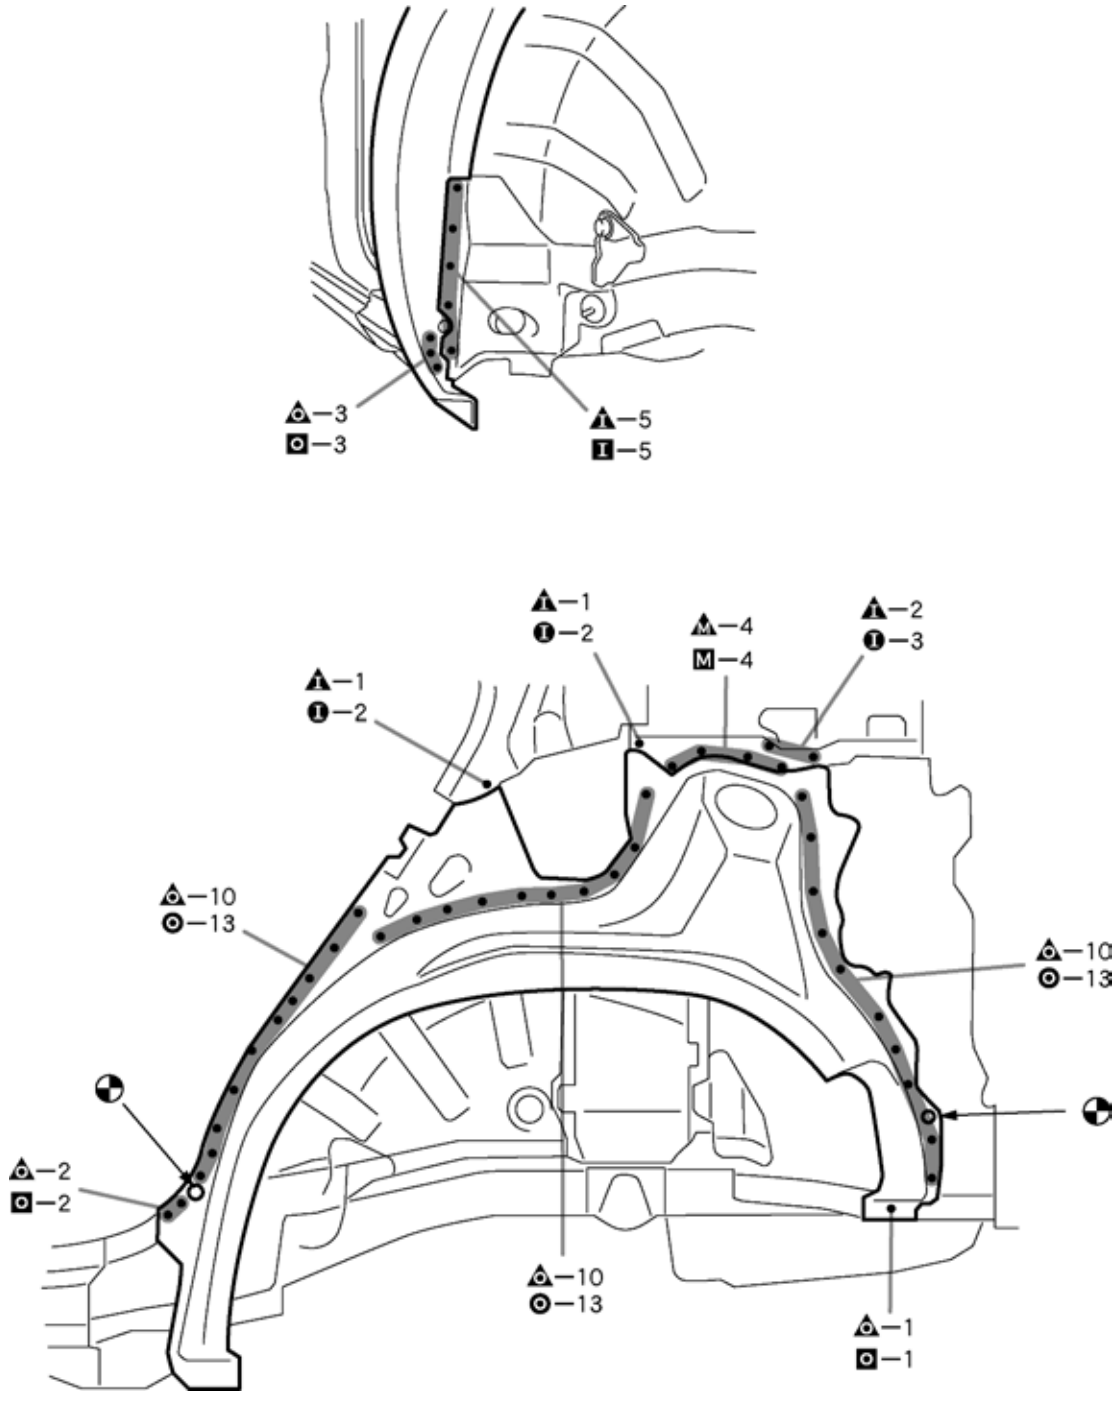

F24701

INSTALLATION POINT

1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


Symbol meaning

REMOVAL : Remove Weld Points : Cut and Join Location

INSTALLATION : MIG Plug Weld : Spot Weld : Butt Weld

F24702B

[RH]

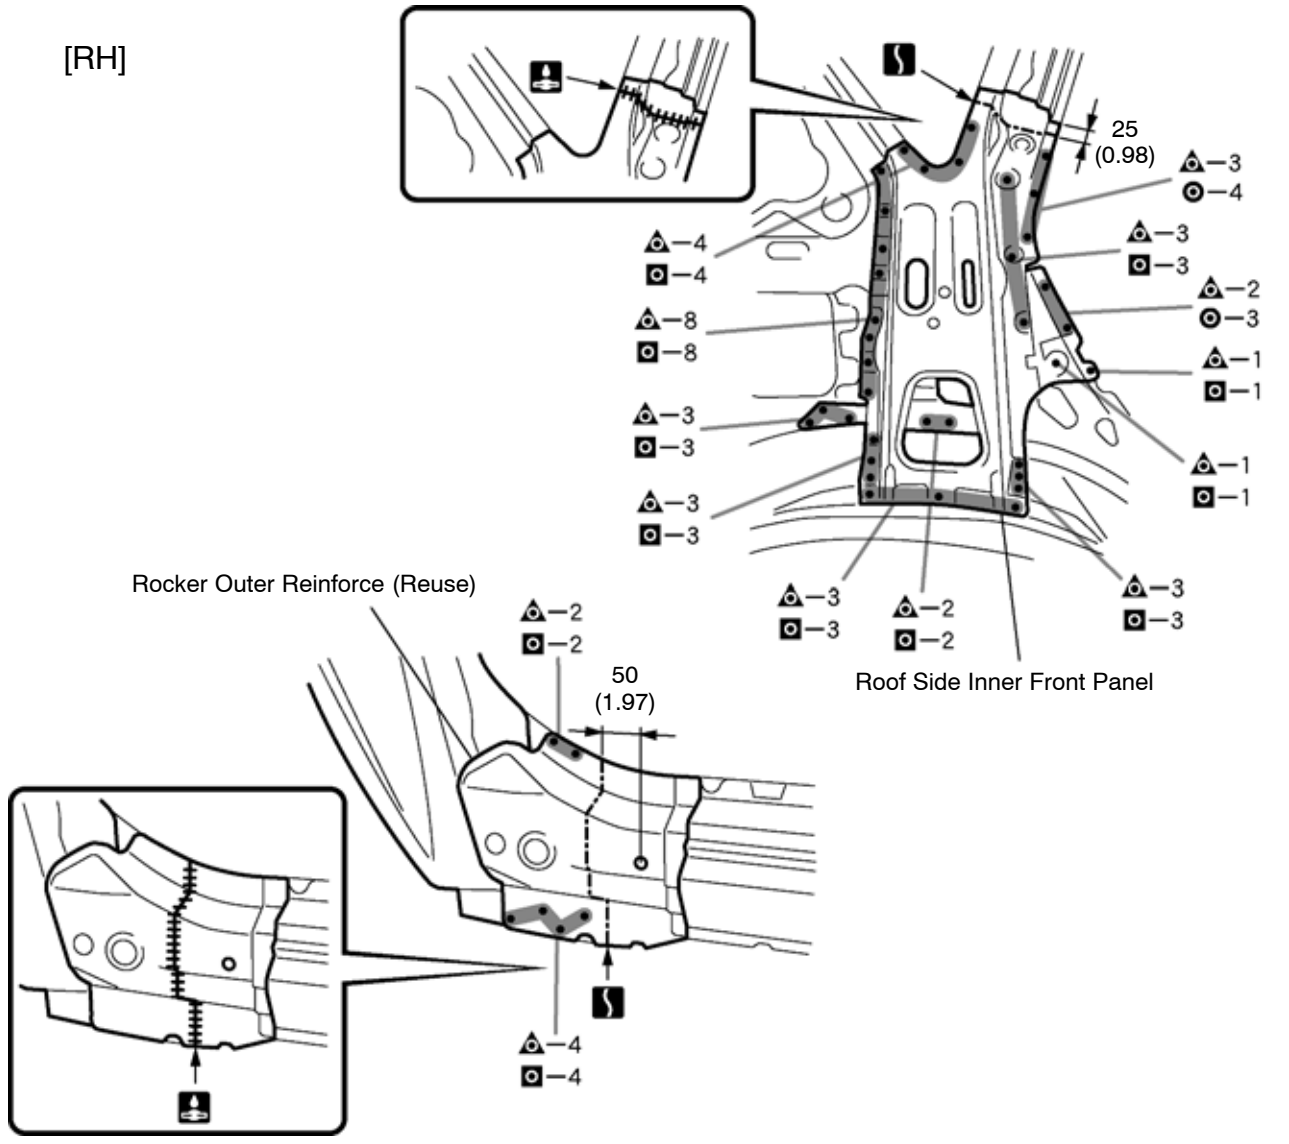

mm (in.)


F24702

REMOVAL POINT

1 After removing the roof side inner front panel and rocker outer reinforce, remove the quarter wheel housing outer panel.

INSTALLATION POINT

1 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side inner front panel and rocker outer reinforce.

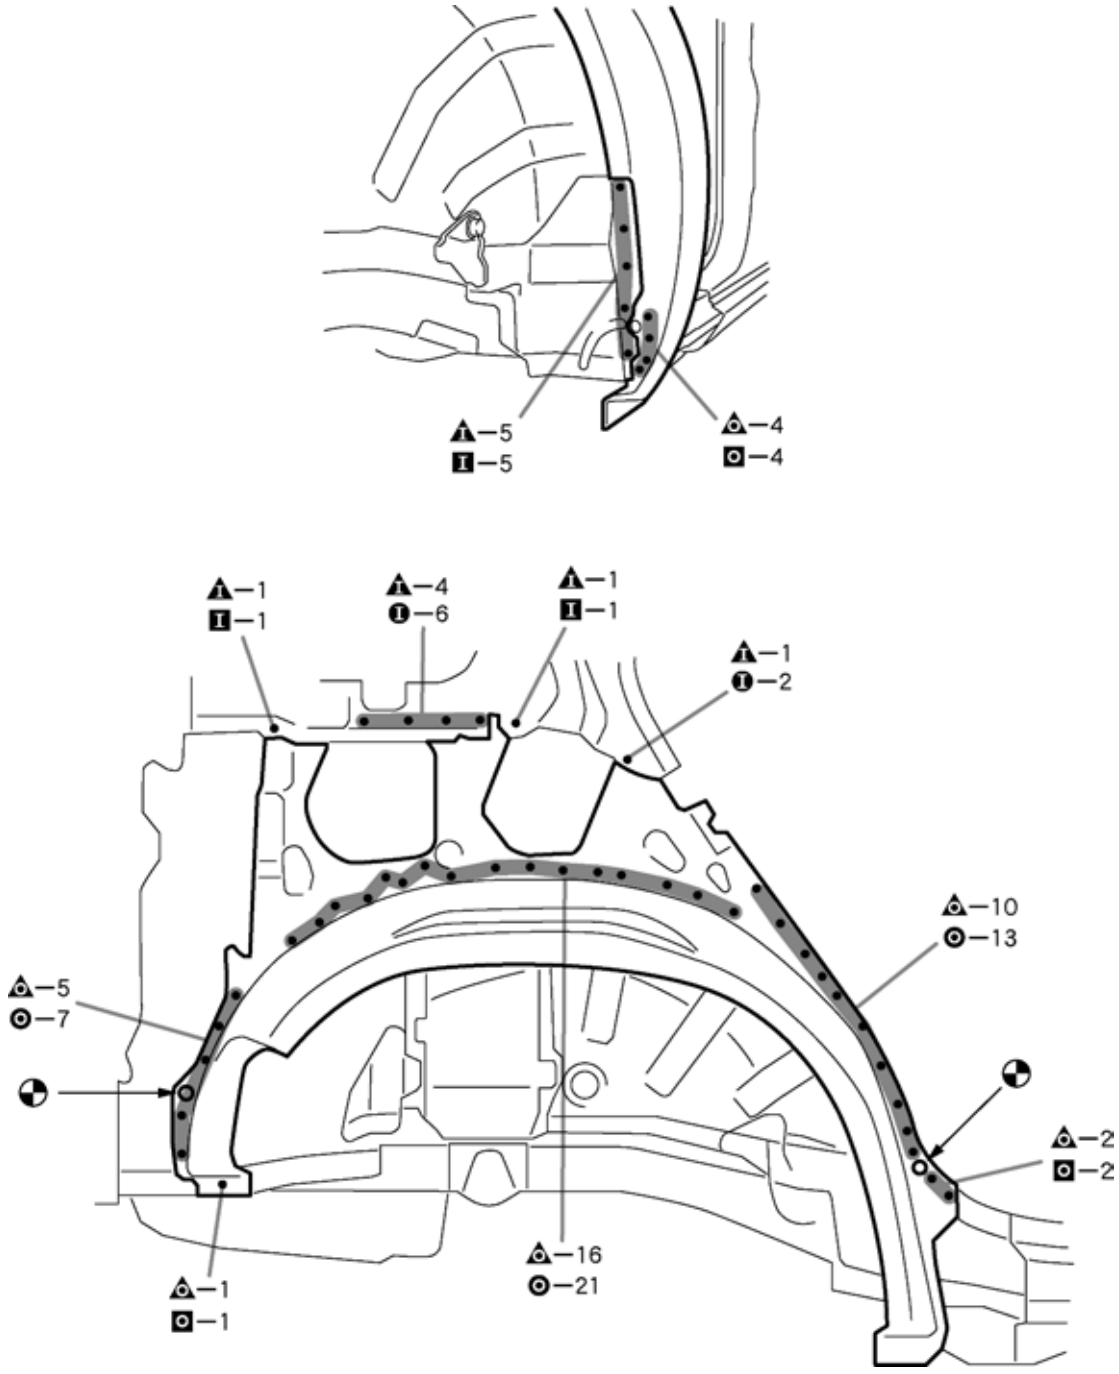

F24703

INSTALLATION POINT

1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.