BODY LOWER BACK OUTER PANEL (ASSY)




F24708A

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: MIG Plug Weld : Spot Weld

F24708B

REMOVAL·INSTALLATION

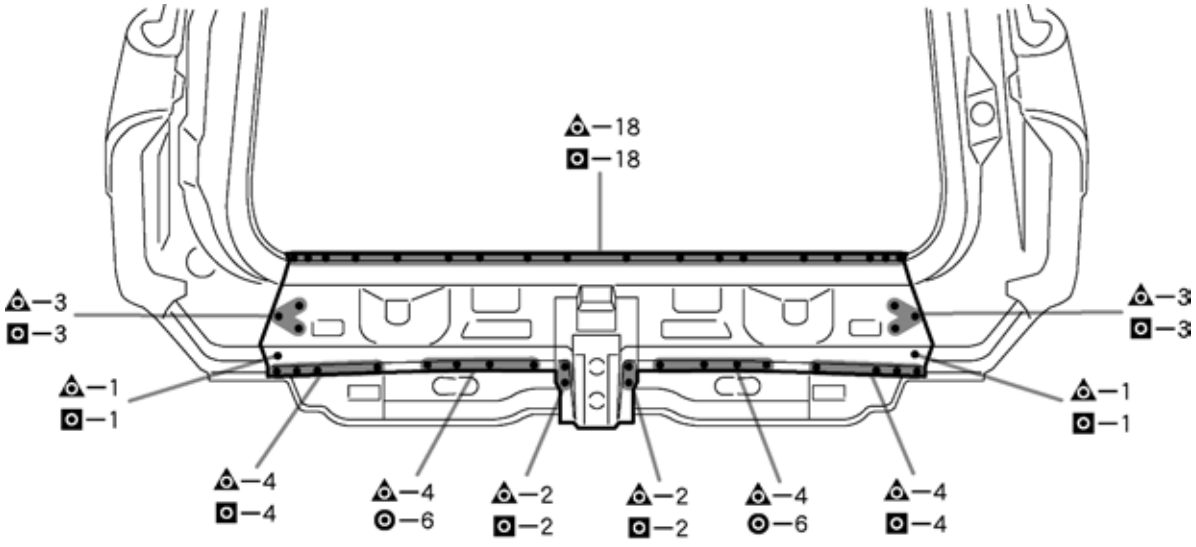

F24708

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.