
# DAMAGED VEHICLE DISPOSAL PRECAUTION (SRS AIRBAG SYSTEM)

For SRS airbag system adjustment methods, refer to the TOYOTA Repair Manual.

(1) When using an electric welder, first remove all airbags and the seat belt pretensioner.


(2) If impacts are likely to occur to the front airbag sensor, side airbag sensor, rear airbag sensor or seat position sensor, remove each sensor as necessary beforehand.

(3) Do not allow the front airbag sensor, side airbag sensor, rear airbag sensor or seat position sensor to become heated to high temperatures.

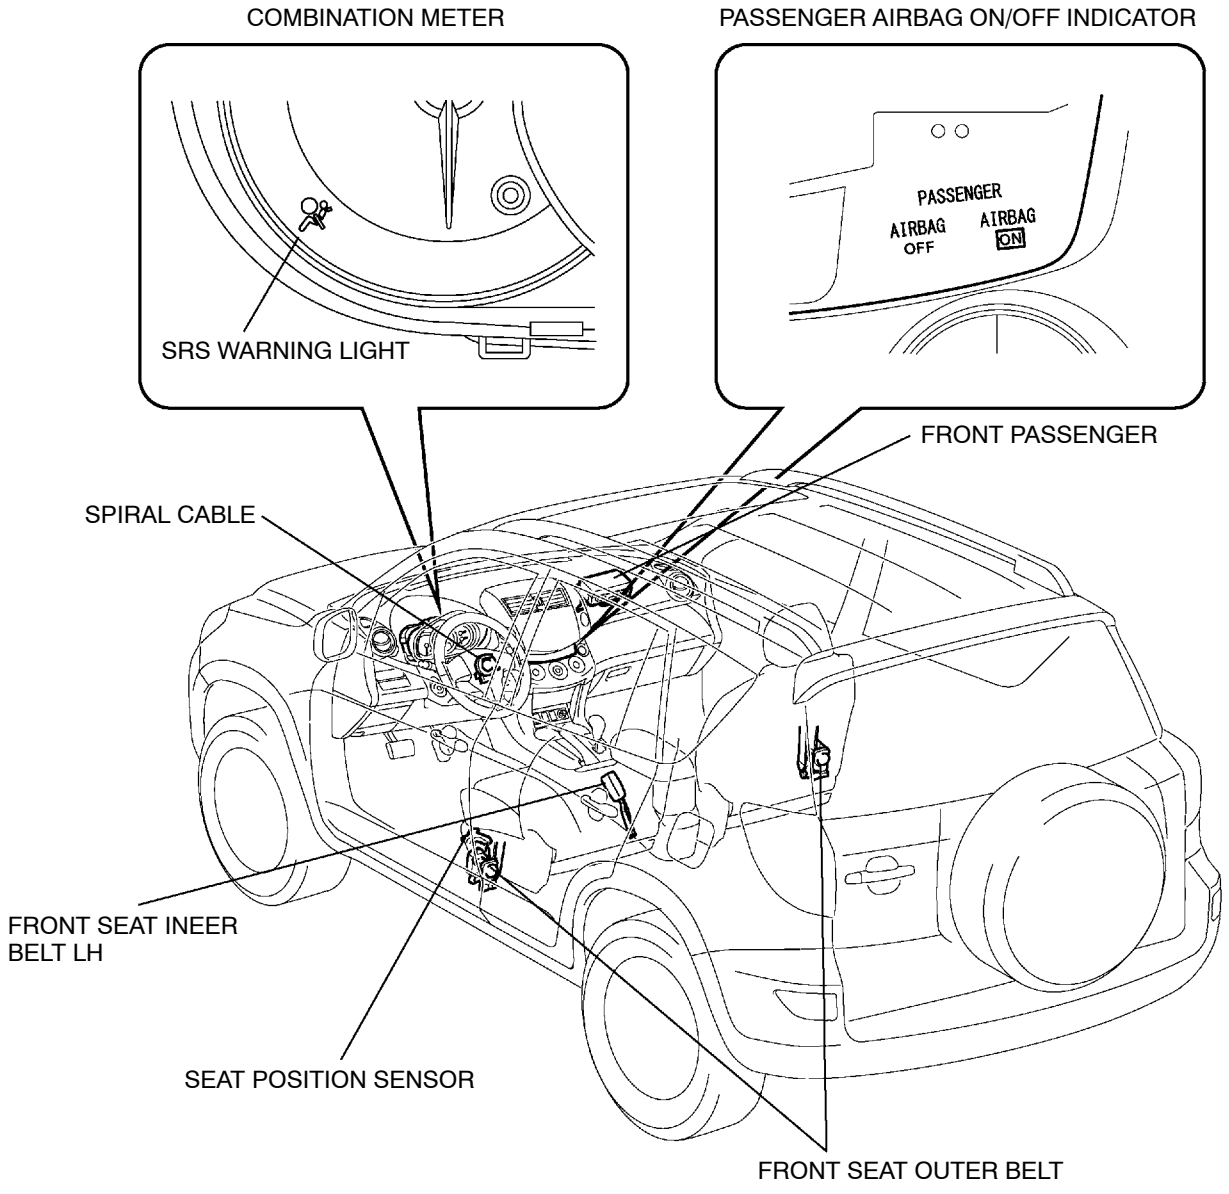


T

C128667

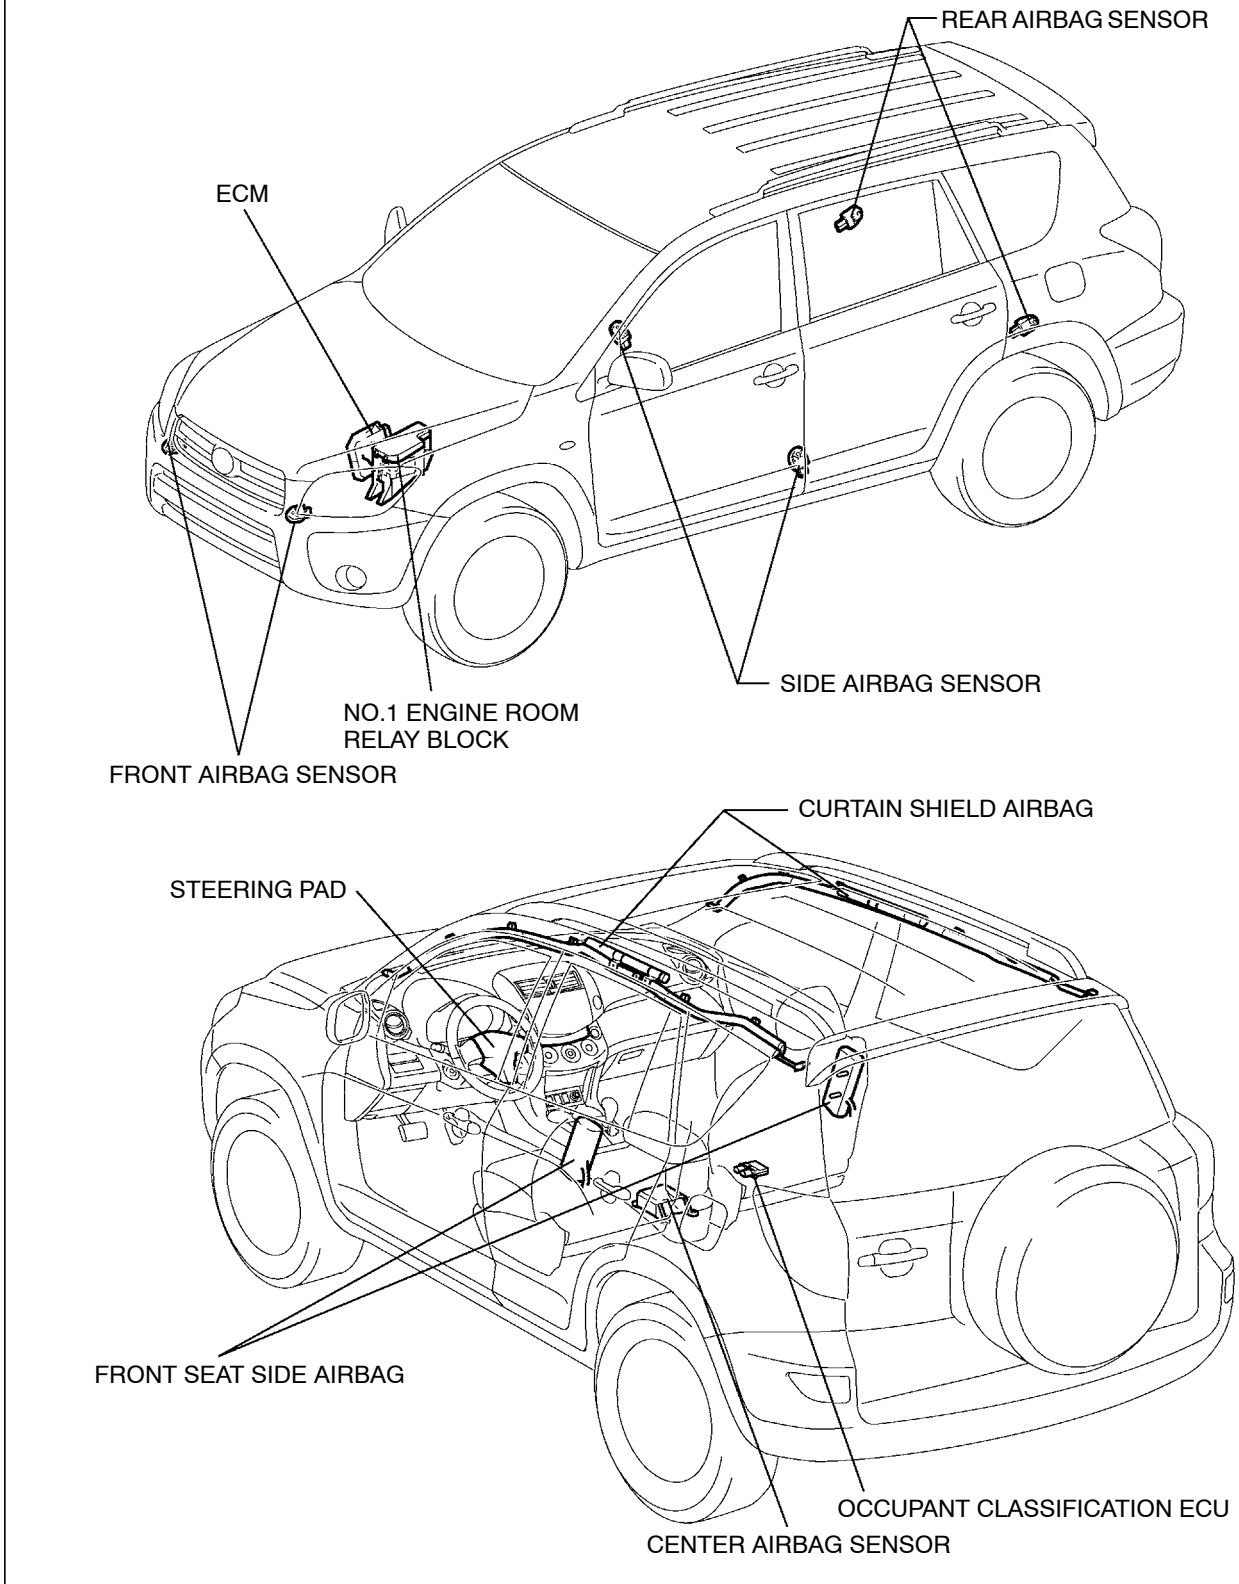
REAR AIRBAG SENSOR
ECM
SIDE AIRBAG SENSOR
NO.1 ENGINE ROOM
RELAY BLOCK
FRONT AIRBAG SENSOR
CURTAIN SHIELD AIRBAG
STEERING PAD
FRONT SEAT SIDE AIRBAG
OCCUPANT CLASSIFICATION ECU
CENTER AIRBAG SENSOR
C123528