

(Cont. next page)

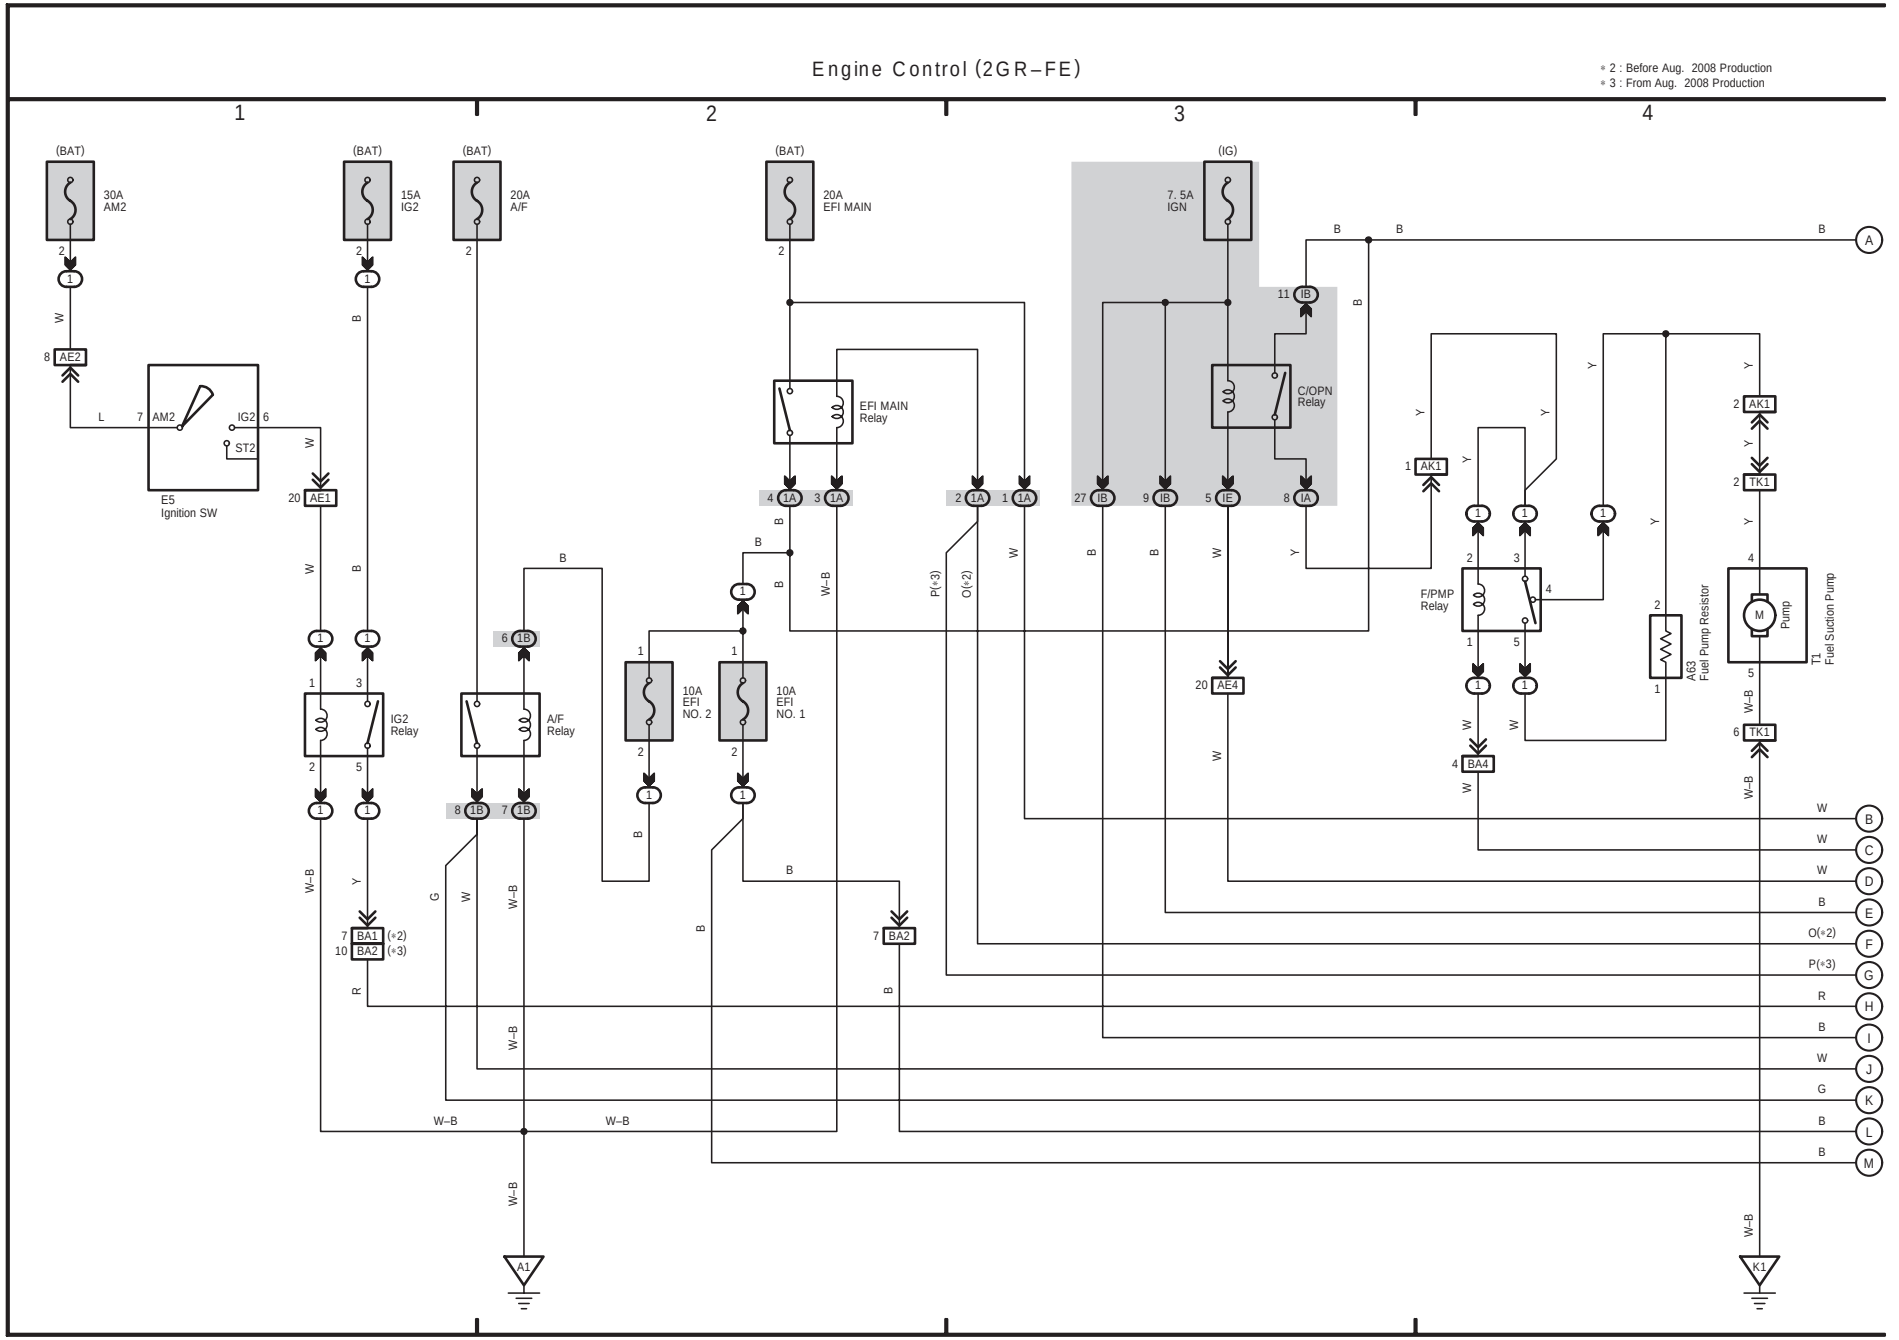

(Cont. next page)


Engine Control (2GR–FE)

∗ 2 : Before Aug. 2008 Production
∗ 3 : From Aug. 2008 Production

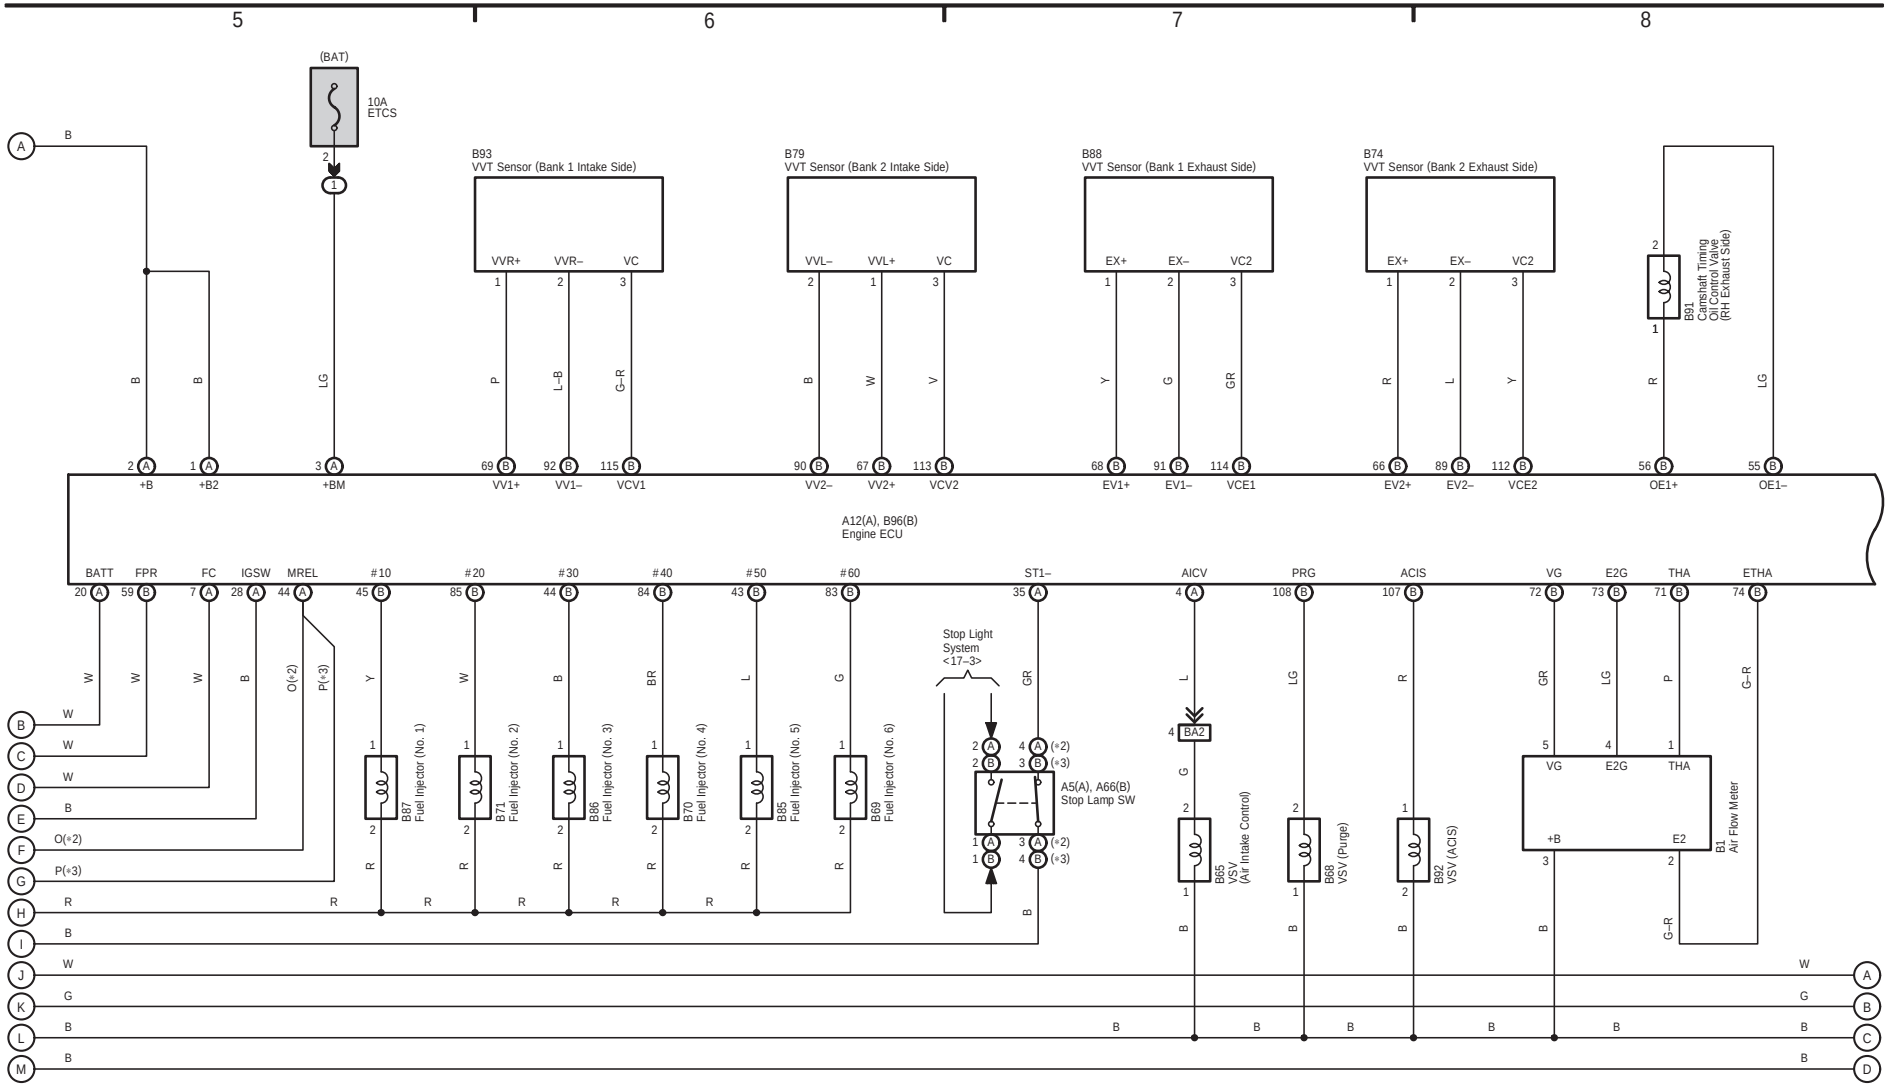


(Cont. next page)

Engine Control (2GR–FE)

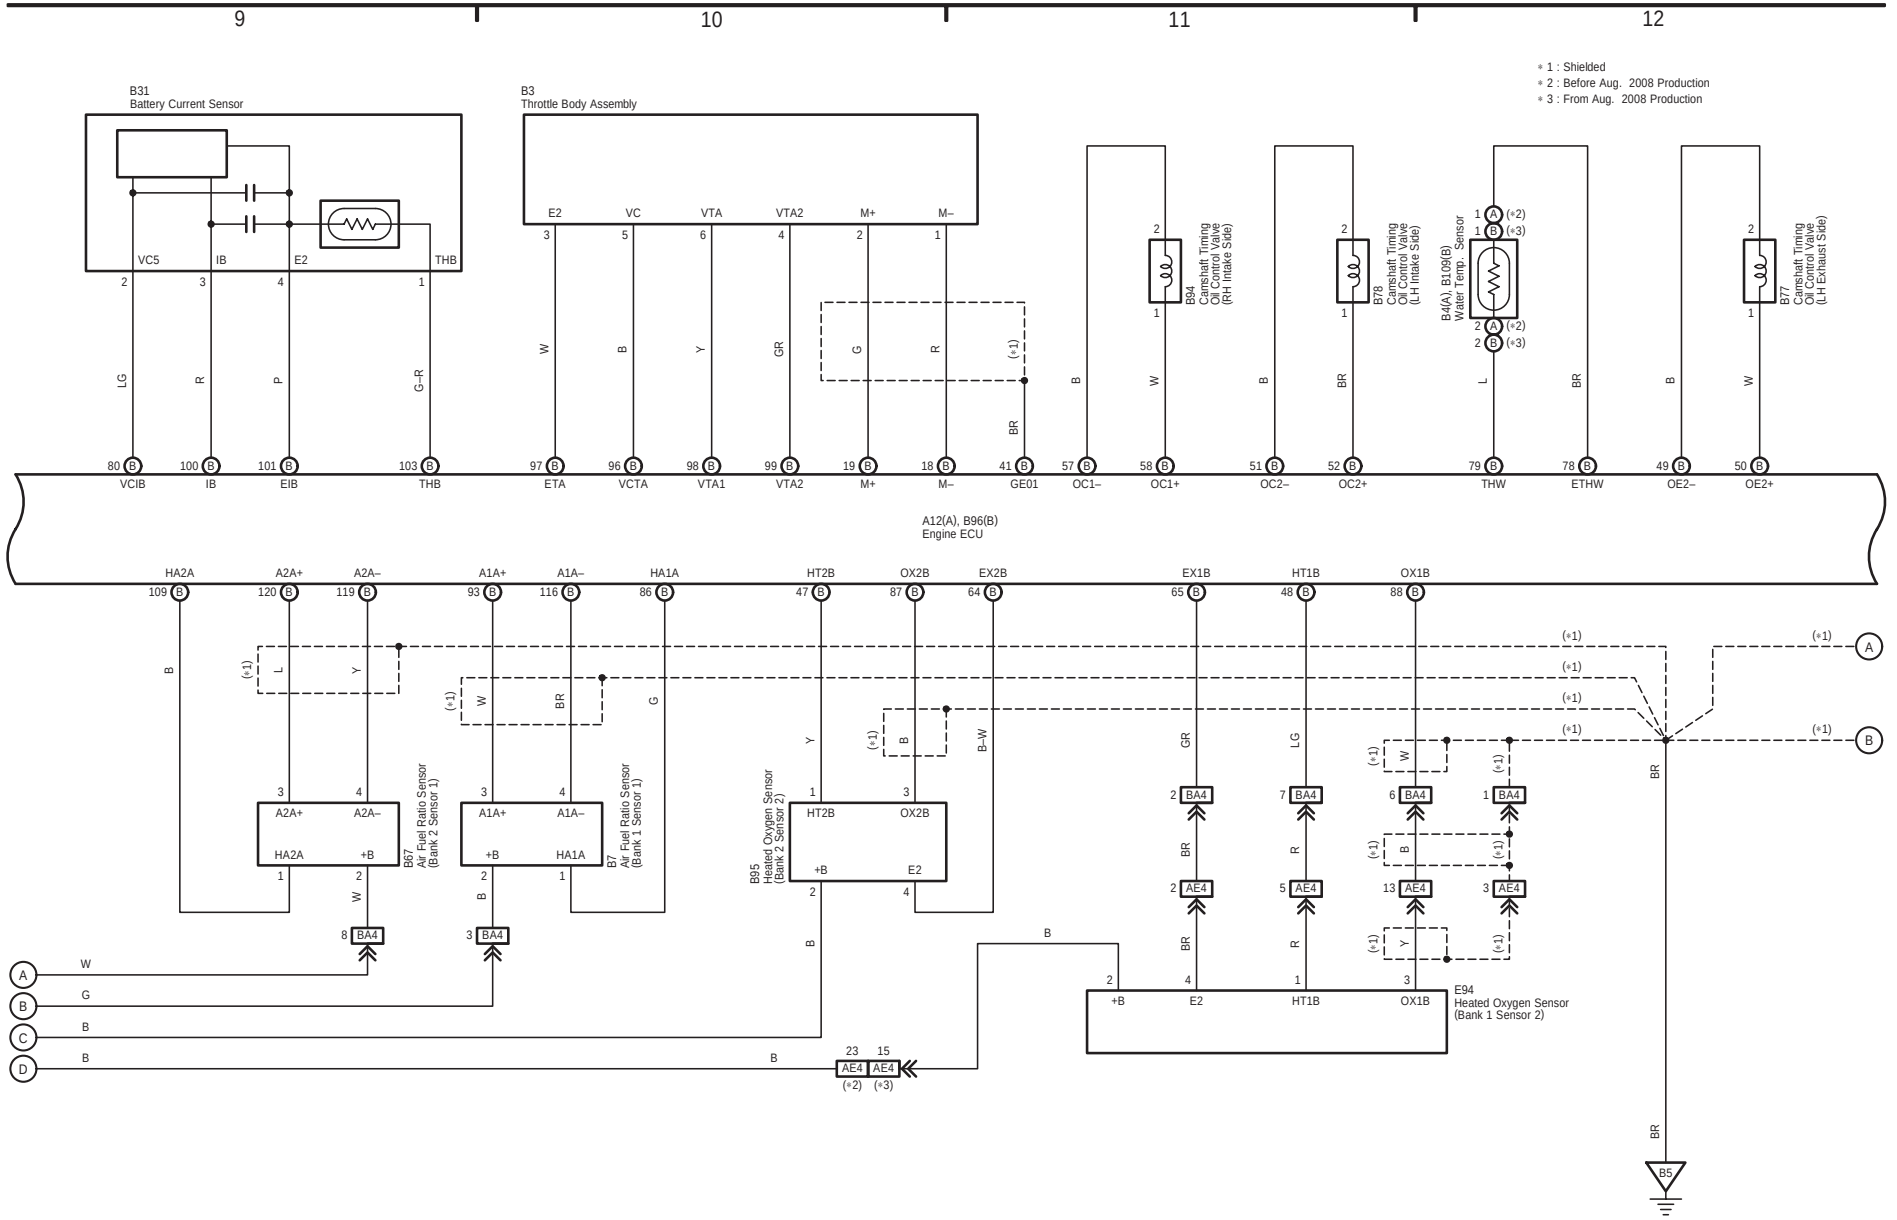


(Cont. next page)

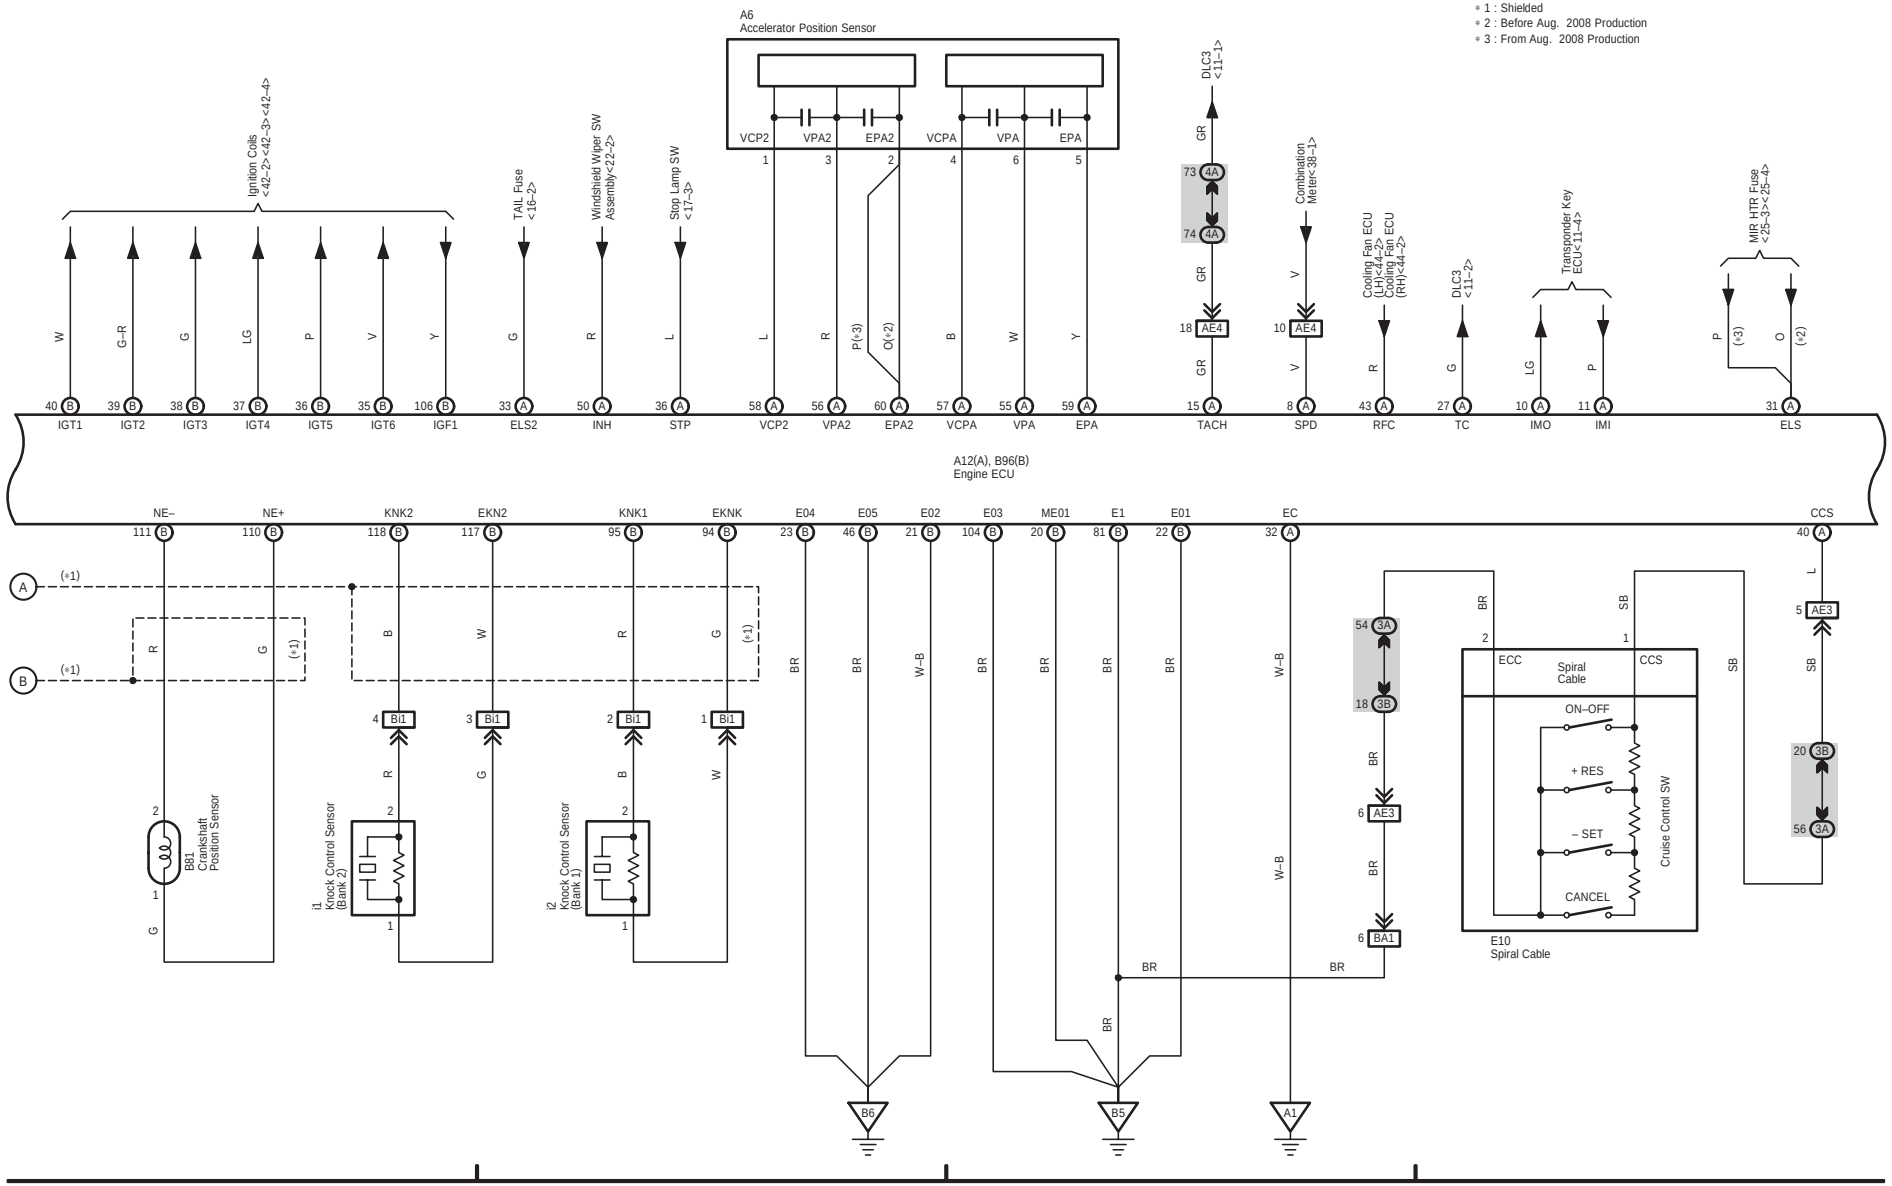


(Cont. next page)

ECT and A/T Indicator (2GR–FE)

∗ 2 : Before Aug. 2008 Production
∗ 3 : From Aug. 2008 Production

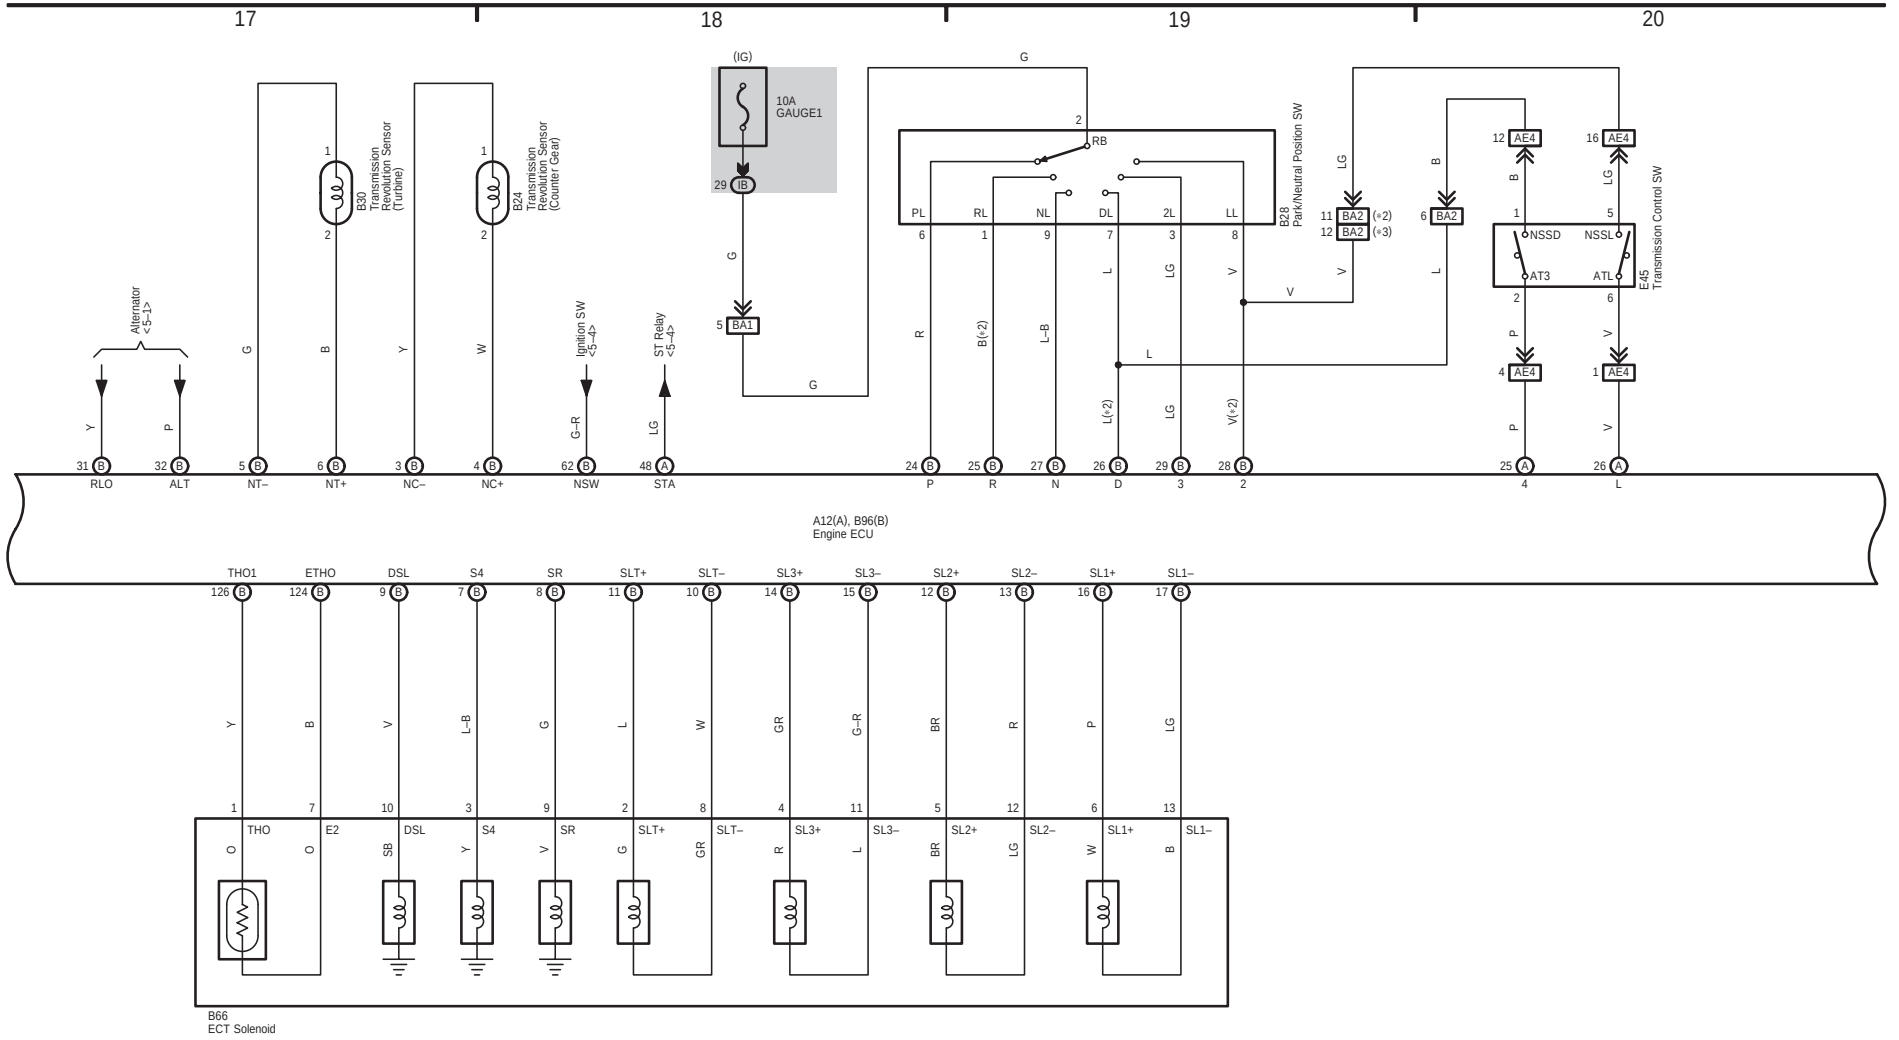

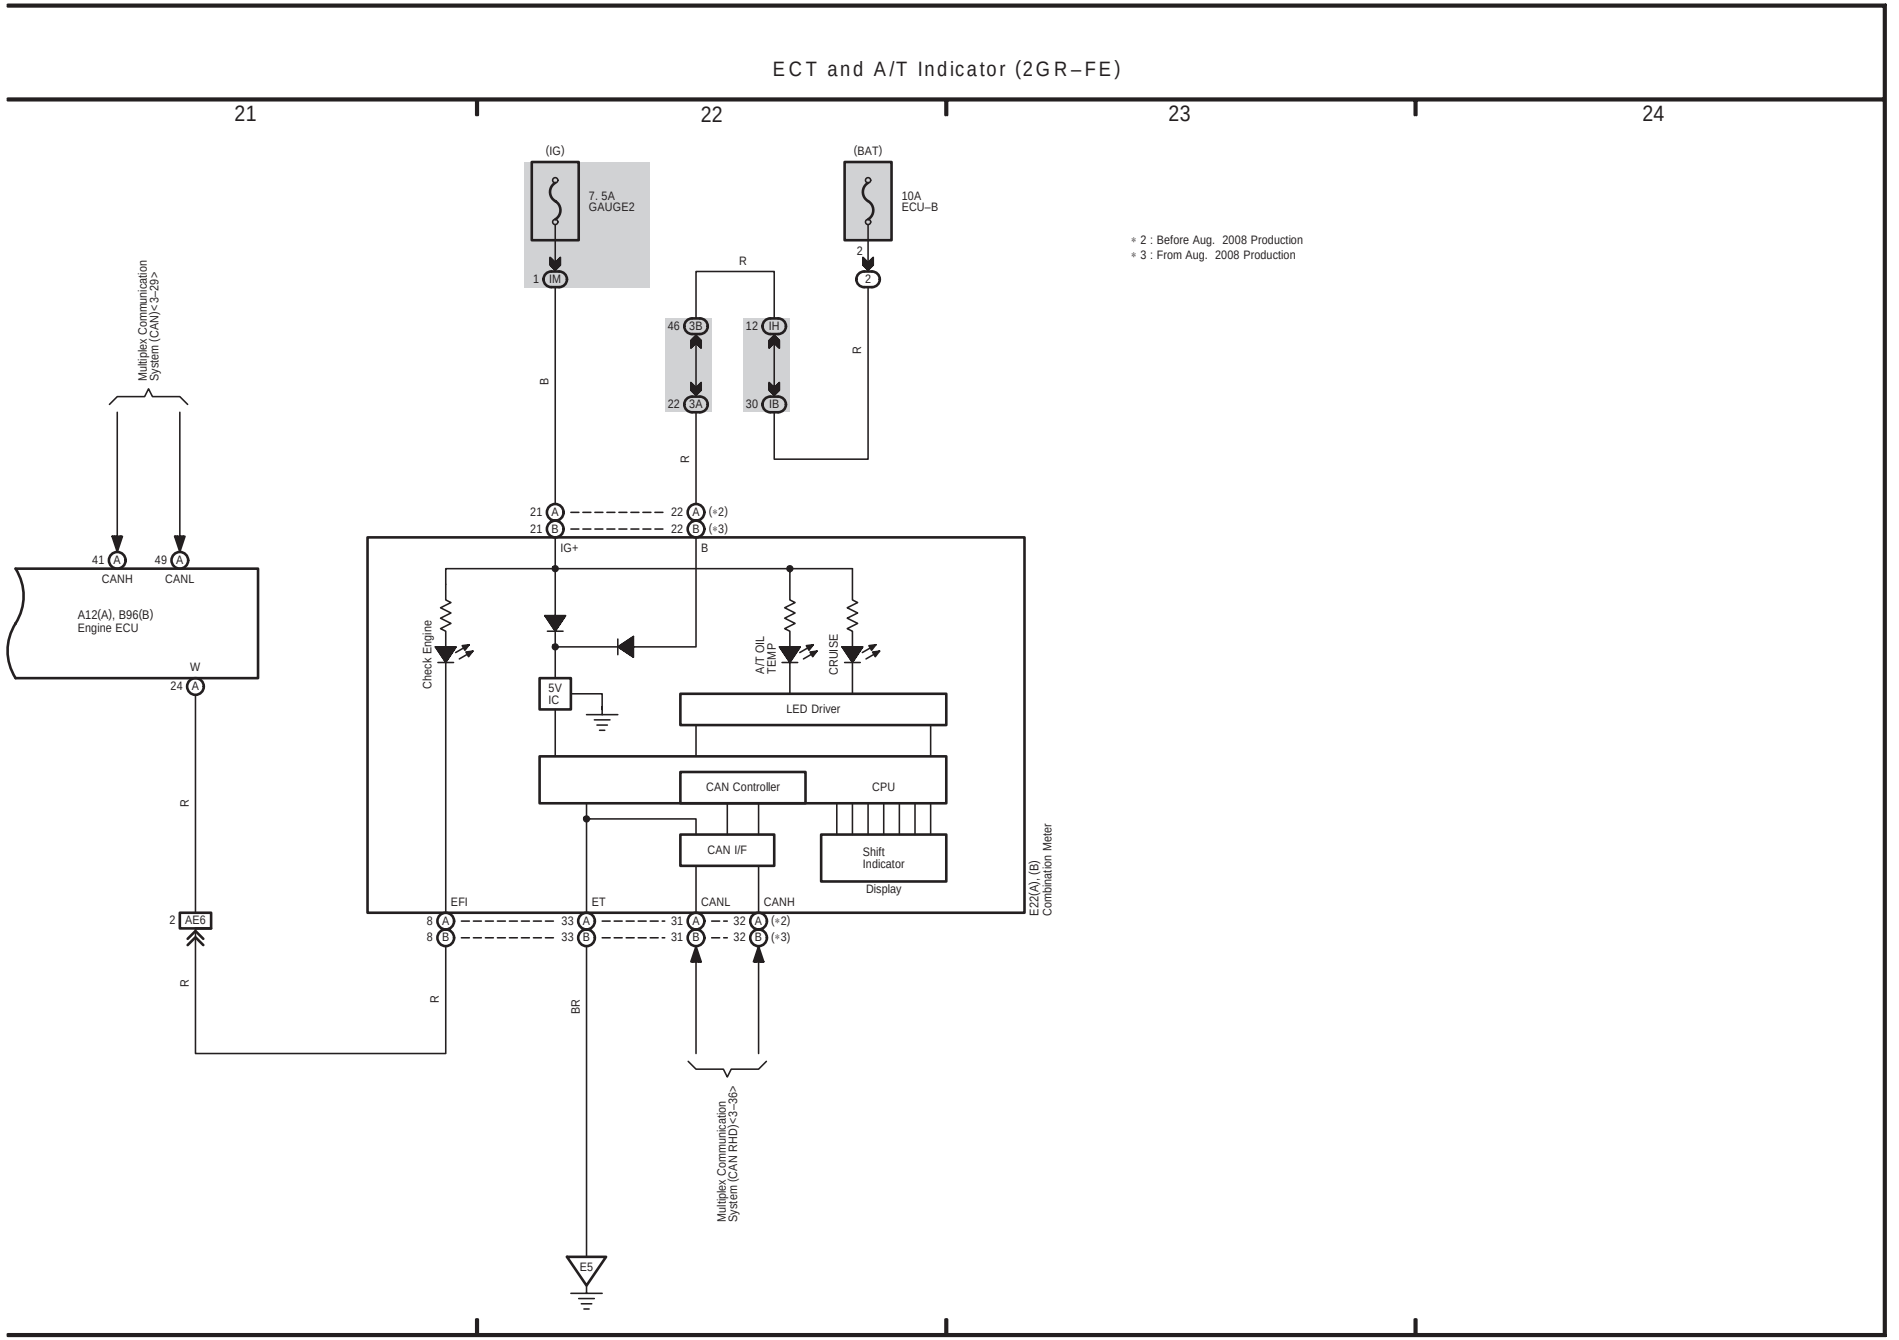
ECT and A/T Indicator (2GR–FE)
21
22
23
24
(IG)
7. 5A
GAUGE2
1 IM
(BAT)
10A
ECU–B
2
2
R
46 3B
12 IH
22 3A
30 IB
B
R
R
Multiplex Communication System (CAN)<3-29>
41 A CANH
49 A CANL
A12(A), B96(B)
Engine ECU
W
24 A
21 A
22 A (*2)
21 B
22 B (*3)
IG+
B
Check Engine
A/T OIL TEMP
CRUISE
5V IC
LED Driver
CAN Controller
CPU
CAN I/F
Shift Indicator
Display
EFI
ET
CANL
CANH
E22(A), (B)
Combination Meter
8 A
8 B
33 A
33 B
31 A
31 B
32 A (*2)
32 B (*3)
2 AE6
R
R
R
BR
Multiplex Communication System (CAN RHD)<3–36>
E5
* 2 : Before Aug. 2008 Production
* 3 : From Aug. 2008 Production