

B102
B44
B98
B53
B61
B99
B100
B46
B47
B1
B43
B103
B104
B105
B97
B49
B35
B42
B57
B56
B62
B32
B52
B31
B28
B128
B25
B101
B21
B60
B40
B48
B107
z1
B5
B45
B26
C2
B108
B4

B 1 Air Flow Meter
B 4 Water Temp. Sensor
B 5 Engine Oil Pressure SW
B 21 Alternator
B 25 Back-Up Light SW
B 26 Starter
B 28 Park/Neutral Position SW
B 31 Battery Current Sensor
B 32 Engine ECU
B 35 Camshaft Position Sensor
B 40 A/C Compressor
B 42 Crankshaft Position Sensor
B 43 Glow Plug Relay
B 44 VRV (EGR)
B 45 Turbo Pressure Sensor
B 46 Suction Control Valve
B 47 Fuel Temp. Sensor
B 48 Engine Oil Level Sensor
B 49 Glow Plug
B 52 Exhaust Fuel Addition Injector Assembly
B 53 VSV (EGR)
B 56 Exhaust Gas Temperature Sensor (Front)
B 57 Exhaust Gas Temperature Sensor (Rear)
B 60 Fuel Pressure Sensor
B 61 Differential Pressure Sensor
B 62 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 97 Fuel Injector (No.1)
B 98 Fuel Injector (No.2)
B 99 Fuel Injector (No.3)
B 100 Fuel Injector (No.4)
B 101 Alternator
B 102 Injector Driver (EDU)
B 103 Injector Driver (EDU)
B 104 Injector Driver (EDU)
B 105 Injector Driver (EDU)
B 107 Throttle Body Assembly
B 108 Pressure Discharge Valve
B 128 Transmission Control ECU Assembly

C 2 Starter

z 1 EGR Valve Position Sensor

B 1
Black

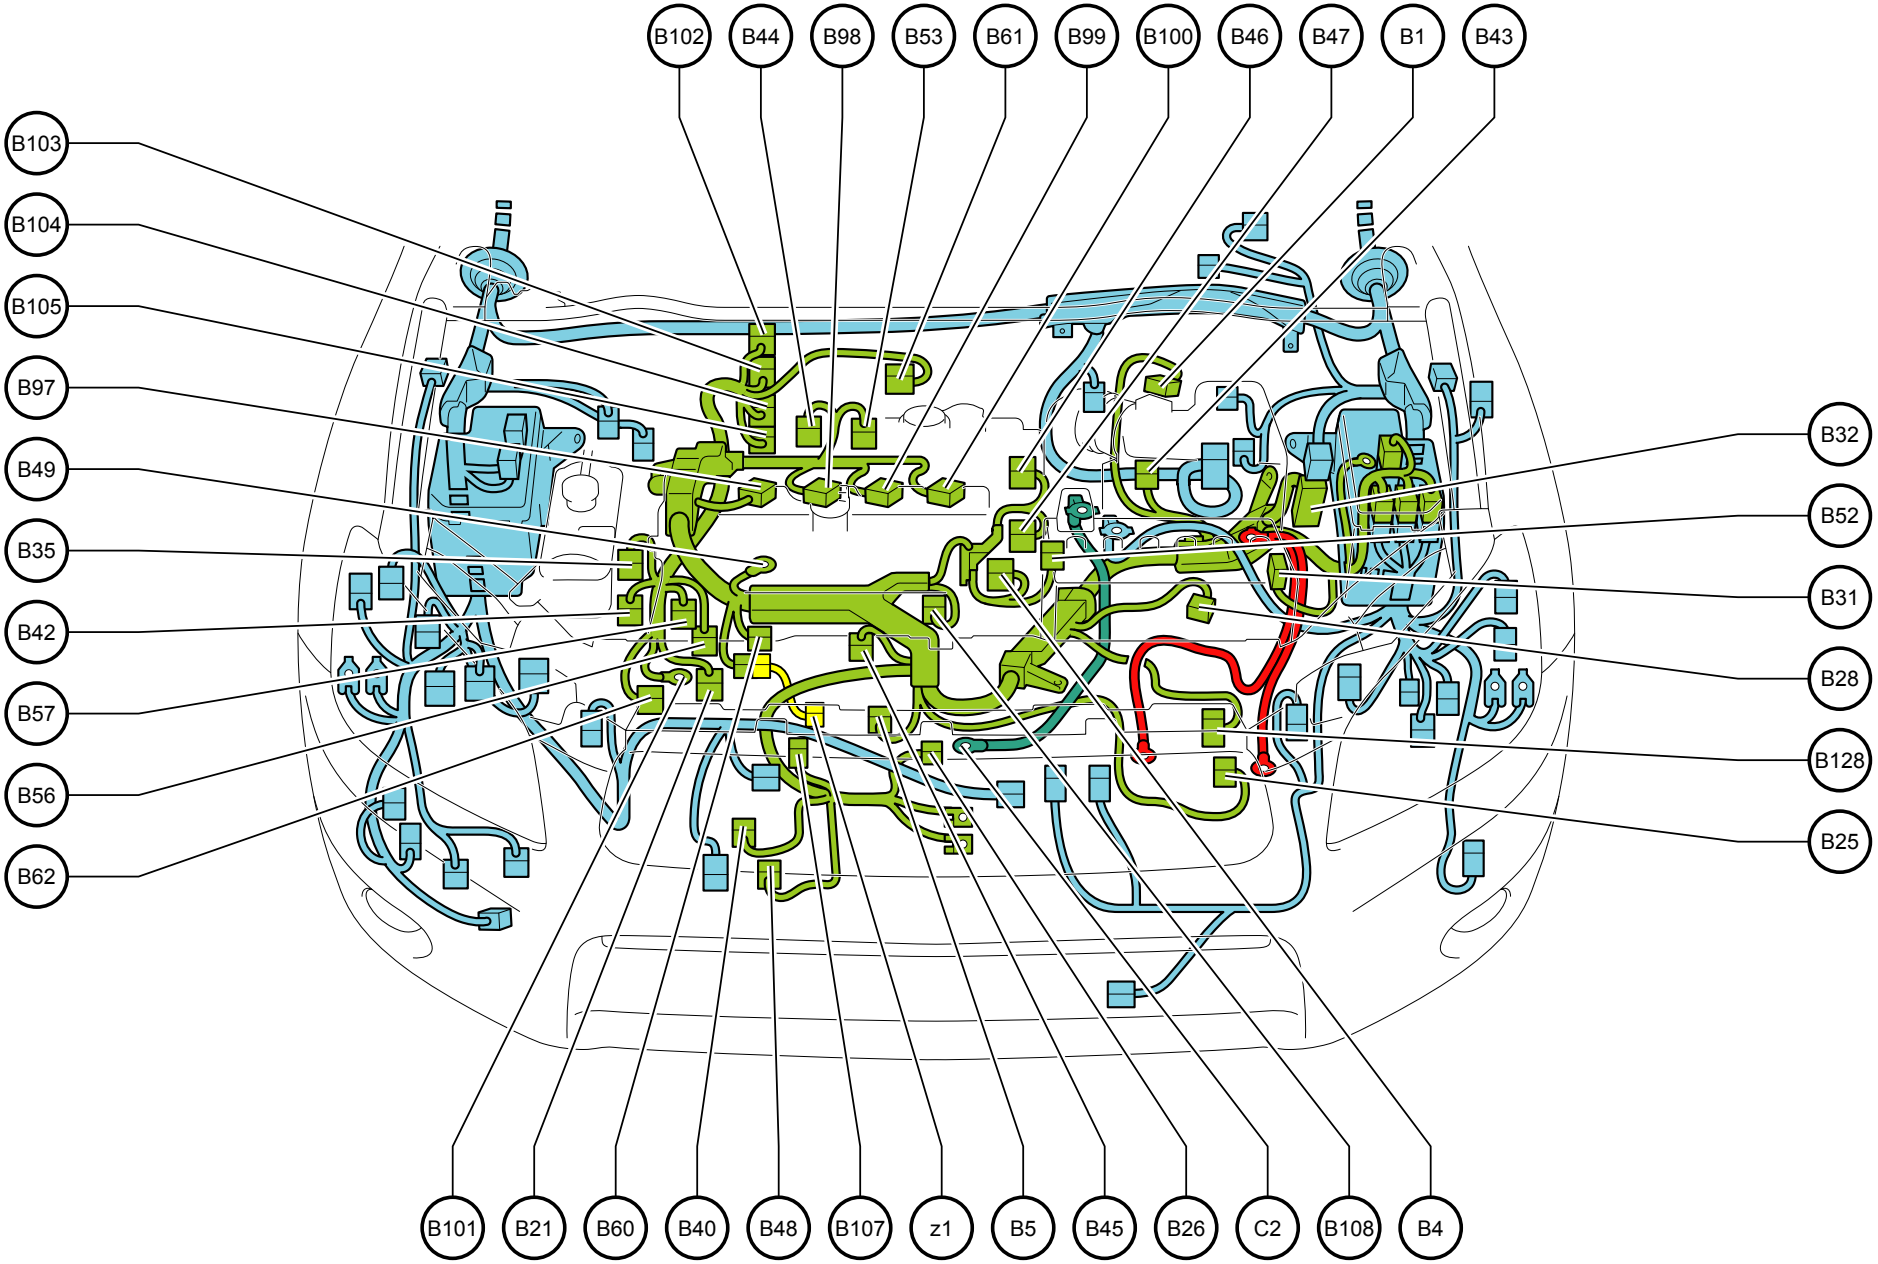

B 4
Gray




B 5
Gray



B 21
Black




B 25
Gray

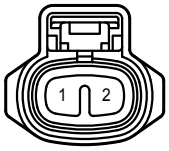


B 26
Black




B 28
Gray

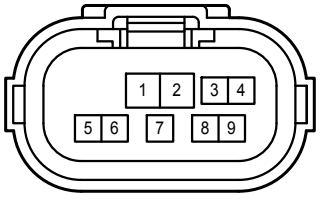

B 31
Gray

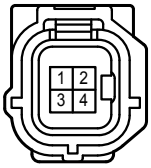


B 32
Black

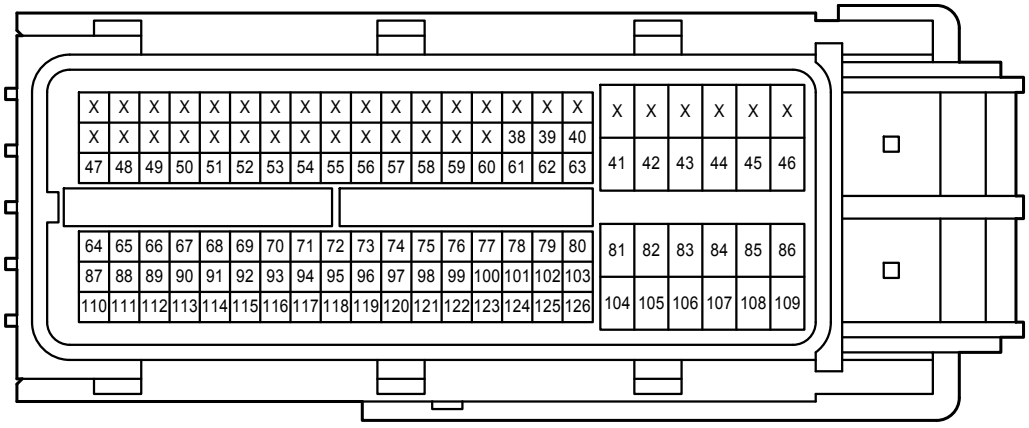

B 35
Black



B 40
Black

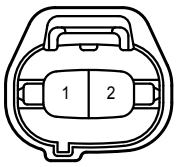

B 42
Gray




B 43
Gray



B 44
Black



B 45
Black

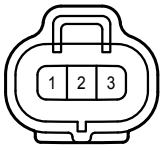


B 46
Gray




B 47
Gray



B 48
Gray

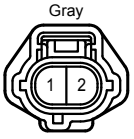


B 49



B 52
Black



B 53
Black

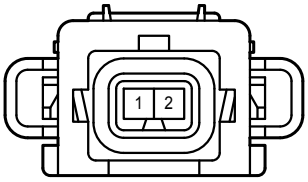

B 56
Gray



B 57
Dark Gray




B 60
Black



(2AD-FHV)


B 61
Black

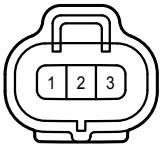


B 62
Dark Gray




B 97
Black

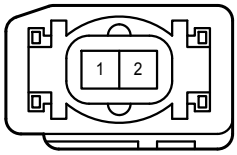


B 98
Gray

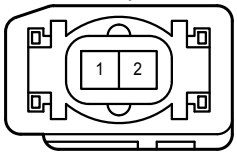


B 99
Black

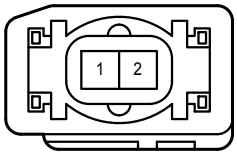

B100
Gray

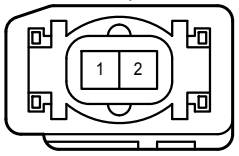

B101




B102
Gray



B103
Black




B104
Gray

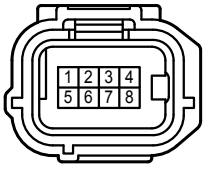


B105
Black




B107
Black

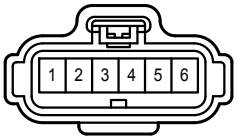


B108
Gray

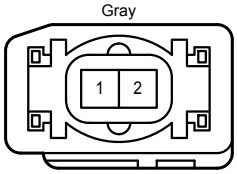

B128
Gray

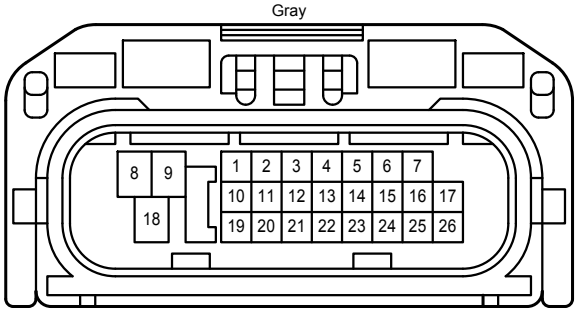

C 2



z 1
Black

