
## ■ ATF (AUTOMATIC TRANSMISSION FLUID) WS

- The ATF WS is used to reduce the resistance of the ATF and ensure fuel economy by reducing its viscosity in the practical operation range. At the high-temperature end, its viscosity is the same as that of the ATF Type T-IV, which ensures the durability of the automatic transaxle.
- There is no interchangeability between the ATF WS and other types of ATFs (ATF Type T-IV, D-II).

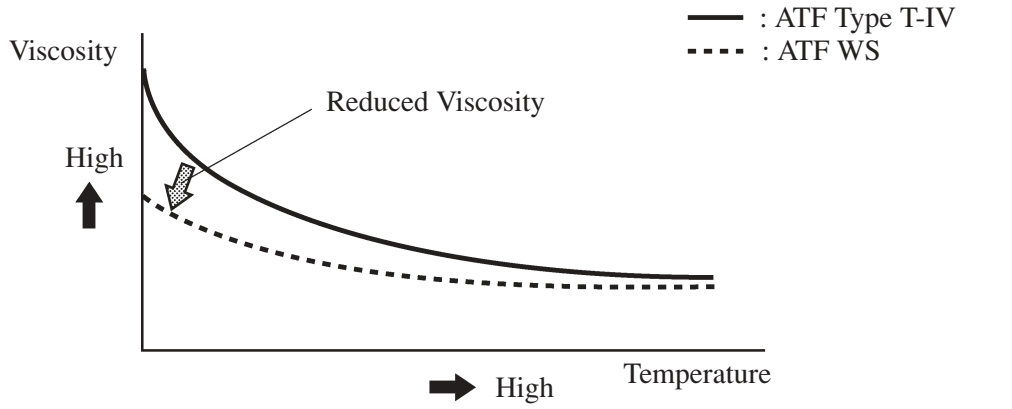


**Service Tip**

- The color of the ATF level gauge used in the ATF WS has been changed to black. (Orange was used in the ATF Type T-IV on the previous model.)
- If a vehicle with a transaxle filled with ATF WS is replenished with another type of ATF, the vehicle might not start off at extremely low temperatures.