
FRONT CROSSMEMBER (ASSY)

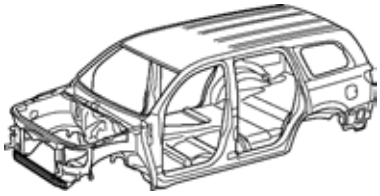


F29802A

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F29802B

REMOVAL·INSTALLATION

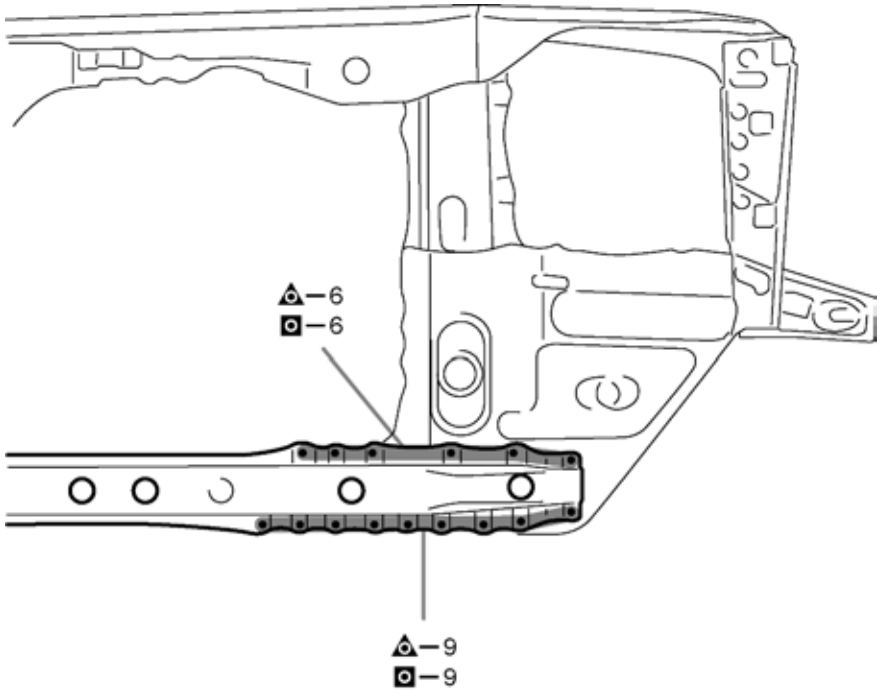

F29802

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.