
# RADIATOR SUPPORT (ASSY)

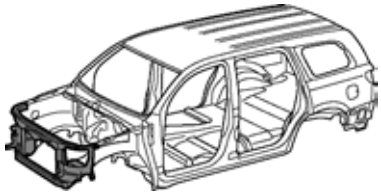


F29803A

Symbol meaning

| | |
|---|---|
| REMOVAL | : Remove Weld Points |
| INSTALLATION | : Plug Weld |

F29803B


**REMOVAL·INSTALLATION**

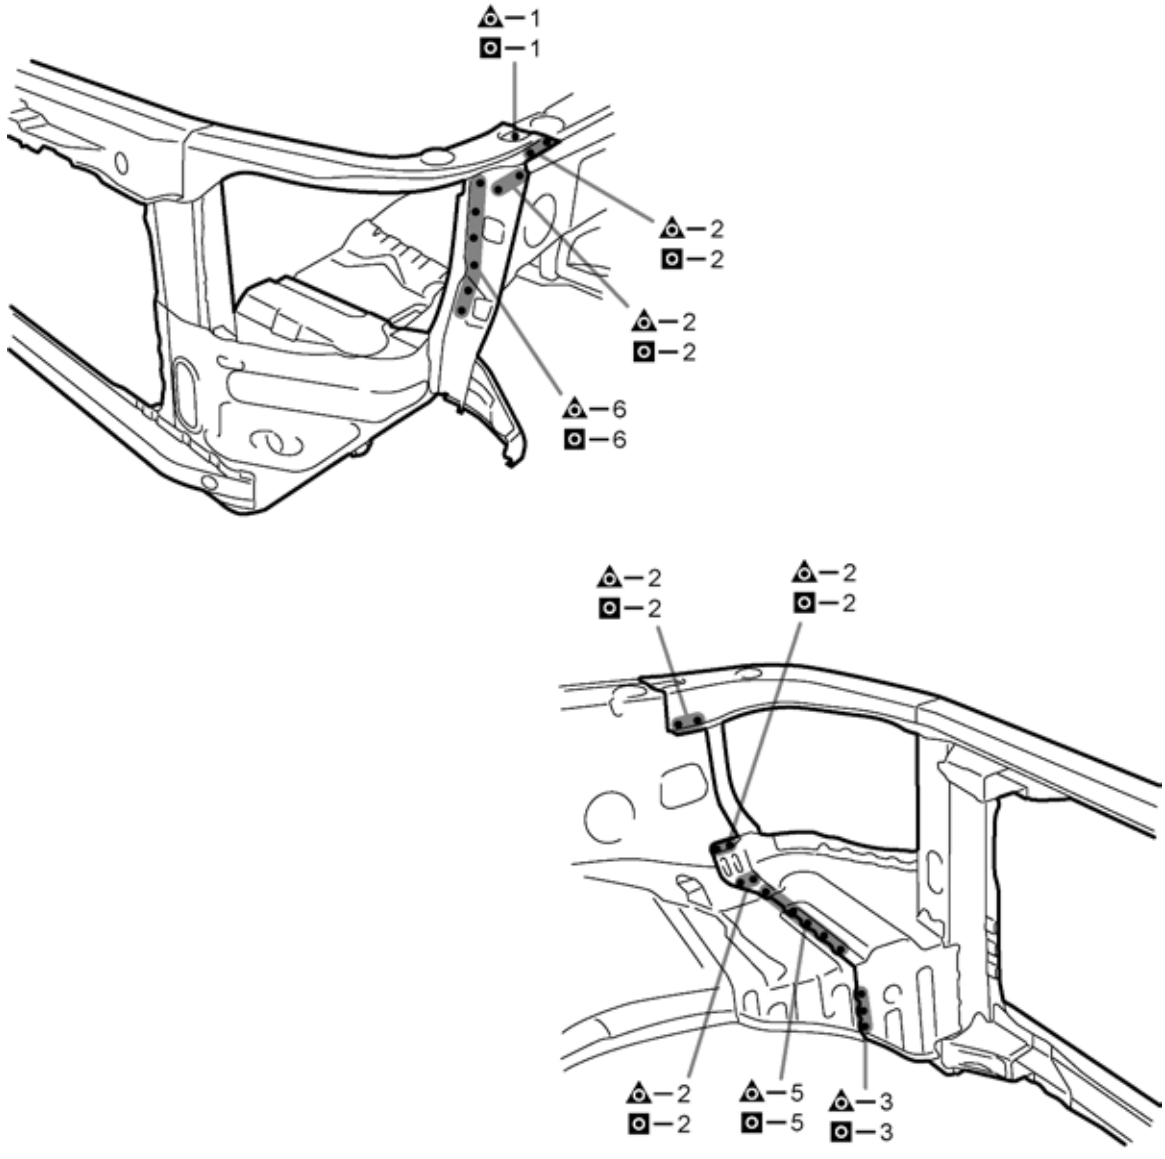


F29803

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

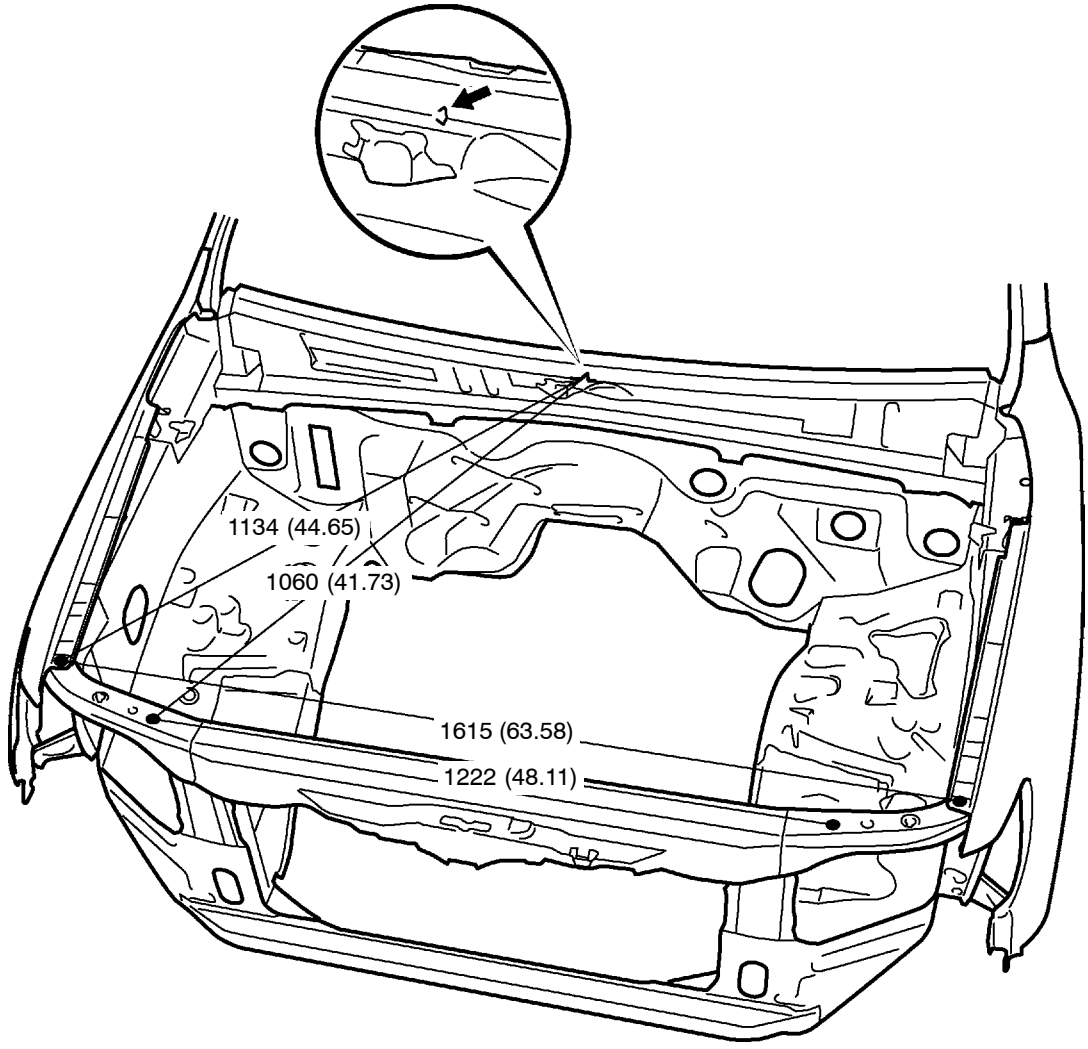


mm (in.)

F29804

**INSTALLATION POINT**

1 Measure the dimensions before installing the headlights.
2 These values are reference values.