
QUARTER WHEEL HOUSING OUTER PANEL (CUT)

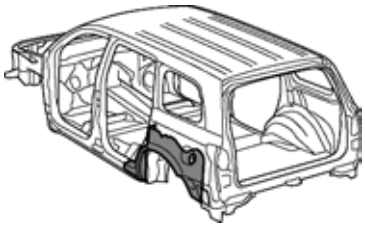

F29828A

With the quarter panel removed.


Symbol meaning


: Remove Weld Points : Cut and Join Location

F29828B

REMOVAL

[LH]

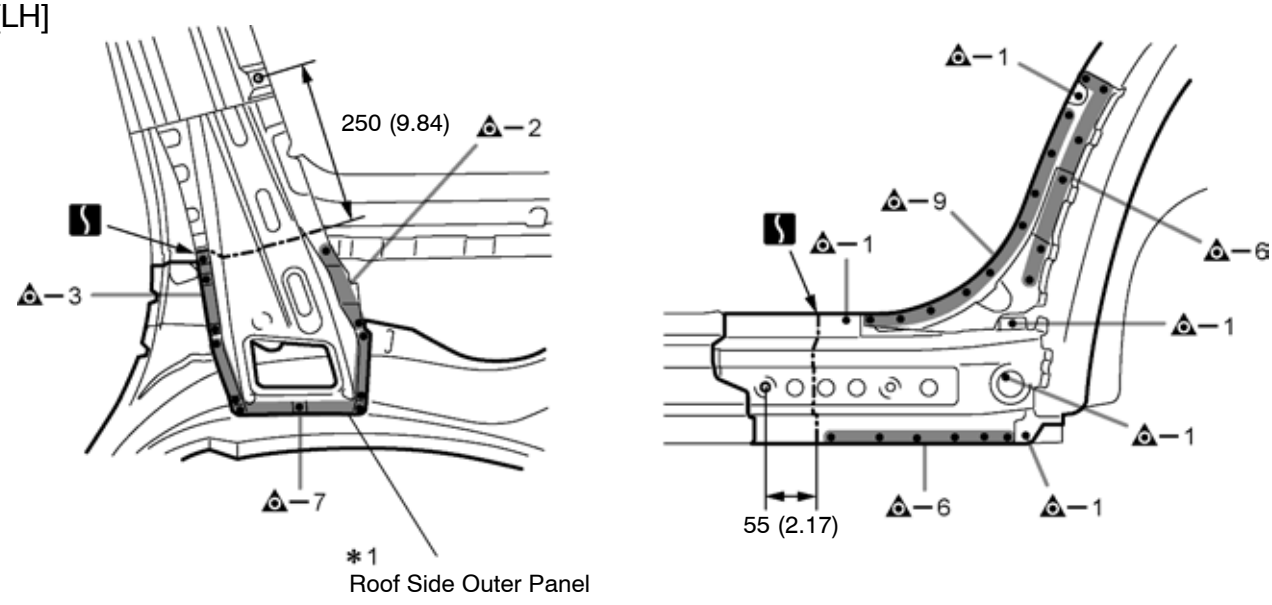

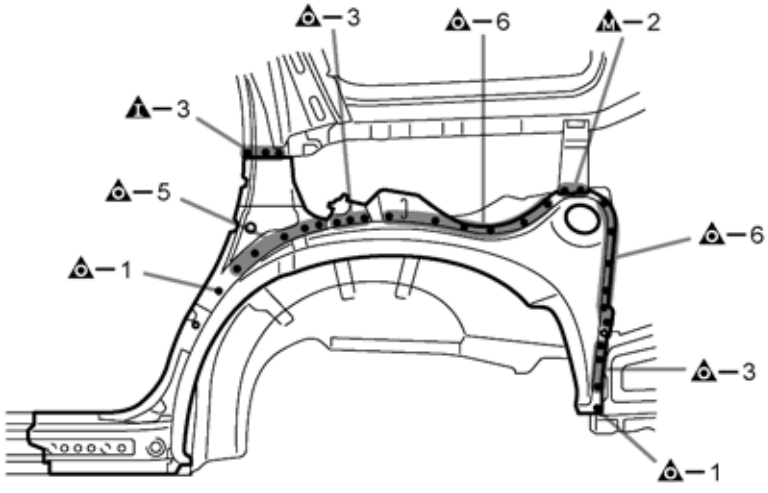


mm (in.)

F29828


REMOVAL POINT


1 After removing the roof side outer panel, remove the quarter wheel housing outer panel.
2 *1 is reused.


[RH]

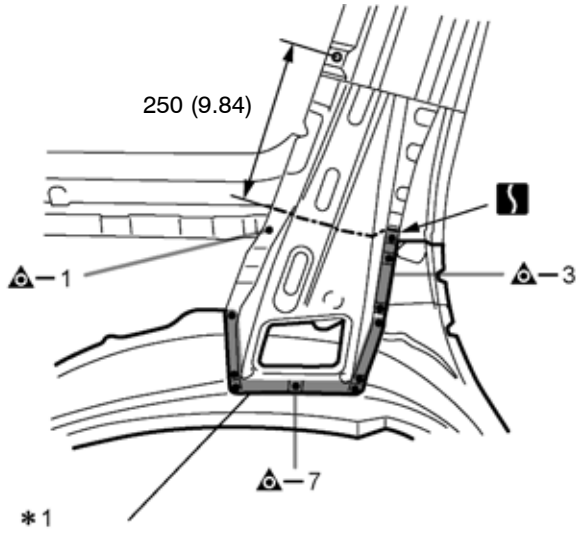

Roof Side Outer Panel

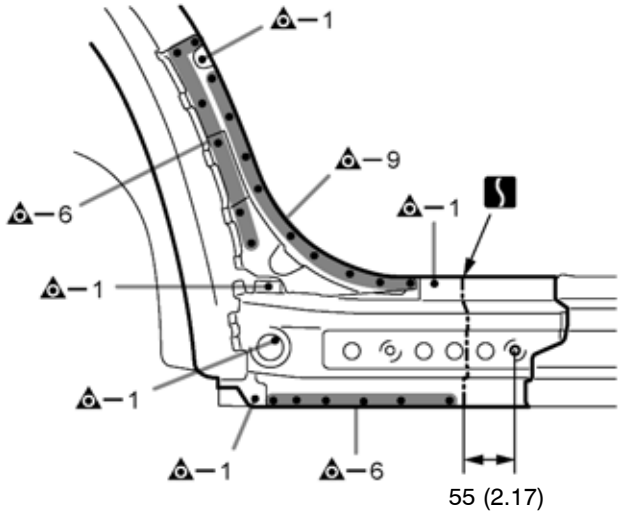

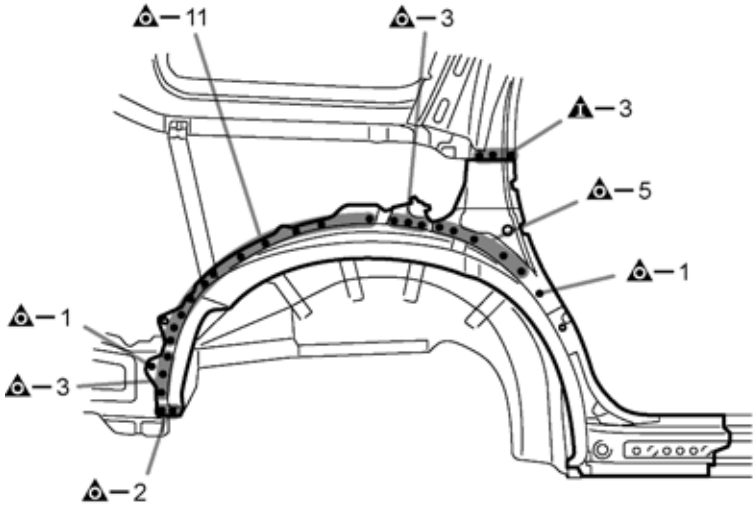

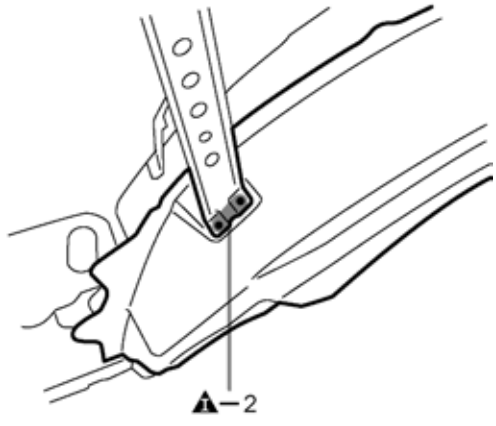

mm (in.)

F29829

REMOVAL POINT

1 After removing the roof side outer panel, remove the quarter wheel housing outer panel.

2 *1 is reused.

Symbol meaning


: Spot Weld : Plug Weld : Butt Weld

: Body Sealer

F29830B

INSTALLATION

[LH]

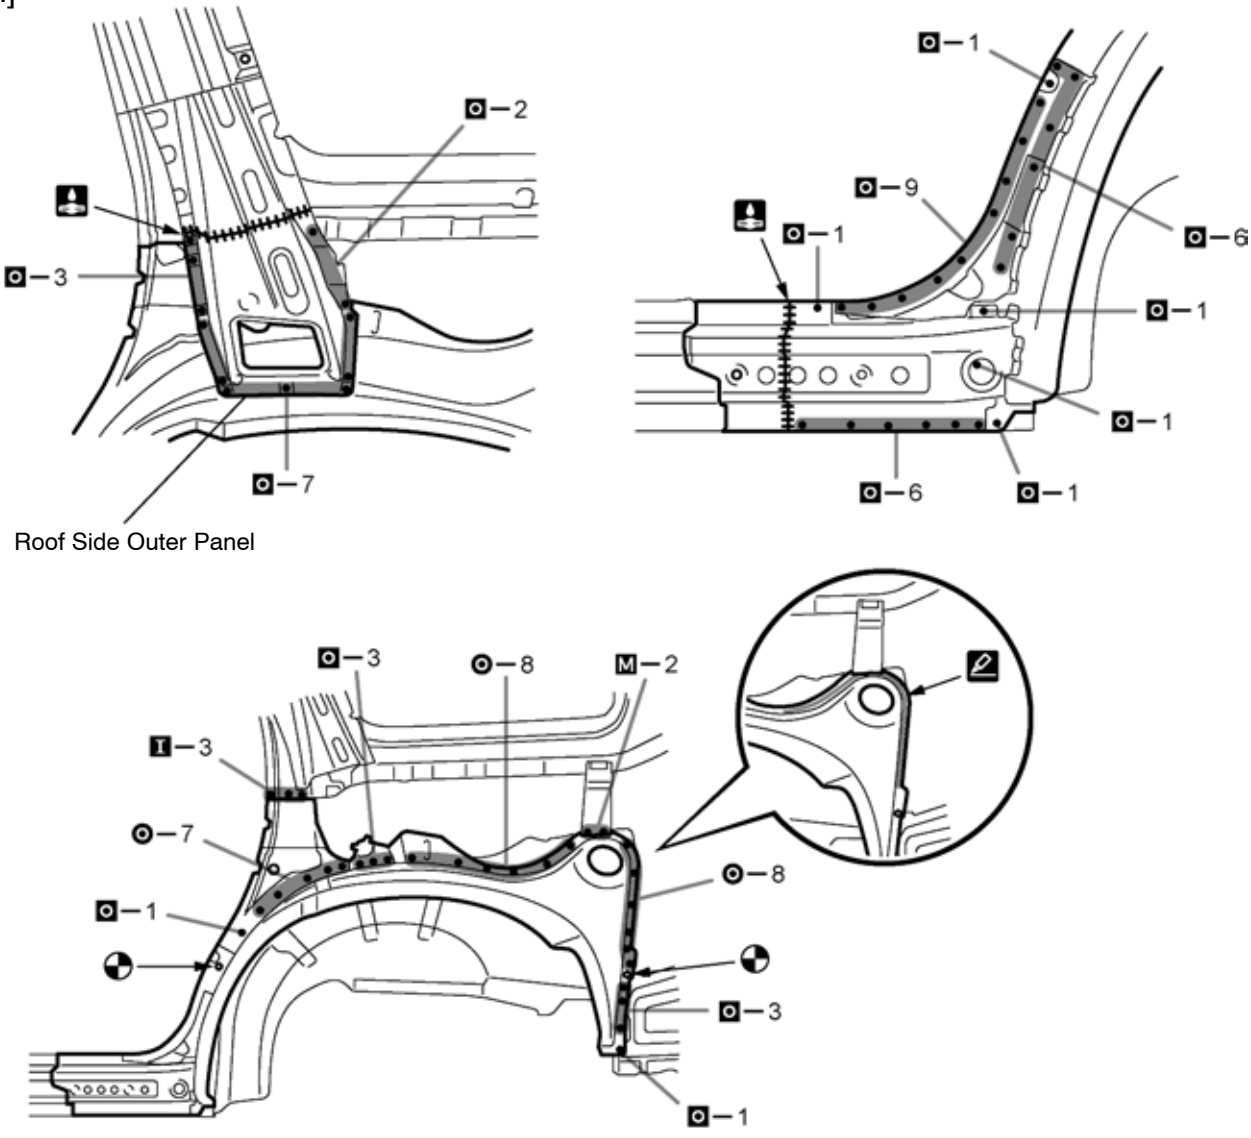


F29830

INSTALLATION POINT

1 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
2 Before installing a new part, apply body sealer.
HINT:
Apply sealer in an even, continuous bead.
3 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side outer panel.
4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

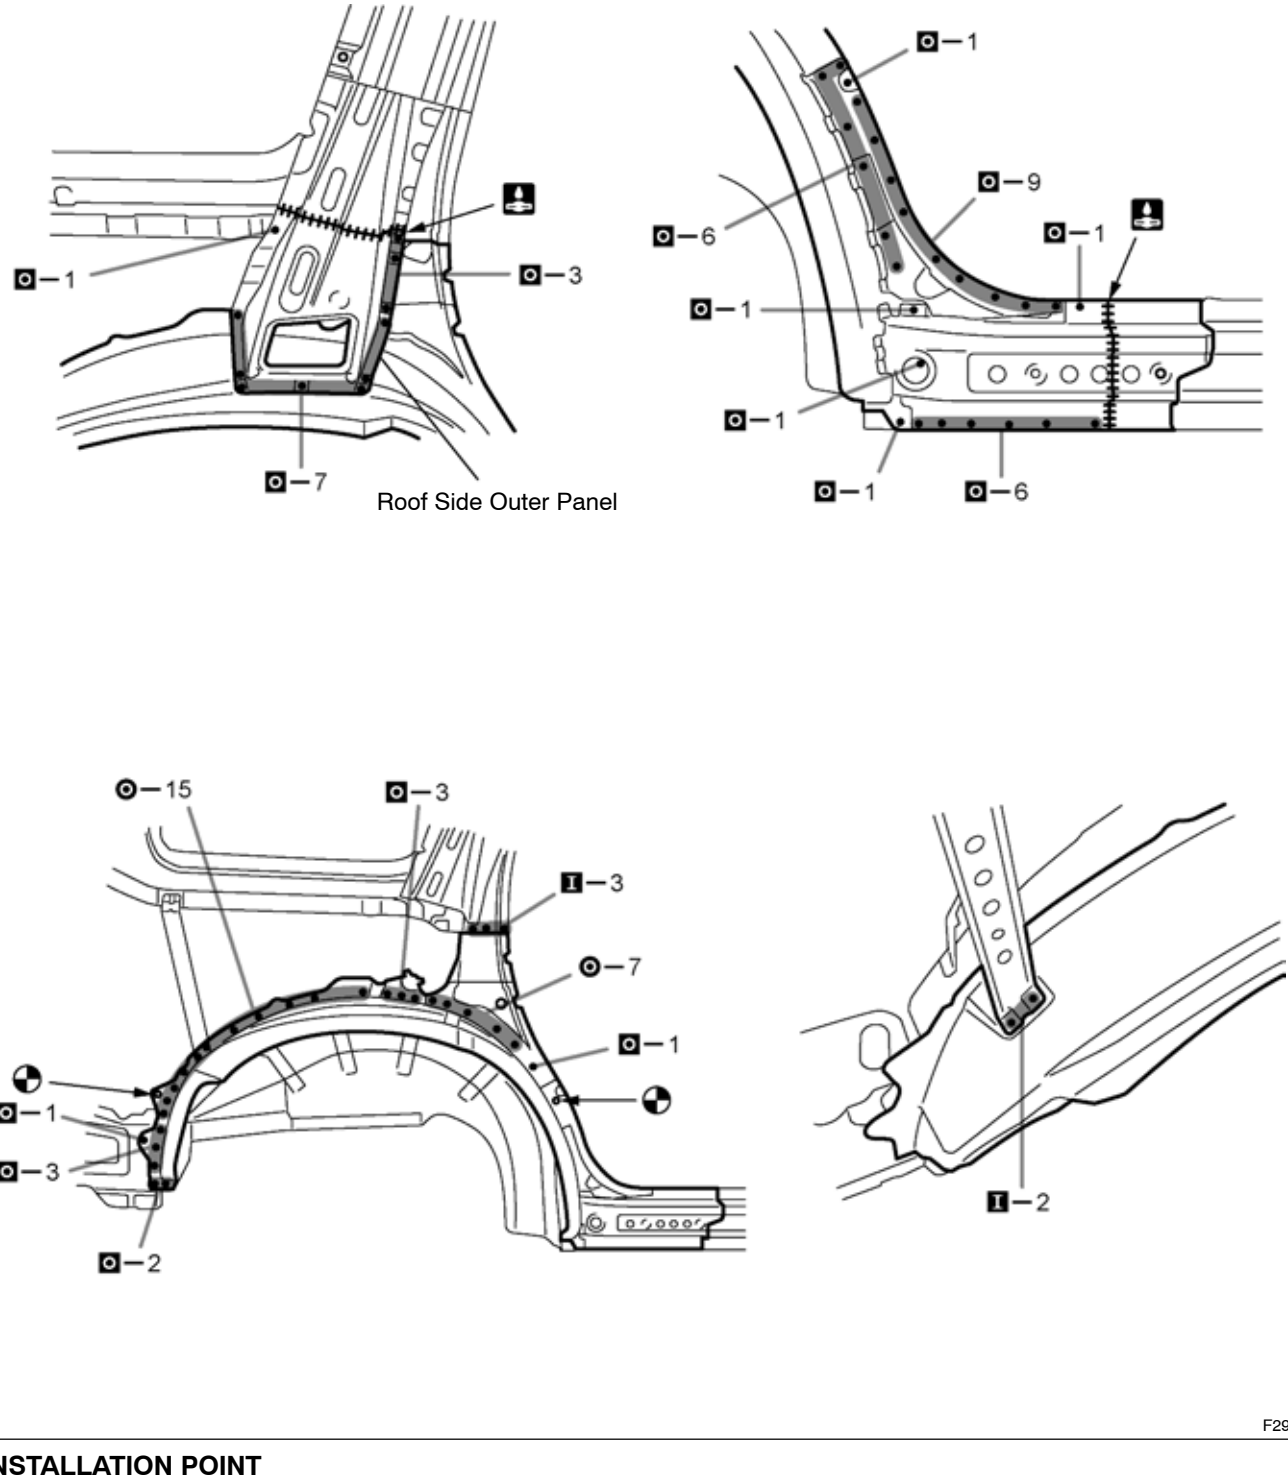

INSTALLATION POINT

1 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
2 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side outer panel.
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.