
BODY LOWER BACK INNER PANEL (ASSY)

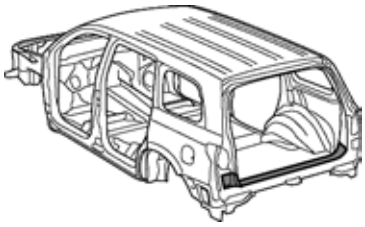


F29834A

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F29834B

REMOVAL·INSTALLATION

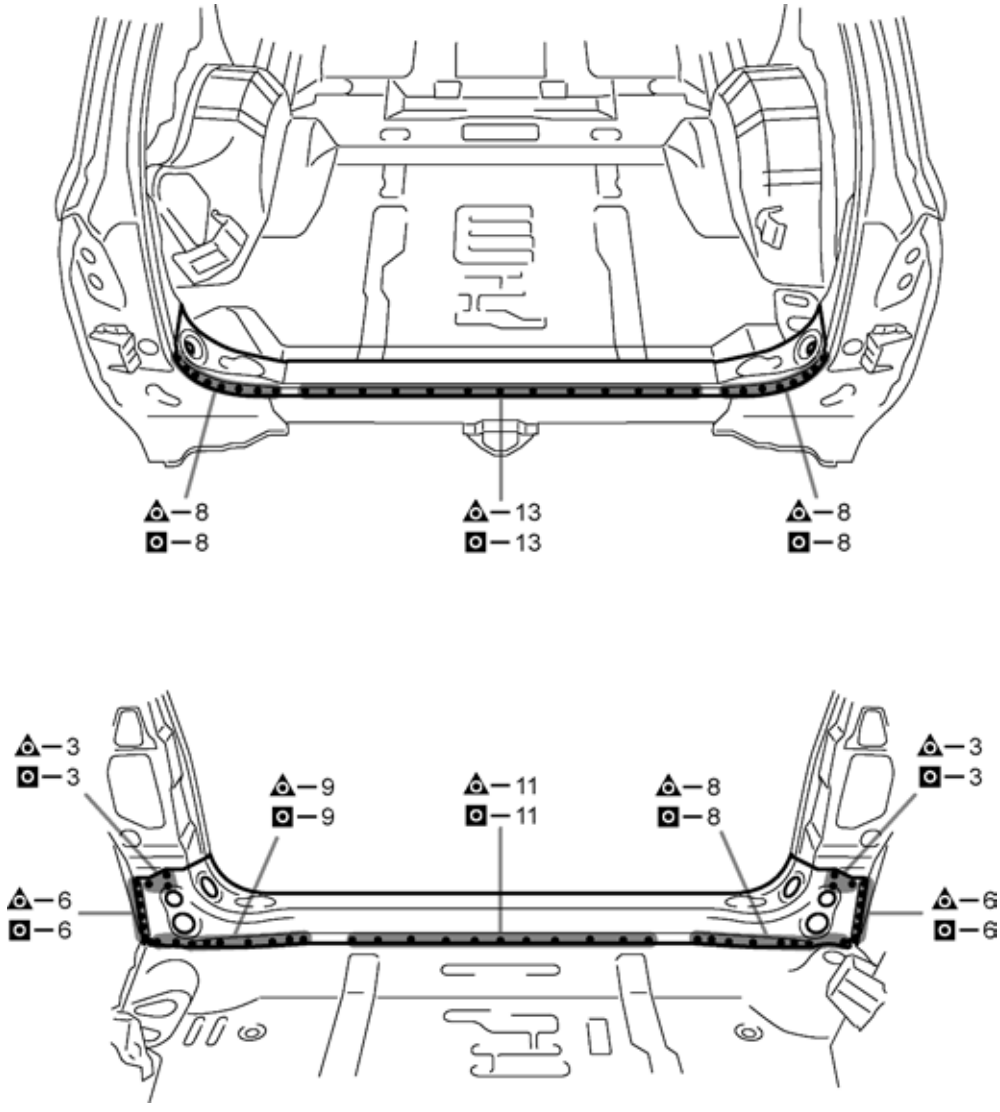

F28934

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.