
REAR FLOOR SIDE REAR MEMBER (CUT)

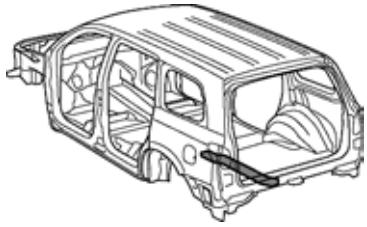

F29845A


With the rear floor pan removed.

Symbol meaning

REMOVAL		: Cut and Join Location
INSTALLATION		: Butt Weld

F29845B

REMOVAL·INSTALLATION

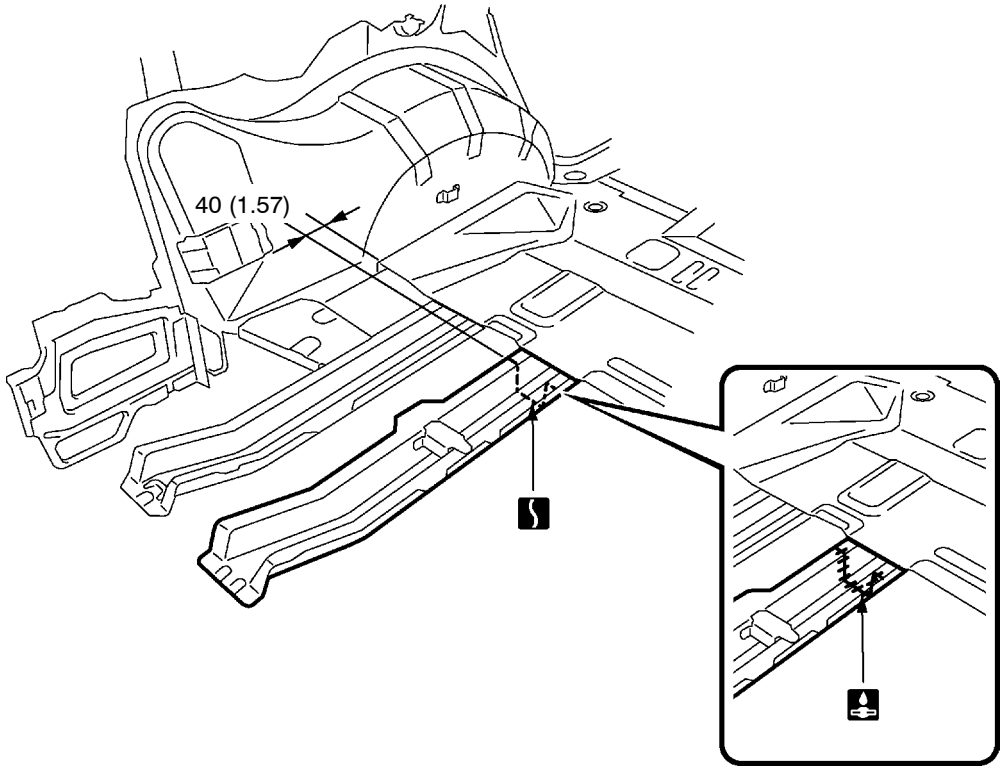

mm (in.)

F29845

INSTALLATION POINT

1 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.