7. PRECAUTIONS FOR SRS AIRBAG SYSTEM

(a) HANDLING OF A VEHICLE THAT HAS BEEN DAMAGED IN A COLLISION

(1) Refer to the TOYOTA Repair Manual for the SRS airbag system inspection procedures.

(2) If impacts are likely to occur to the front airbag sensors, side airbag sensors, rear airbag sensors, center airbag sensor or seat position airbag sensor, remove each sensor as necessary beforehand.

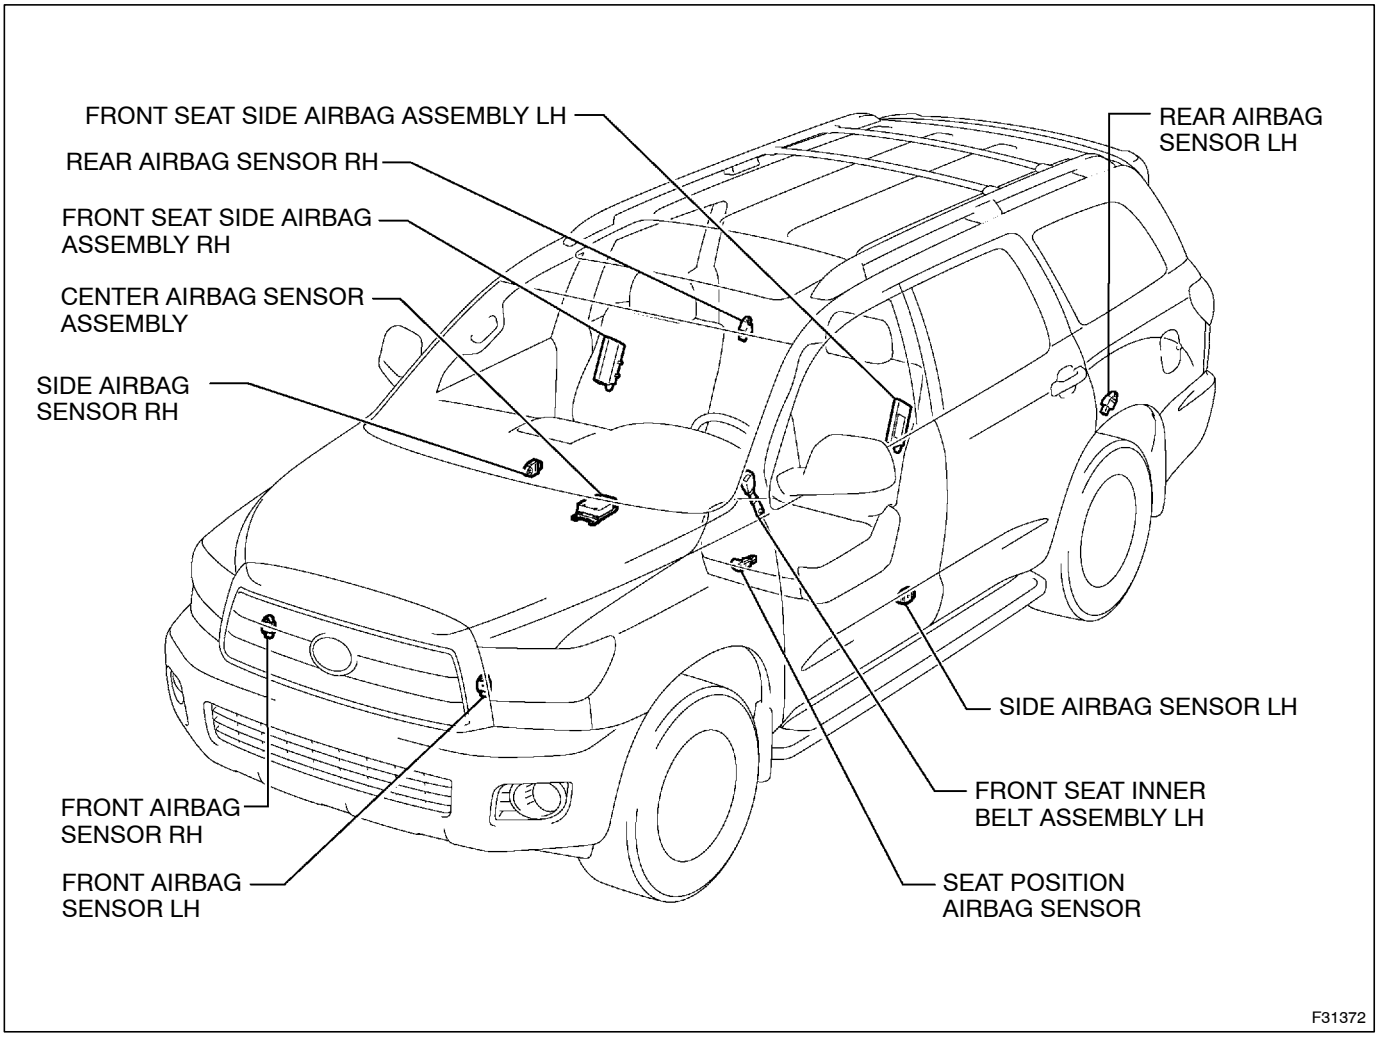
(3) Do not allow the front airbag sensors, side airbag sensors, rear airbag sensors, center airbag sensor or seat position airbag sensor to become heated to high temperatures.

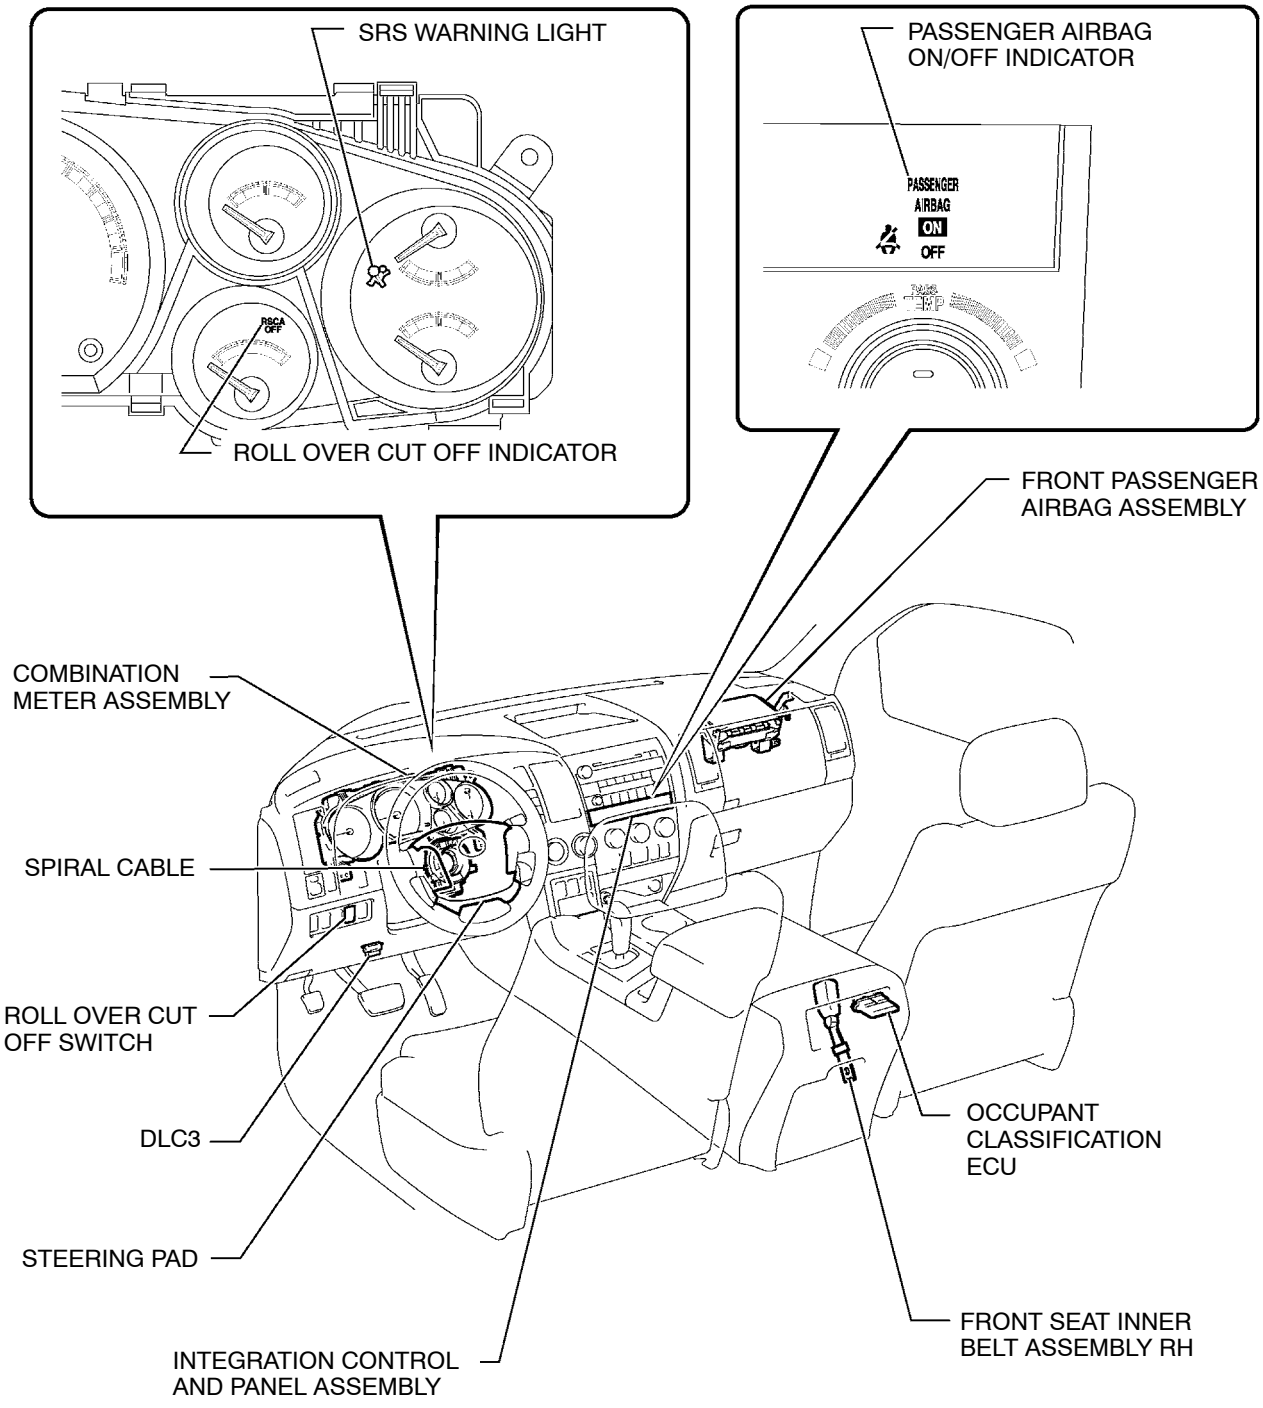
(4) Check the wire harnesses and connectors for damage and/or melting, as some areas of the airbags and seat belt pretensioners may heat up to several hundred degrees when they operate.

(b) PRECAUTIONS FOR USING AN ELECTRIC WELDER

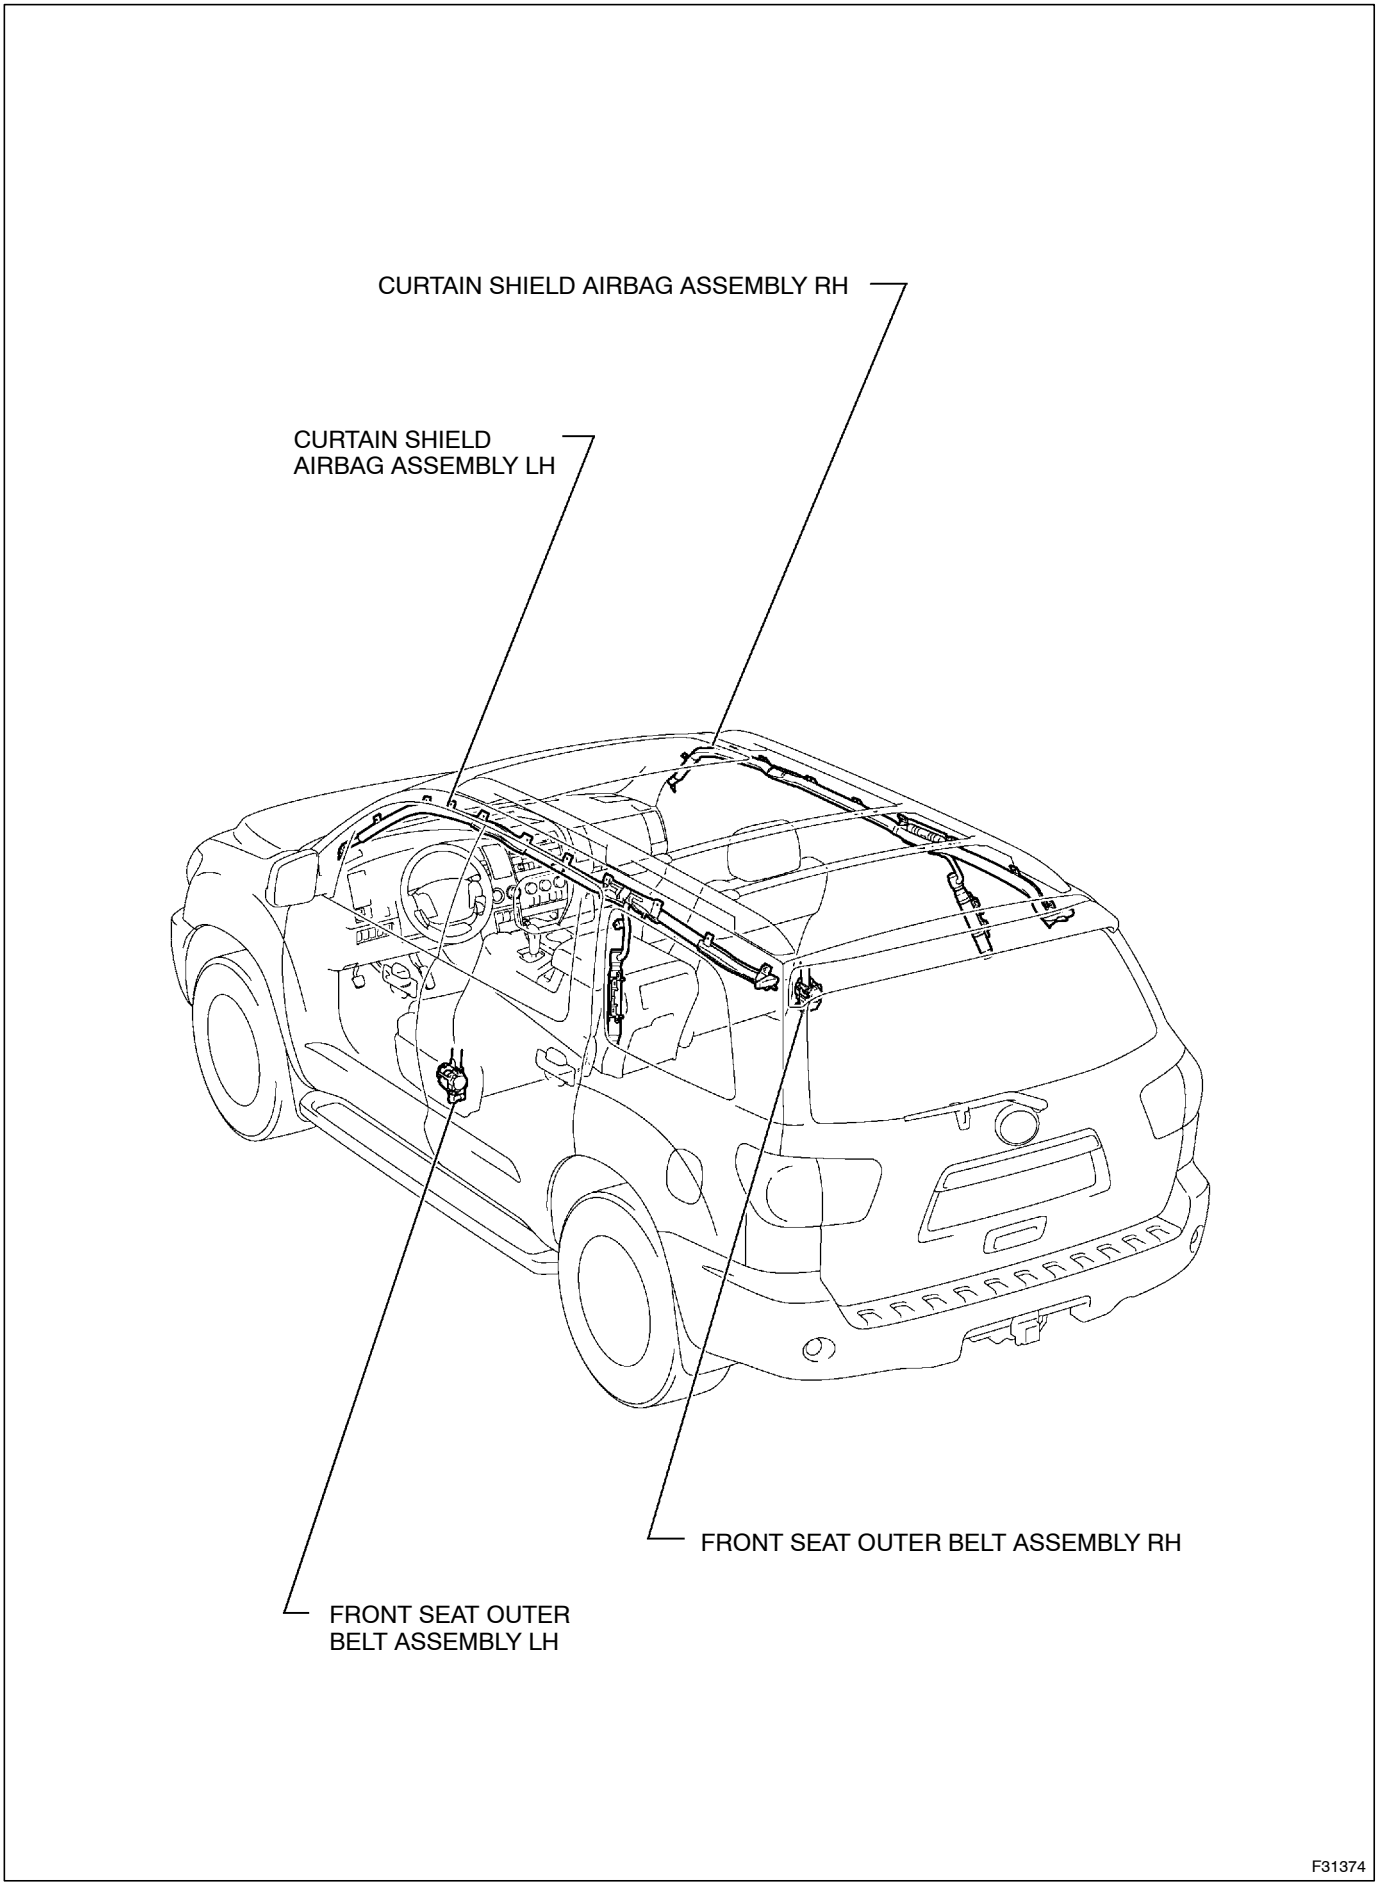
(1) Check the Diagnostic Trouble Codes (DTCs).

1. If one or more DTCs are displayed;
   - Disconnect the negative (–) terminal cable from the battery.
   - Disconnect all the malfunctioning circuit connectors.
   - Disconnect the airbag sensor assembly connector.
2. If DTCs are NOT displayed;
   - Inspect for damage to the electric wiring harnesses and connectors.
   - Disconnect the negative (–) terminal cable from the battery.
   - Disconnect the airbag sensor assembly connector.




SRS WARNING LIGHT
PASSENGER AIRBAG ON/OFF INDICATOR
PASSENGER
AIRBAG
ON
OFF
RSCA OFF
ROLL OVER CUT OFF INDICATOR
FRONT PASSENGER AIRBAG ASSEMBLY
COMBINATION METER ASSEMBLY
SPIRAL CABLE
ROLL OVER CUT OFF SWITCH
DLC3
STEERING PAD
INTEGRATION CONTROL AND PANEL ASSEMBLY
OCCUPANT CLASSIFICATION ECU
FRONT SEAT INNER BELT ASSEMBLY RH

F31373


CURTAIN SHIELD AIRBAG ASSEMBLY RH
CURTAIN SHIELD AIRBAG ASSEMBLY LH
FRONT SEAT OUTER BELT ASSEMBLY RH
FRONT SEAT OUTER BELT ASSEMBLY LH
F31374