
2. NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP VEHICLE

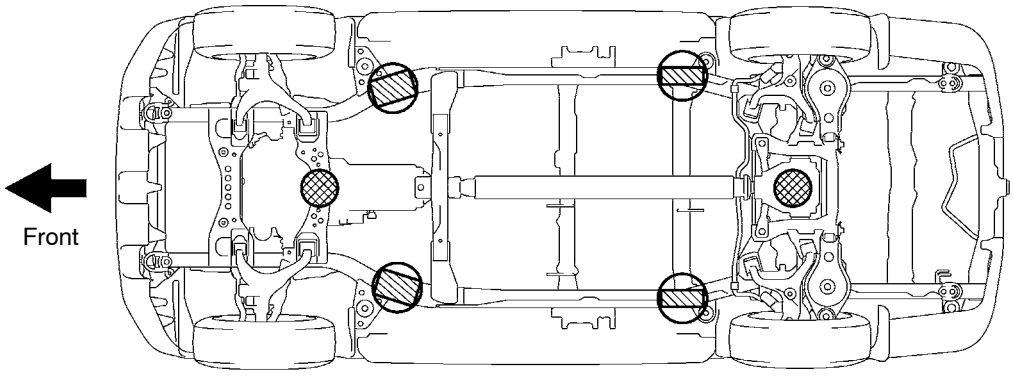

: JACK POSITION

Front:Center of crossmember
Rear: Center of rear axle housing
CAUTION:
When jacking up the vehicle, make sure the vehicle is not carrying any extra weight.

: SUPPORT POSITION Safety stand

: SUPPORT POSITION Swing arm type lift

F31386