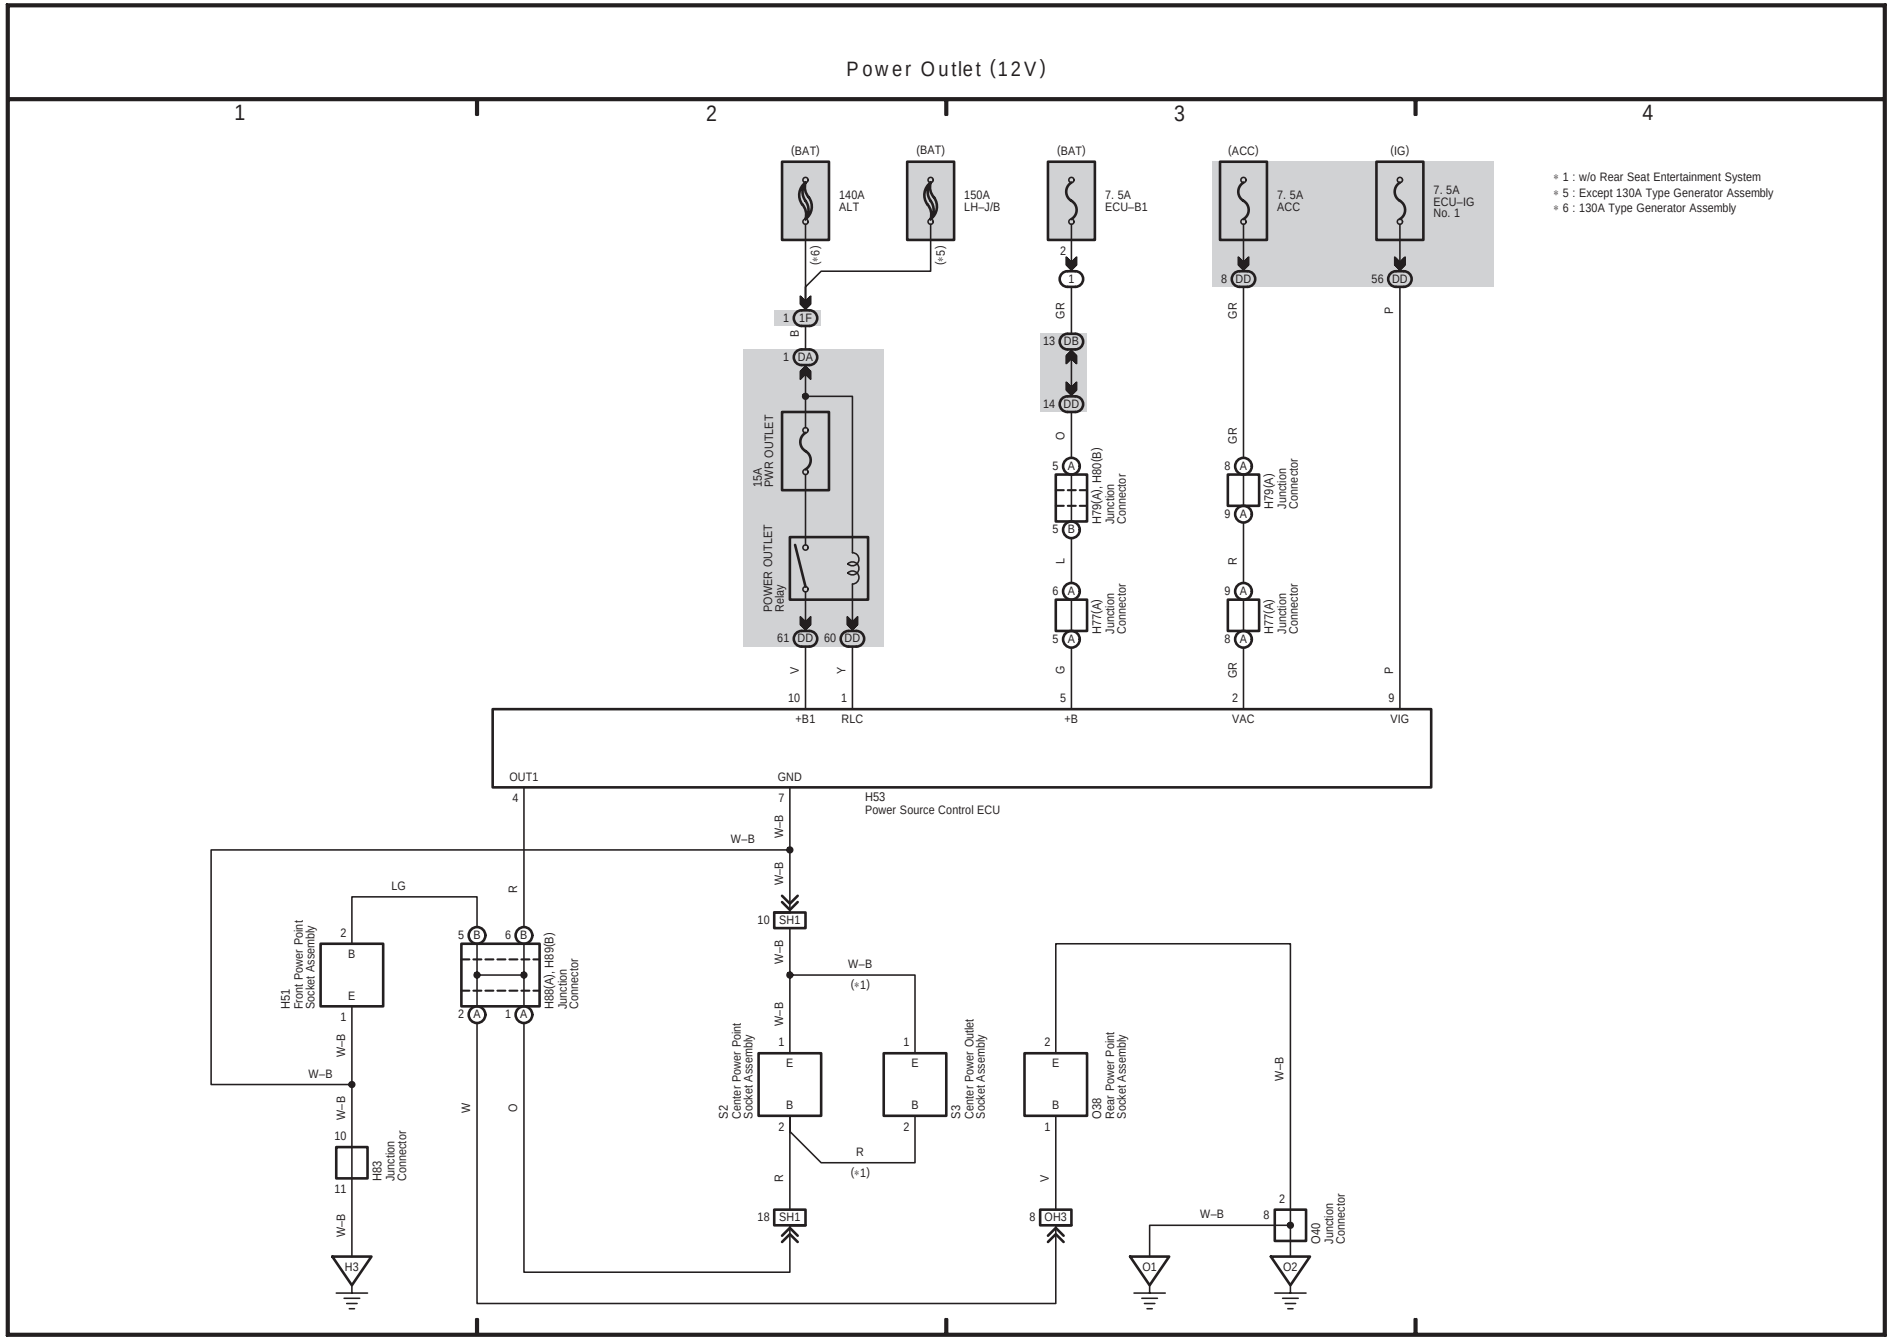

Power Outlet (12V)
1
2
3
4
(BAT)
140A ALT
(BAT)
150A LH–J/B
(BAT)
7. 5A ECU–B1
(ACC)
7. 5A ACC
(IG)
7. 5A ECU–IG No. 1
∗ 1 : w/o Rear Seat Entertainment System
∗ 5 : Except 130A Type Generator Assembly
∗ 6 : 130A Type Generator Assembly
15A PWR OUTLET
POWER OUTLET Relay
H79(A), H80(B) Junction Connector
H79(A) Junction Connector
H77(A) Junction Connector
H77(A) Junction Connector
+B1
RLC
+B
VAC
VIG
OUT1
GND
H53 Power Source Control ECU
H51 Front Power Point Socket Assembly
H88(A), H89(B) Junction Connector
H83 Junction Connector
S2 Center Power Point Socket Assembly
S3 Center Power Outlet Socket Assembly
O38 Rear Power Point Socket Assembly
O40 Junction Connector
H3
O1
O2