
FRONT BODY PILLAR LOWER GUSSET (ASSY)

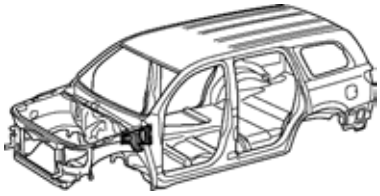


F29806A


Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F29806B

REMOVAL·INSTALLATION

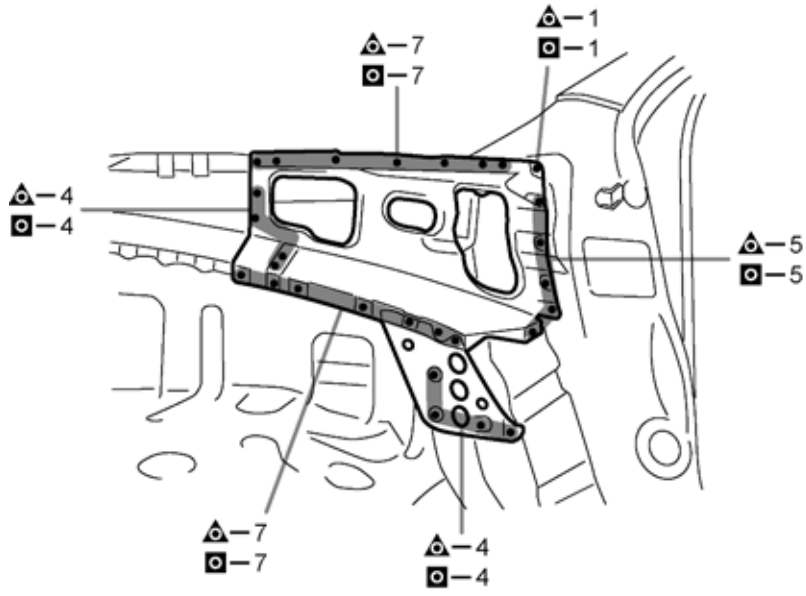

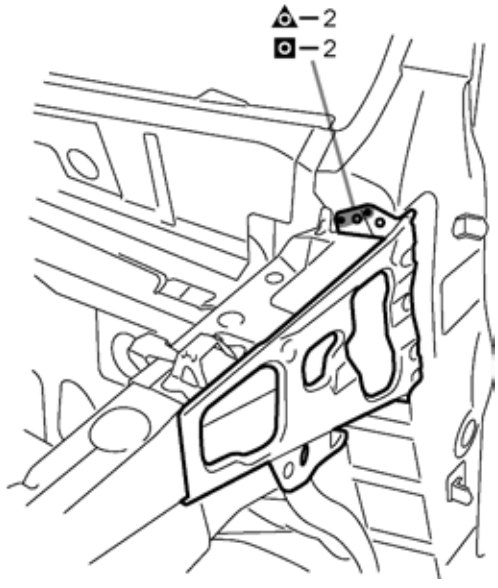

F29806

INSTALLATION POINT

1 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.