
# ROCKER OUTER PANEL (CUT-P)

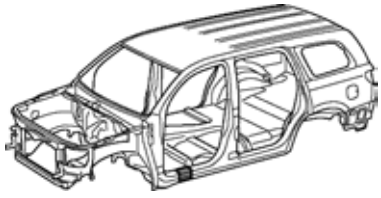

F29821A

Symbol meaning


: Remove Weld Points : Cut and Join Location

REMOVAL : Cut Location for Supply Parts

INSTALLATION : Plug Weld : Butt Weld

F29821B

## REMOVAL·INSTALLATION

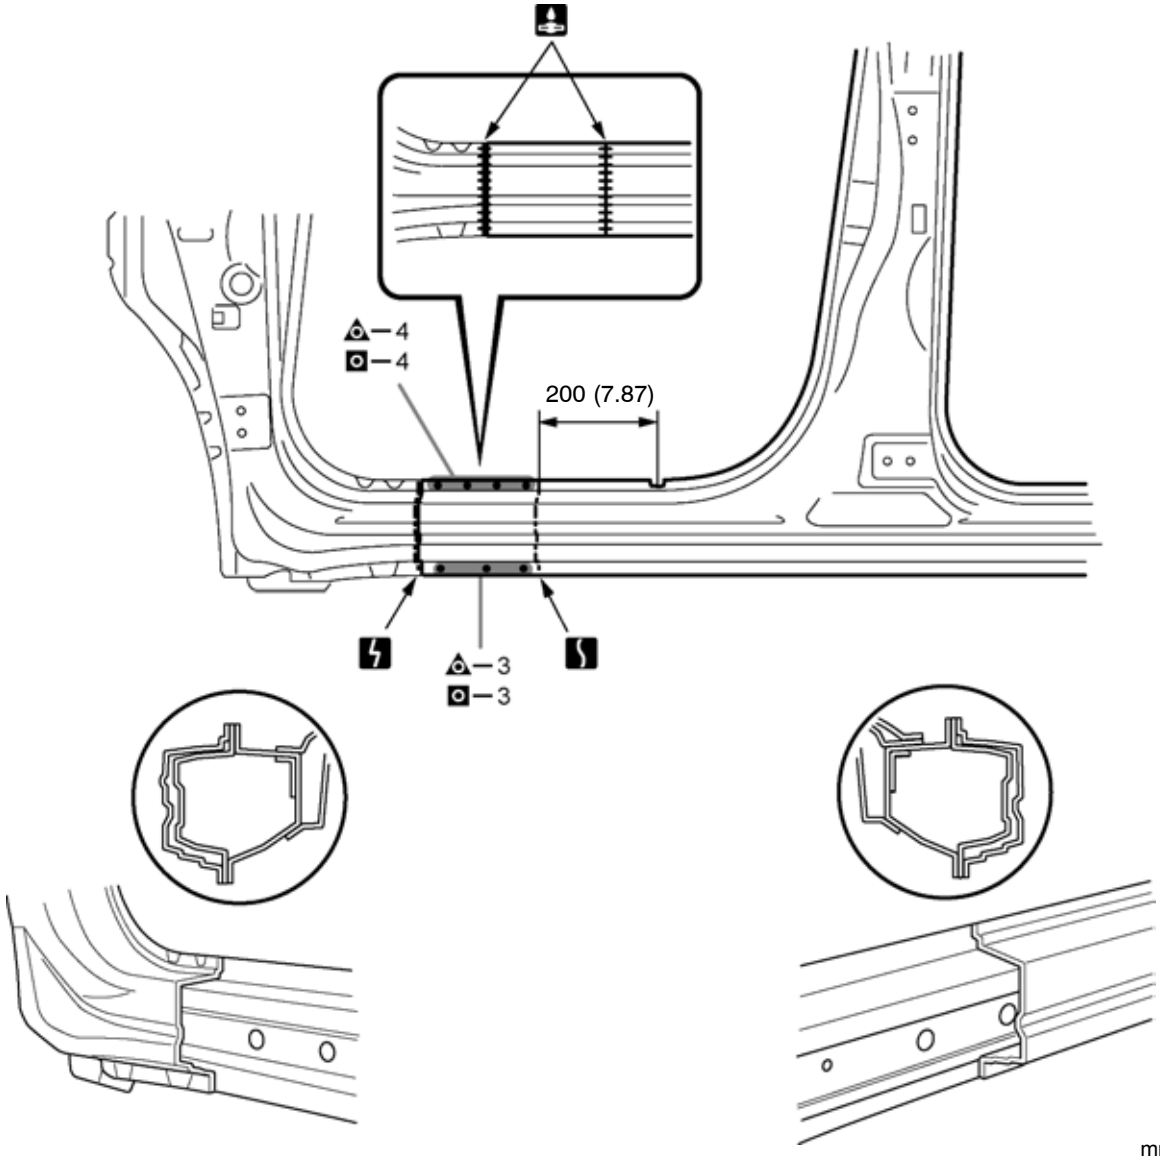


mm (in.)

F29821

### INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.