
ROOF PANEL (ASSY): Normal Roof

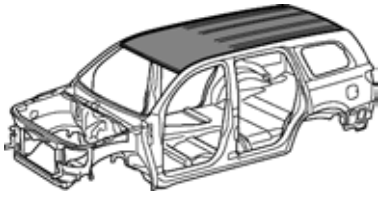

F29846A


Symbol meaning


: Remove Weld Points

F29846B

REMOVAL


[w/o Roof Rack]

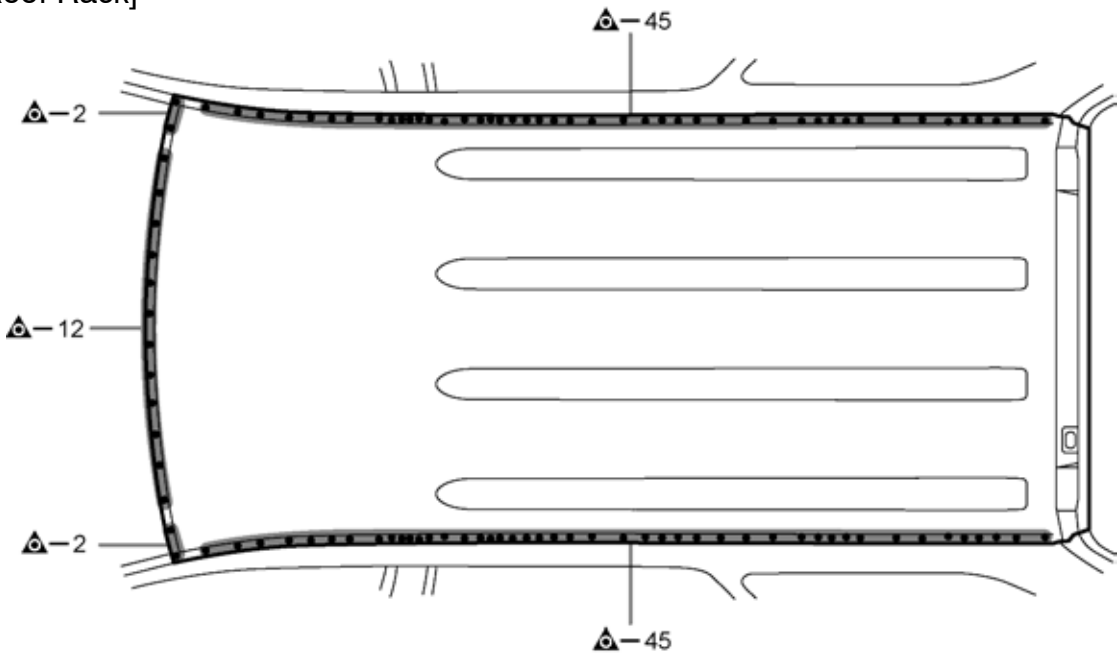


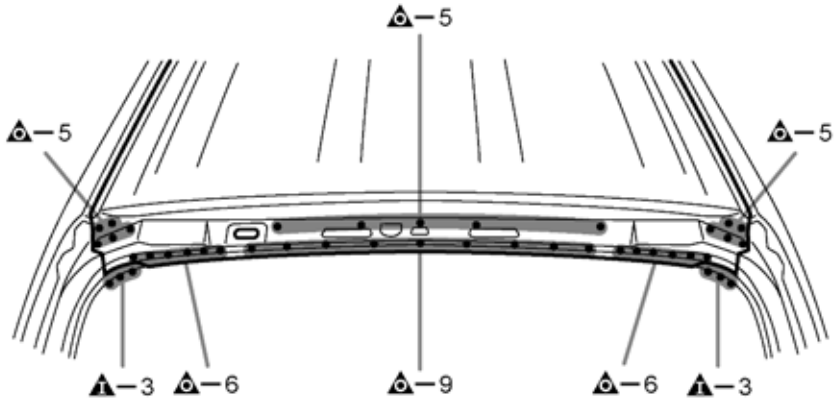

F29846

[w/ Roof Rack]

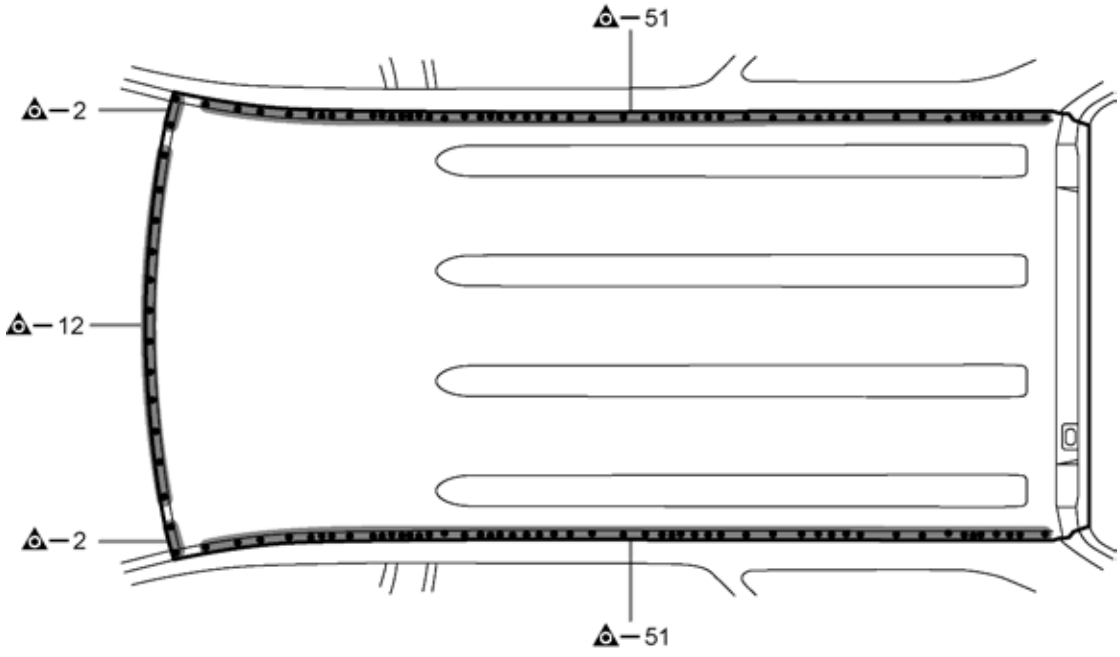

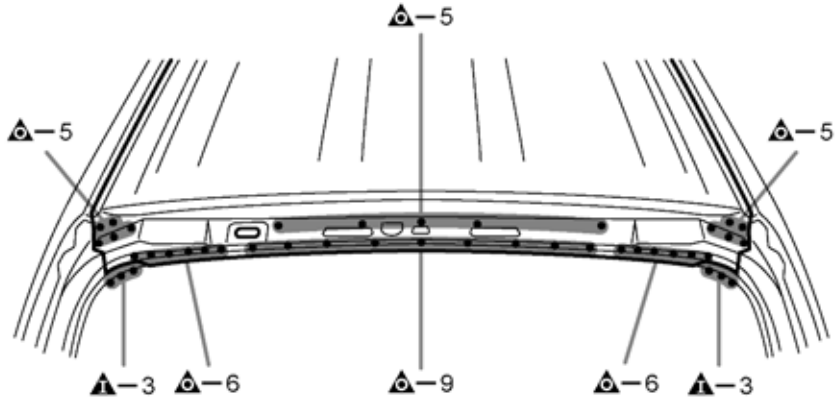

F29847


Symbol meaning

: Plug Weld : Body Sealer

F29848B

INSTALLATION

[w/o Roof Rack]

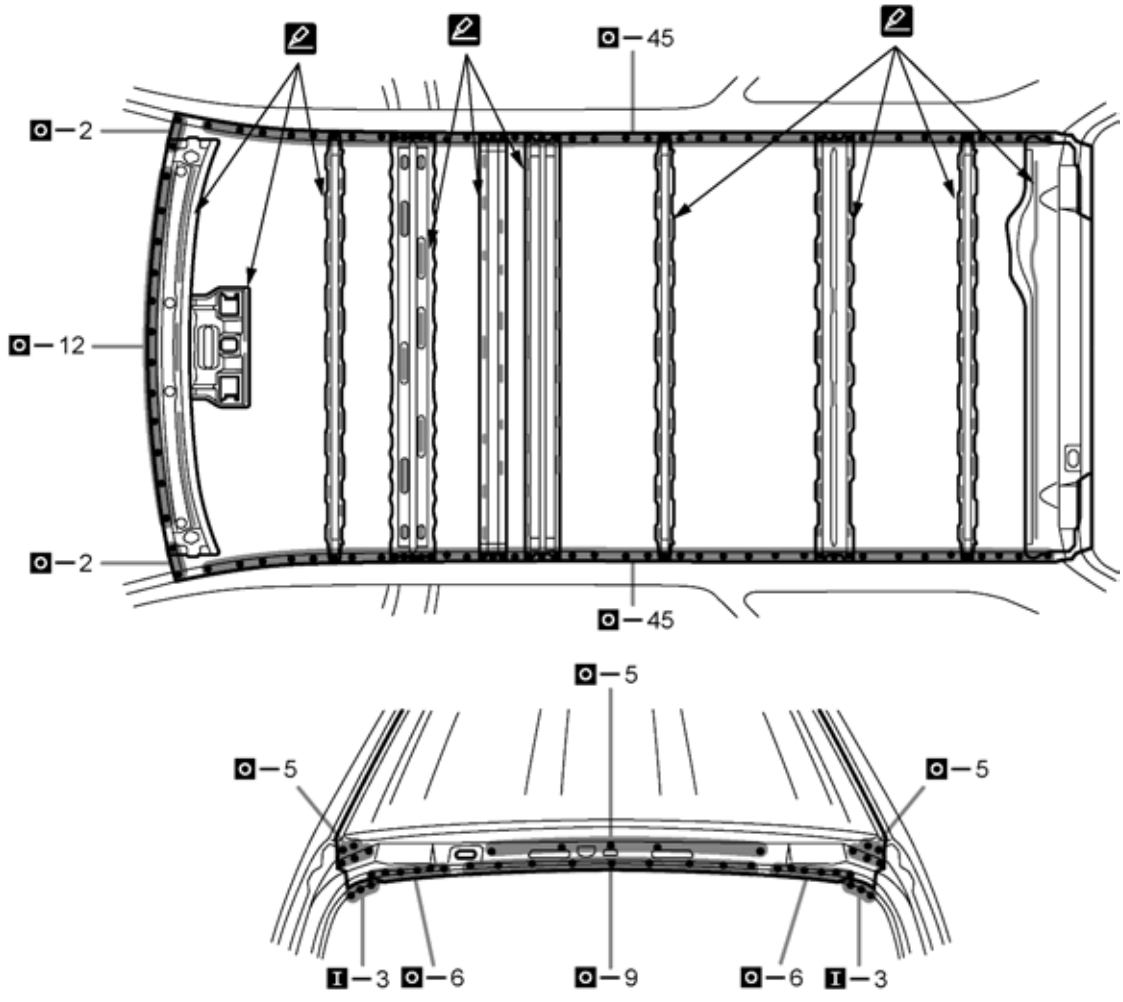


F29848

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After the roof panel reinforcement is welded to the new parts, install the roof panel to the vehicle side.
4 Before temporarily installing the new parts, apply body sealer to the windshield header panel, roof panel reinforcement and back door opening frame.
HINT:
Apply just enough sealer for the new parts to make contact.
5 After welding, apply the foamed sealing material to the corresponding parts. (See the paint·coating)
6 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
7 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[w/ Roof Rack]

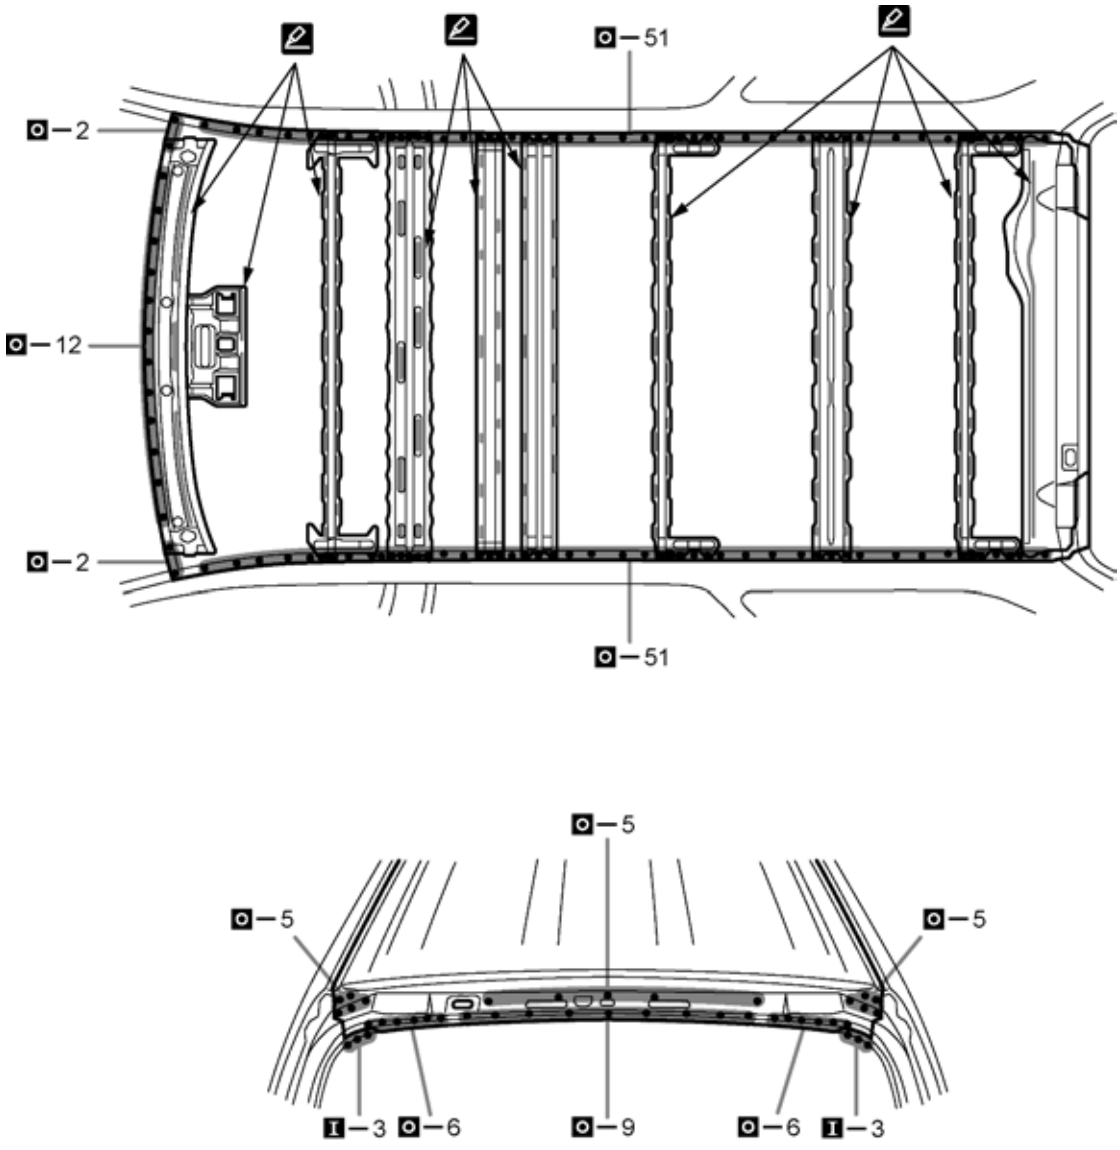

F29849

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After the roof panel reinforcement is welded to the new parts, install the roof panel to the vehicle side.
4 Before temporarily installing the new parts, apply body sealer to the windshield header panel, roof panel reinforcement and back door opening frame.
HINT:
Apply just enough sealer for the new parts to make contact.
5 After welding, apply the foamed sealing material to the corresponding parts. (See the paint·coating)
6 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
7 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.