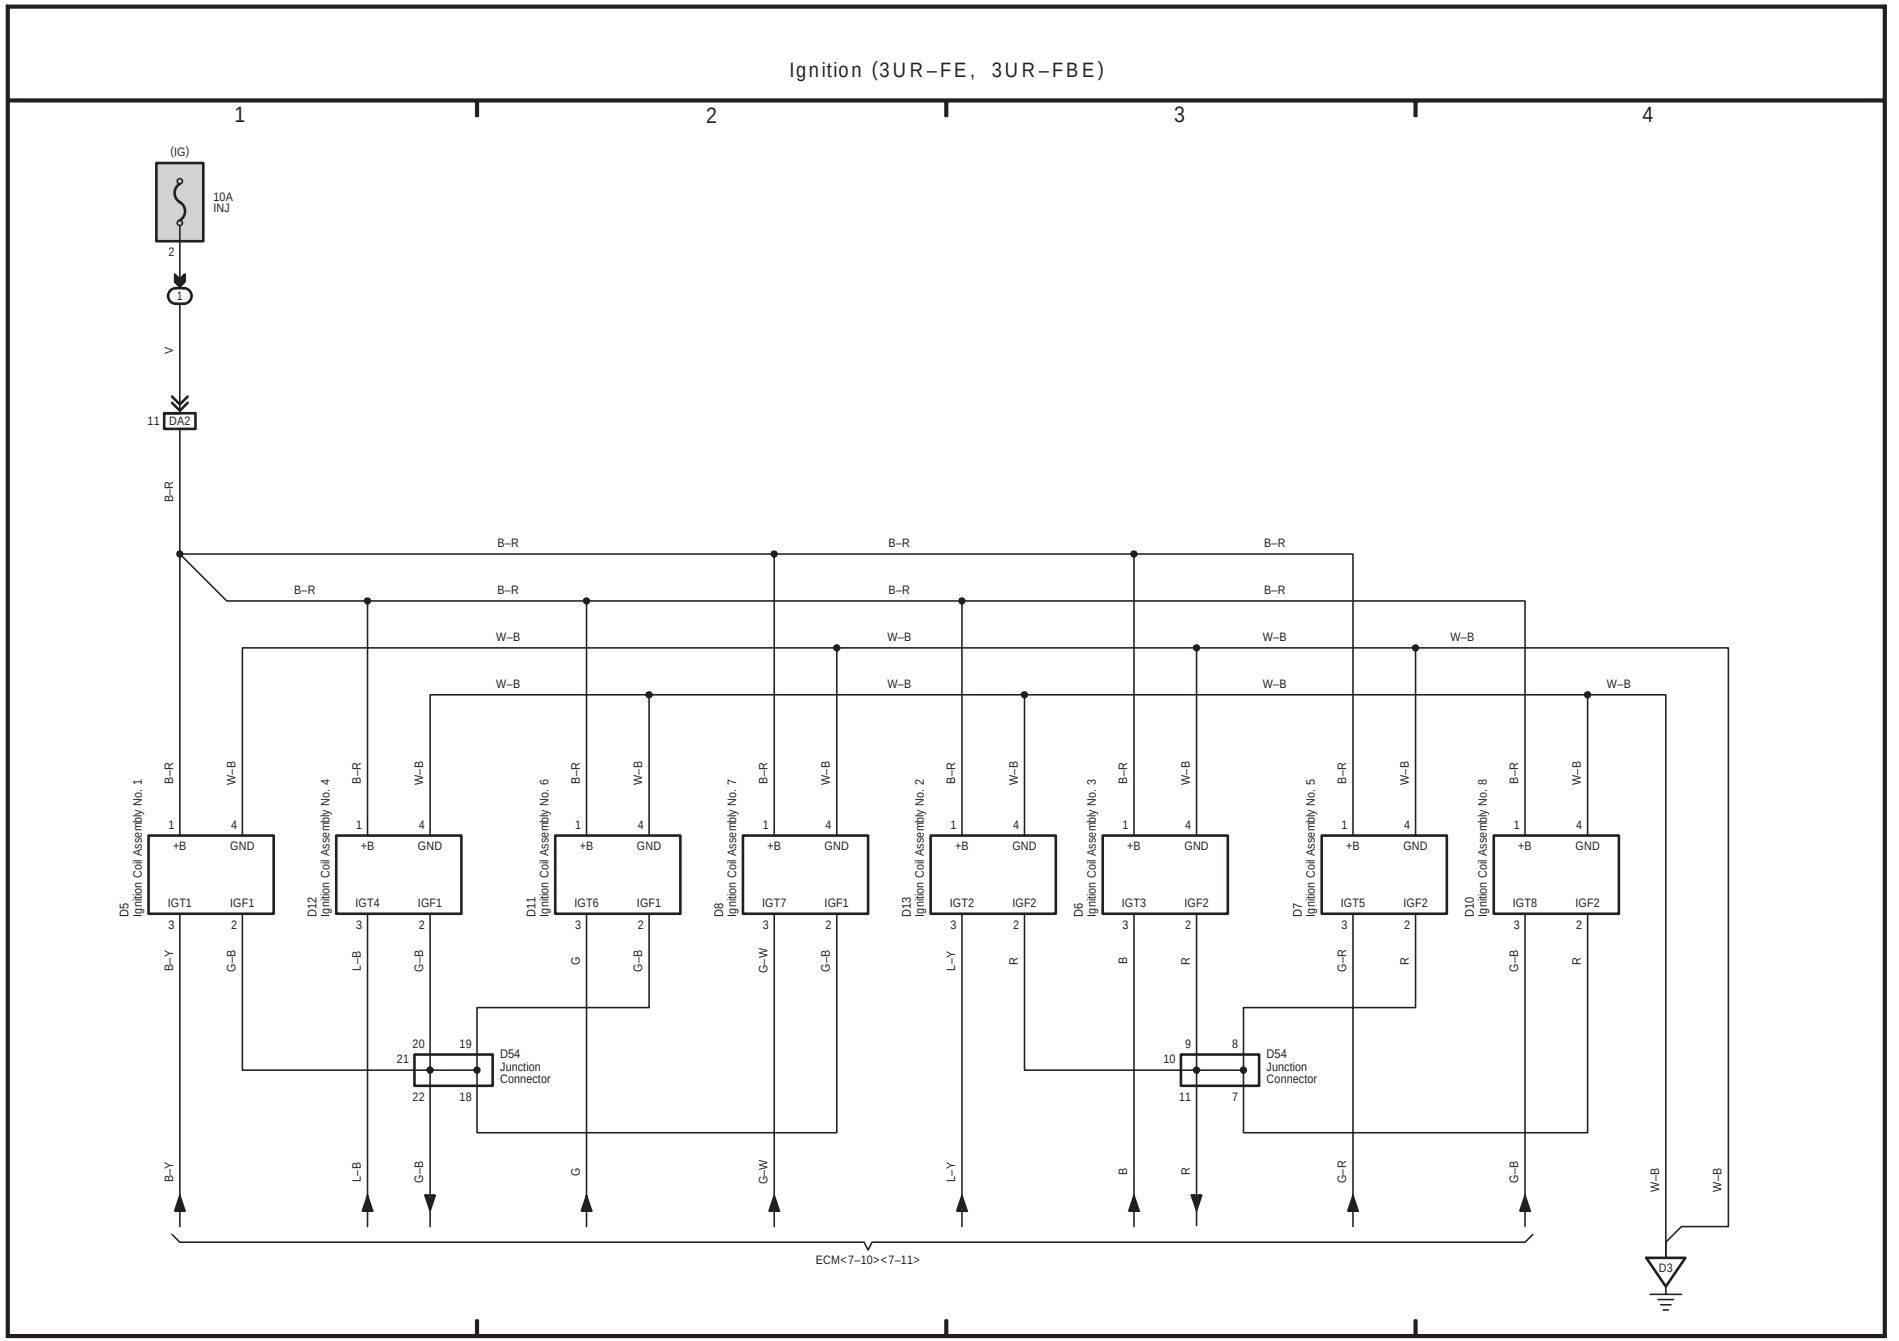

Ignition (3UR–FE, 3UR–FBE)
1
2
3
4
(IG)
10A
INJ
2
1
V
11 DA2
B–R
W–B
D5
Ignition Coil Assembly No. 1
D12
Ignition Coil Assembly No. 4
D11
Ignition Coil Assembly No. 6
D8
Ignition Coil Assembly No. 7
D13
Ignition Coil Assembly No. 2
D6
Ignition Coil Assembly No. 3
D7
Ignition Coil Assembly No. 5
D10
Ignition Coil Assembly No. 8
+B
GND
IGT1
IGF1
IGT4
IGT6
IGT7
IGT2
IGF2
IGT3
IGT5
IGT8
D54
Junction
Connector
B–Y
G–B
L–B
G
G–W
L–Y
R
B
G–R
ECM<7–10><7–11>
D3