
■AVC-LAN

1. General

The AVC-LAN is used to transmit data only between the audio head unit or navigation receiver assembly and the stereo amplifier on models with the JBL branded premium audio system.


2. System Diagram

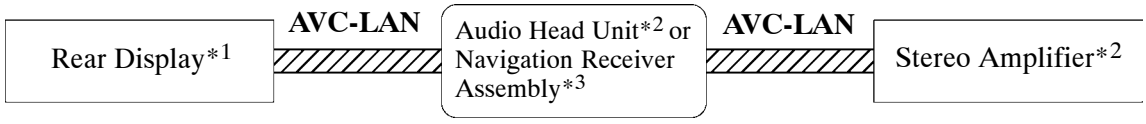

04E2BE04C

*1: Models with RSES
*2: Models with JBL branded premium audio system
*3: Models with Navigation with AV System

3. Layout of Main Components

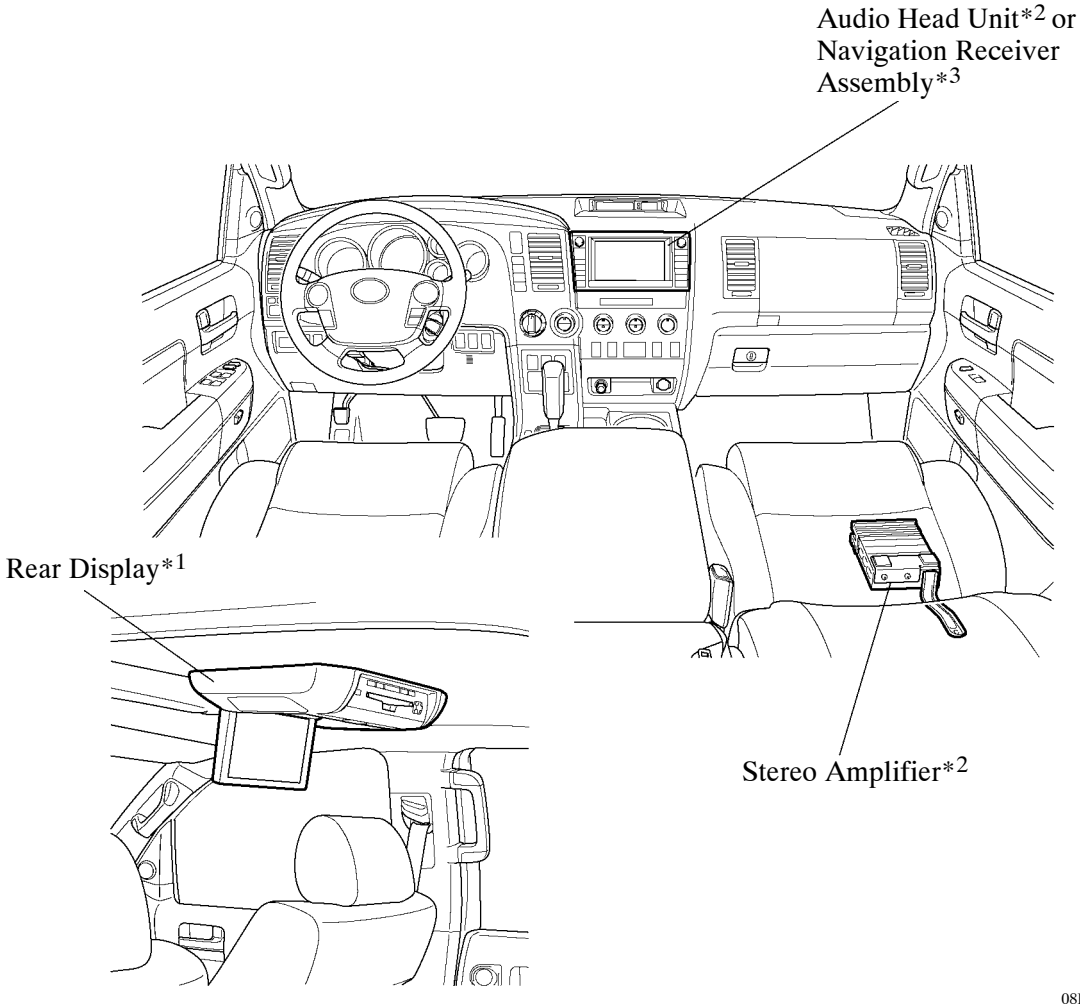

08LBE24Y

*1: Models with RSES
*2: Models with JBL branded premium audio system
*3: Models with Navigation with AV System

BE

4. Diagnosis

If a malfunction occurs in the AVC-LAN communication bus, the audio head unit stores a DTC (Diagnostic Trouble Code) in its memory.

- The DTCs of models having the navigation with AV system can be read on the diagnosis menu display on the navigation receiver assembly.
- The DTCs of models without the navigation with AV system can be read on the LCD of the audio head unit.

For details, see the 2008 Sequoia Repair Manual (Pub. No. RM08L0U).