
■ DAYTIME RUNNING LIGHT SYSTEM

1. General

The daytime running light system is designed to automatically illuminate the turn signal lights, during the daytime to keep the vehicle highly visible to other vehicles.


- The daytime running light system is controlled by the main body ECU and flasher relay.
- This system is enabled when the conditions given below are met.
  - Ignition switch is ON.
  - Parking brake switch is OFF.
  - Light control switch is not in the AUTO position. (The DRL will operate until the automatic light control system illuminates the headlights.)
  - Engine speed signal is input (engine running condition).
  - Low beam is not ON.

2. System Diagram

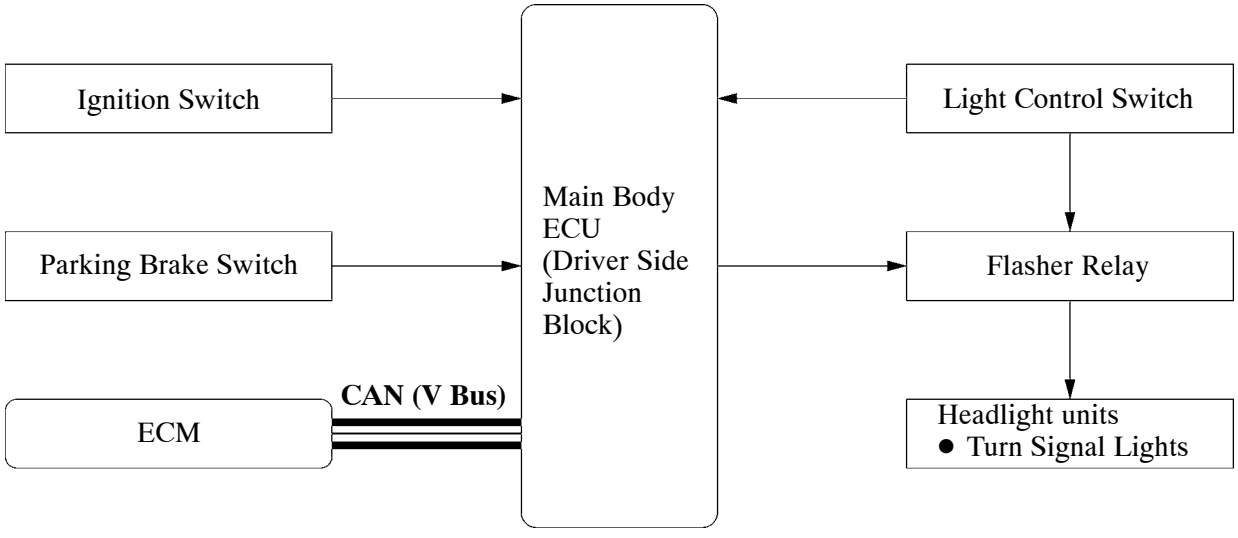

04E0BE39C

3. Layout of Main Components

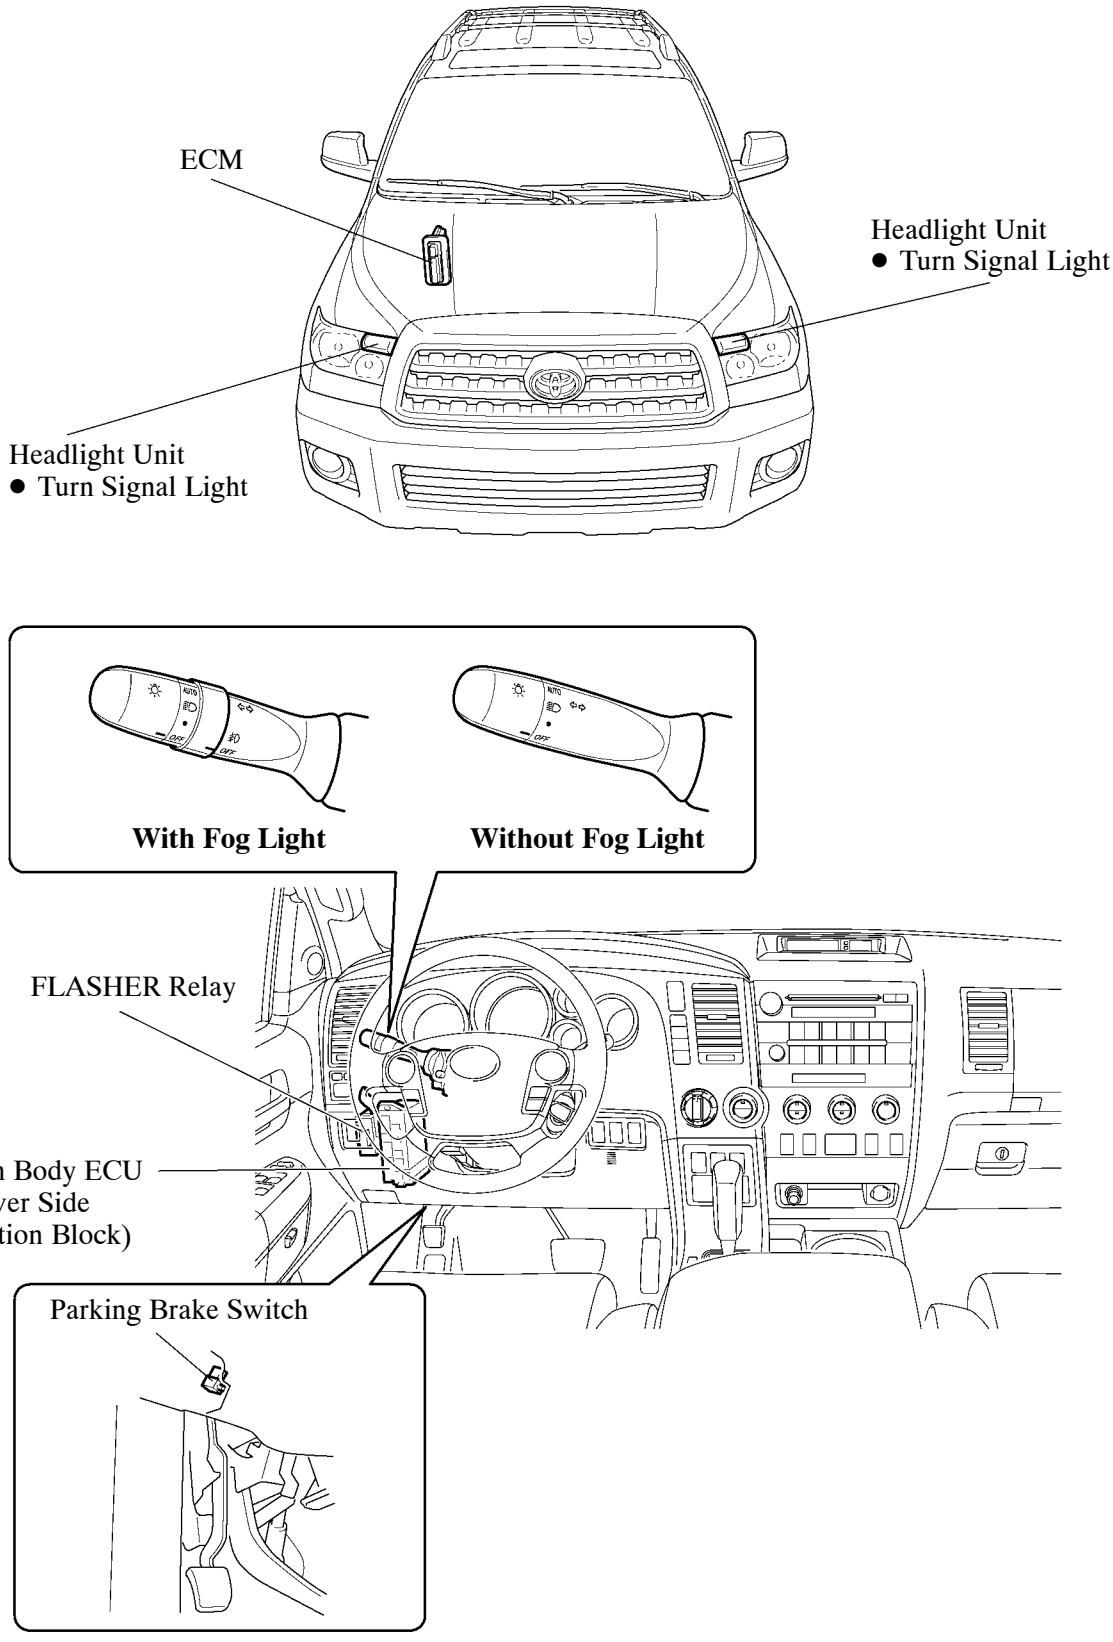

08LBE108Y