
■ LIGHT AUTO TURN-OFF SYSTEM

A light auto turn-off system is used to prevent the driver from leaving the exterior lights (headlights, taillights, parking lights, license plate lights) ON.

- This system is controlled by the main body ECU.
- This system has the following functions.

Item	Outline
Driver's Door-linked Function	The exterior lights automatically turn off when all of the following conditions have been met: ● The ignition switch is in the OFF or ACC position. ● The driver's door is opened and then closed. ● The light control switch is in the tail or HEAD position.
Delay Function	The exterior lights automatically turn off after 30 seconds when all of the following conditions have been met: ● The ignition switch is in the OFF or ACC position. ● All doors are closed. ● The light control switch is in the HEAD position. ● The driver's door is opened and then closed. (If the driver's door is open, the exterior lights automatically turn off after 30 minutes.)
Transmitter-linked Function	The exterior lights turn off immediately when the delay function is active and the following condition has been met: ● The "LOCK" button of the transmitter is pushed twice within 3 seconds.

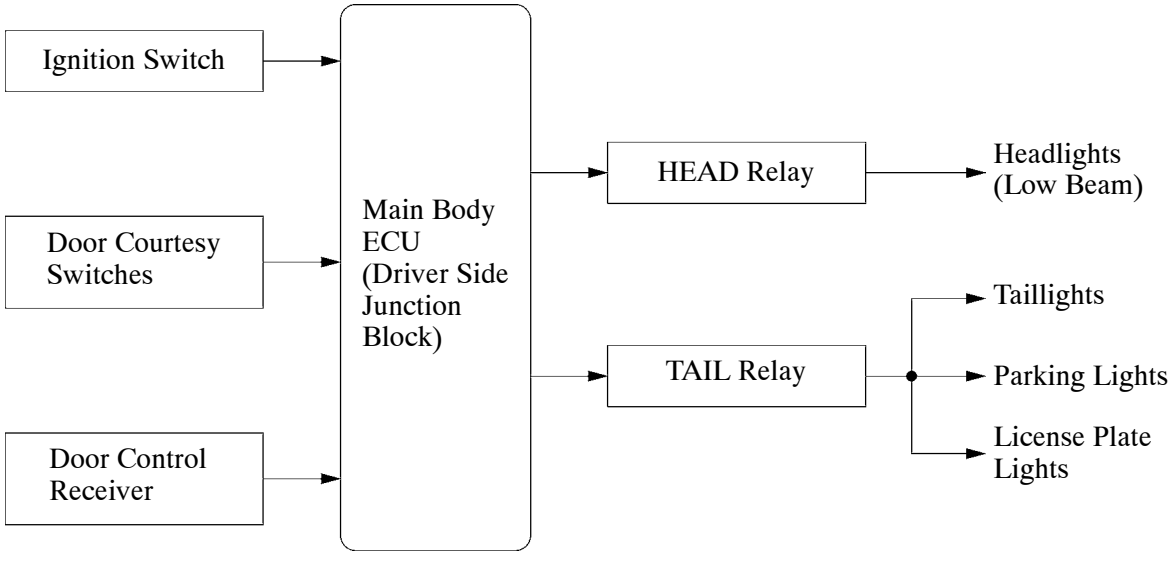

04E0BE118C