
■SYSTEM DIAGRAM


▶ Front and Rear Doors ◀

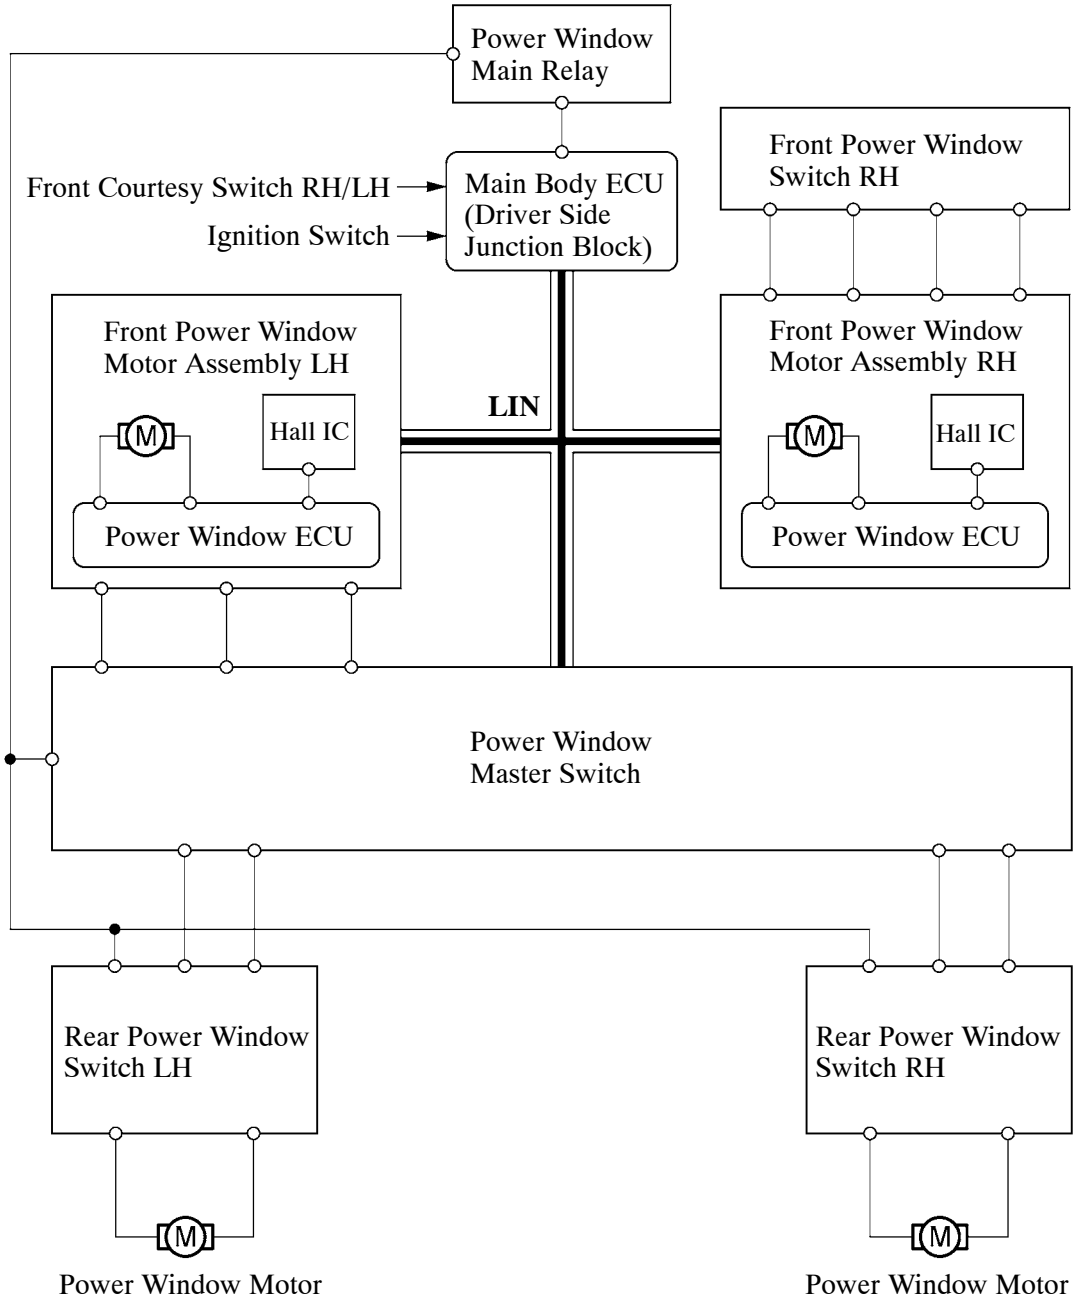

08LBE90Y

BE

▶ Back Door ◀

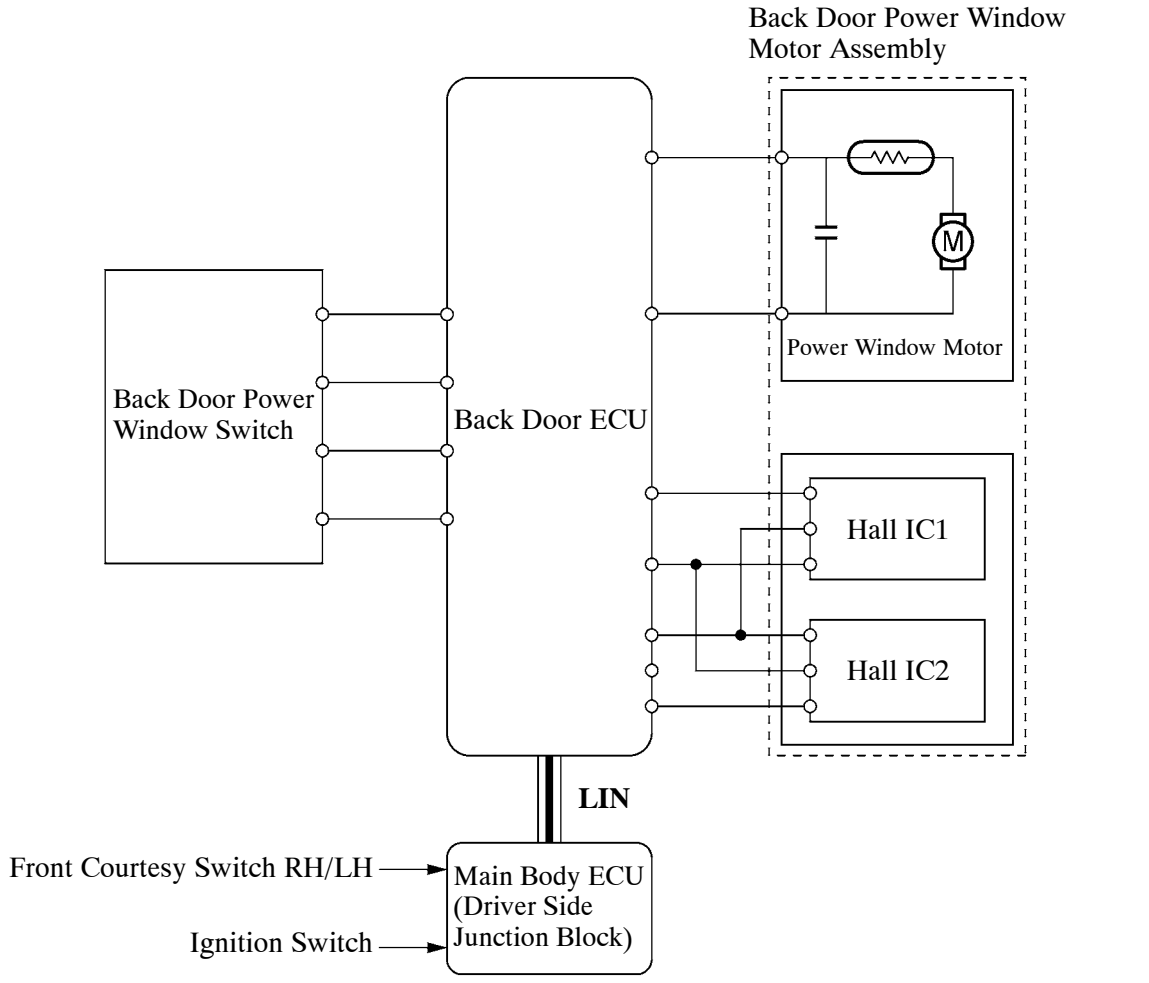
Back Door Power Window Motor Assembly
Power Window Motor
Back Door Power Window Switch
Back Door ECU
Hall IC1
Hall IC2
LIN
Front Courtesy Switch RH/LH
Ignition Switch
Main Body ECU (Driver Side Junction Block)
08LBE91Y