


■ LAYOUT OF MAIN COMPONENTS

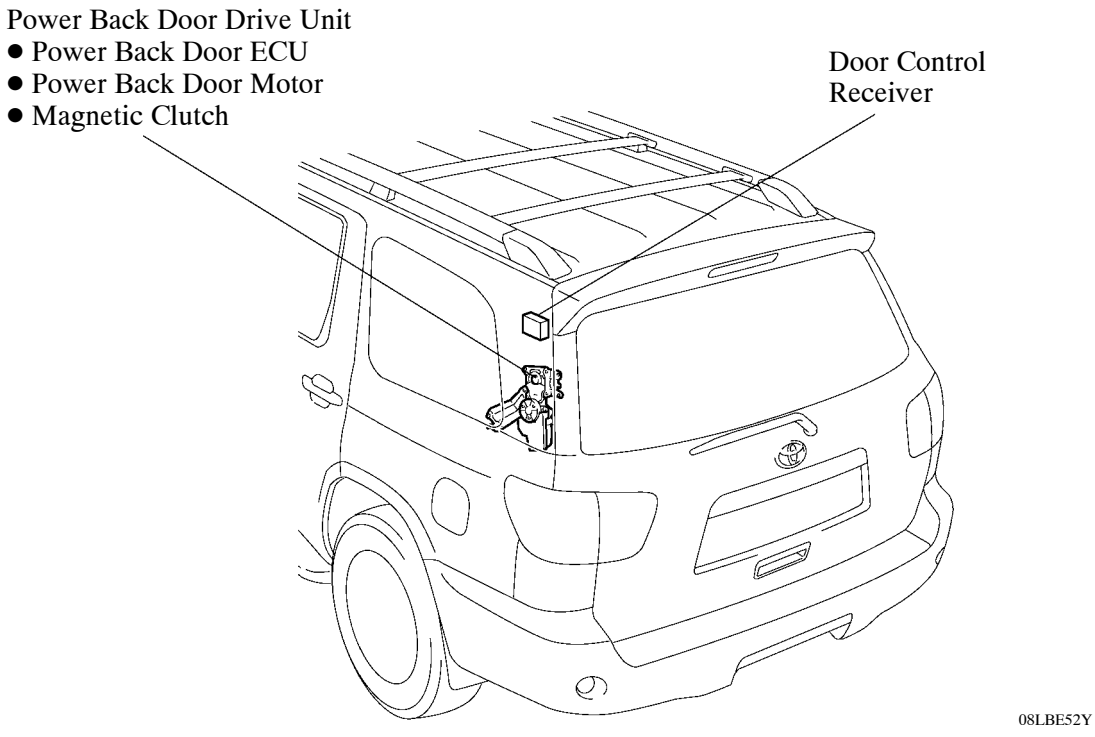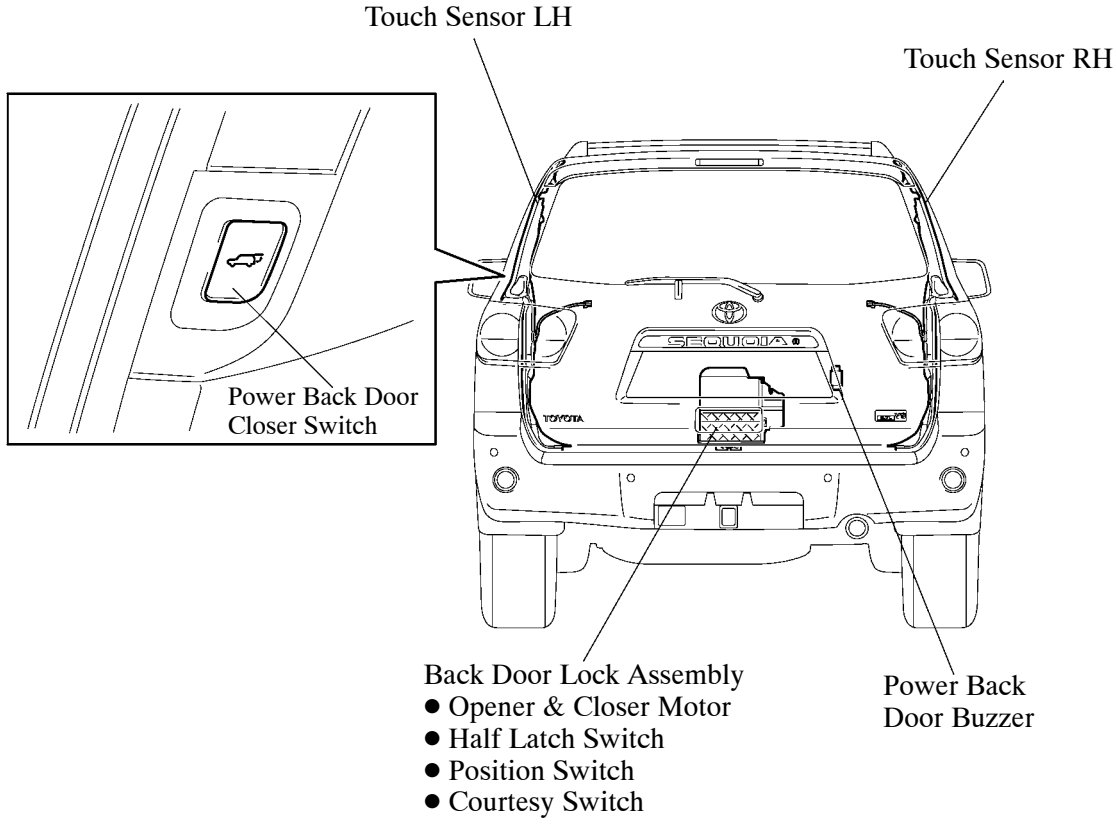

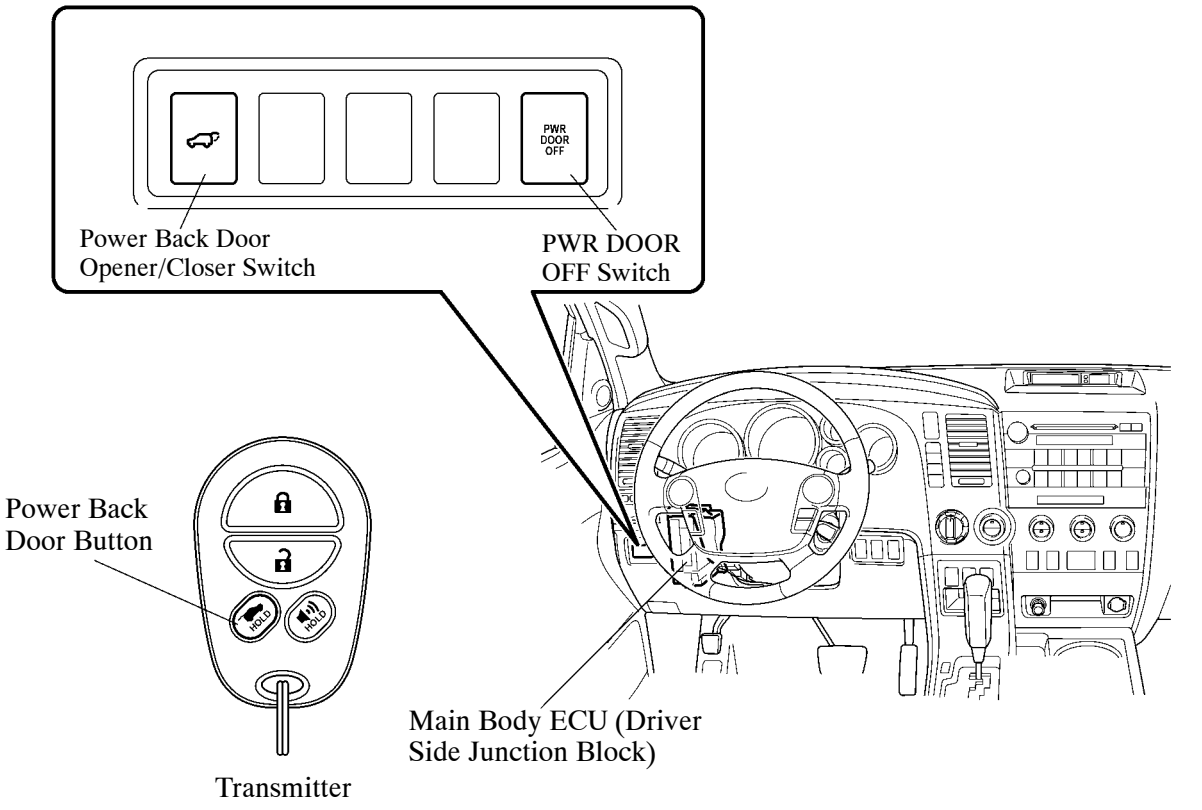


PWR DOOR OFF
Power Back Door Opener/Closer Switch
PWR DOOR OFF Switch
Power Back Door Button
HOLD
HOLD
Main Body ECU (Driver Side Junction Block)
Transmitter

08LBE54Y

BE