
■GARAGE DOOR OPENER

1. General

The garage door opener enables a garage door to be opened or closed from inside the vehicle by operating the garage door opener switch that is provided in the inside rear view mirror.

- Up to three types of transmitter codes can be registered in the garage door opener.
- An LED is provided to enable the operator to verify the operation mode of the garage door opener.
- A rolling code function is used, which changes the transmitter code each time the garage door opener switch is pressed. For details, of procedures of transmitter code registration, refer to the 2008 Sequoia Repair Manual (Pub. No. RM08L0U).

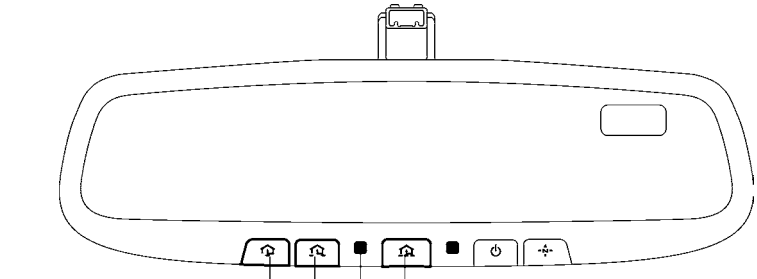

2. Function

The following table shows the mode and the indicator light operation.

BE

Mode	Outline	Indicator Light
Transmission Mode	While the switch is being pressed, the garage door opener transmits the code that was previously registered. Even if the button is pressed continuously, the transmission stops after 20 seconds.	Flash → ON (Rolling Code) ON (Except Rolling Code)
Learning Mode	When the button is pressed continuously for 20 seconds, the mode changes to a learning mode in which a transmitter code can be registered. In this mode, a new transmitter code can be registered or an existing code can be overwritten. If no codes are registered within 90 seconds after entering the learning mode, the mode changes to a low power mode.	Slow Flashing (During Learning Mode) Quick Flashing (Registration Completed)
All Delete Mode	When the two garage door opener switches on the outer-right and outer-left sides are pressed simultaneously for 20 seconds, all the transmitter codes that are registered to the three switches are cleared. By releasing these switches within 10 seconds after clearing the codes, the switches will automatically select learning mode the next time they are pressed. By keeping these switches pressed for longer than 10 seconds after clearing the codes, all these switches will be registered with a code for operation verification.	Quick Flashing (Code Clearing Completed)
Low Power Mode	If a switch remains pressed longer than 100 seconds, such as in the case in which the pressed switch does not release itself, the low power mode will be automatically selected to reduce power consumption.	OFF