
■A.D.D. SHIFT ACTUATOR

- The A.D.D. shift actuator contains the A.D.D. shift motor, limit switch and A.D.D. detection switch. It should not be disassembled.
- The A.D.D. state (disconnected or connected) can be determined by the combinations of the two contact point switches.

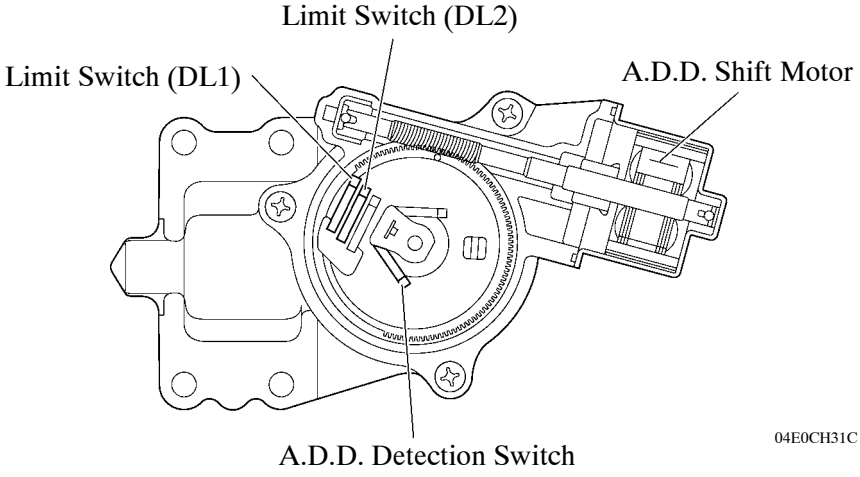

▶ Combinations of Two Contact Point Switches ◀

