

▶ **Timing 1** ◀

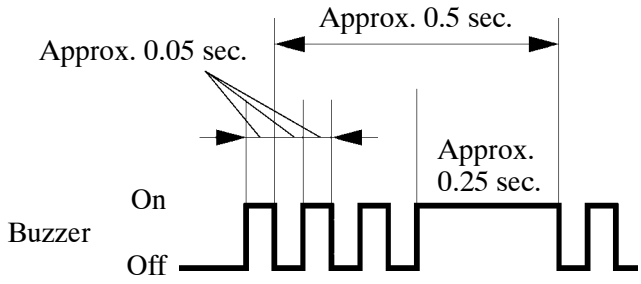

0140BE76C


▶ **Timing 2** ◀

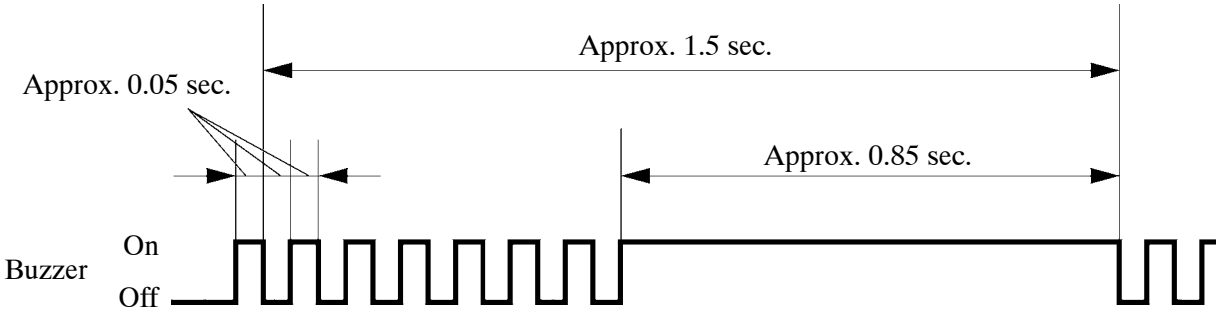

0140BE77C

3. Clearance Warning ECU

- The clearance warning ECU effects overall control of the system, including the switching of the transmitting and reception of the ultrasonic sensor signals, processing the received wave signals, determining the presence of obstacles, actuating the buzzer, and determining the presence of a malfunction in the sensors.
- The sound volume of the buzzer in the accessory meter can be adjusted at the clearance warning ECU.

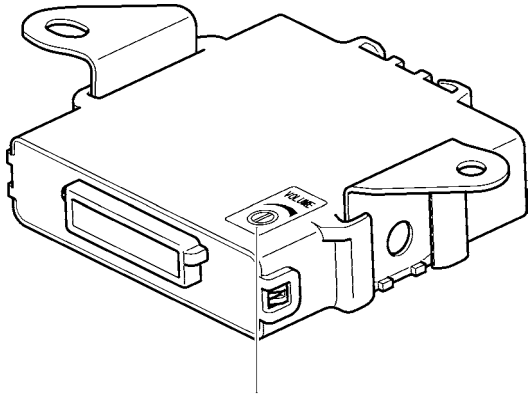

Buzzer Sound Volume Adjustment Screw

04E0BE66C

■ DIAGNOSIS

If the clearance warning ECU detects a malfunction in an ultrasonic sensor, the ECU blinks the indicator light in the accessory meter 5 times and also sounds the buzzer 5 times to inform the driver of the malfunction.