

# SRS AIRBAG SYSTEM

## ■ DESCRIPTION

- A Supplemental Restraint System (SRS) airbag system is standard equipment on all models.
- The driver and front passenger dual-stage SRS airbags supplement the seat belts to help to reduce the shocks to the heads and chests of the driver and front passenger in the event of a frontal collision.
- The SRS side airbags are used in the event of a side impact collision to help to reduce the shocks to the chests of the driver or front passenger.
- The SRS curtain shield airbags are used in the event of a side or rear side impact collision to help to reduce the shocks to the heads of the driver, front passenger, rear No. 1 seat outer passengers or rear No. 2 seat outer passengers.
- An Roll Sensing Curtain shield Airbags (RSCA) function is used in order to deploy the curtain shield airbags for the driver, front passenger, rear No. 1 seat and rear No. 2 seat outer passengers and the seat belt pretensioners for the driver, front passenger, and rear No. 1 seat outer passengers, in the event that the vehicle rolls over. The RSCA OFF switch is provided on the driver side of the instrument panel to allow the driver to disable this function.

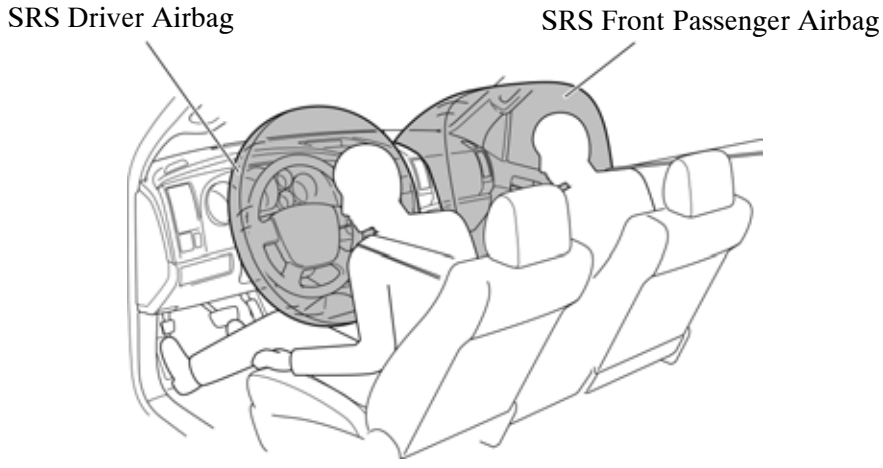


08LMO042I

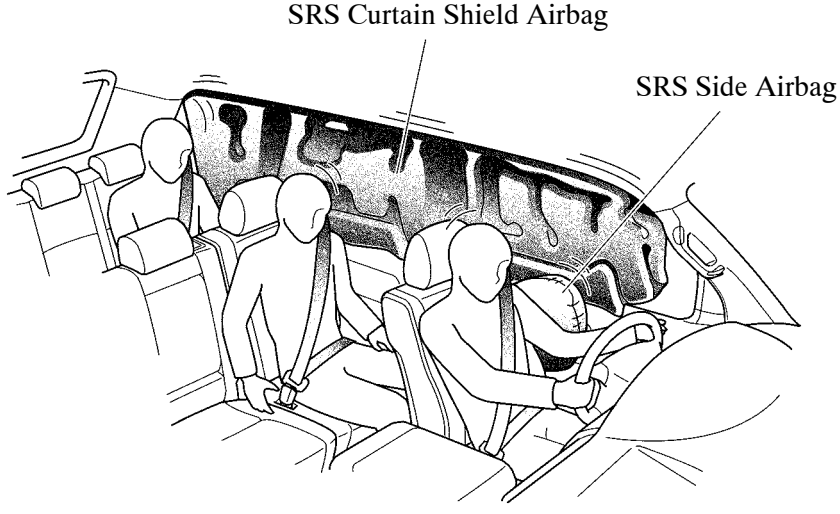


11YBE082I