■SEAT BELT

1. General

The following types of seat belt are provided:


Seat Position		Seat Belt Type	Remarks
Front Seat	Driver	3-point ELR*1	Electrical Sensing Type Pretensioner, 2-step Force Limiter
	Front Passenger	3-point ELR*1 and ALR*2	
Rear No. 1 Seat		3-point ELR*1 and ALR*2	—
Rear No. 2 Seat		3-point ELR*1 and ALR*2	—

*1: Emergency Locking Retractor
*2: Automatic Locking Retractor

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the center airbag sensor assembly, the seat belt pretensioner is activated simultaneously with the deployment of the Supplemental Restraint System (SRS) airbags for the driver and front passenger.
In the early stages of the collision, the force limiter is activated to control the force if the tension of the seat belt worn by the occupant reaches a pre-determined level.

▶ Front Airbag Operation ◀

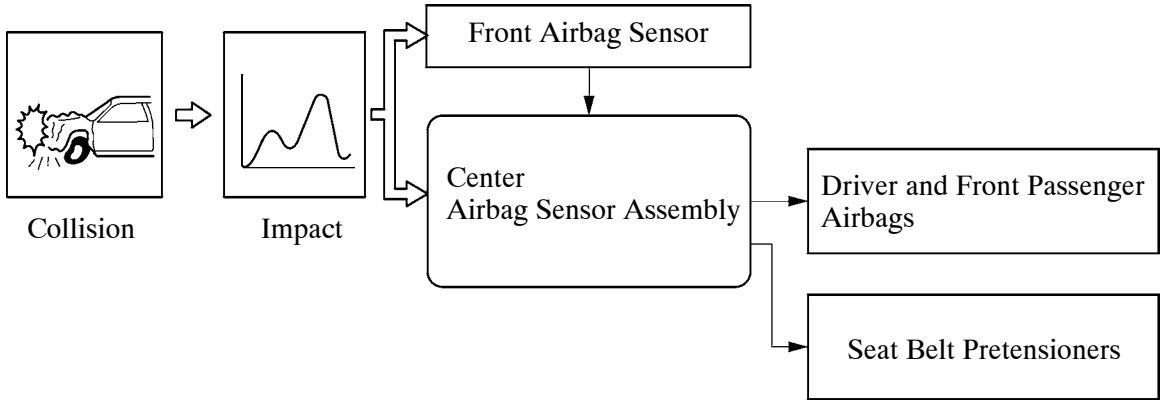


11YBO0051

BO


3. Shoulder Belt Anchor

Adjustable shoulder belt anchors have been built into the pillars of the front seat belts and rear No. 1 outside seat belt to enhance safety and improve appearance.

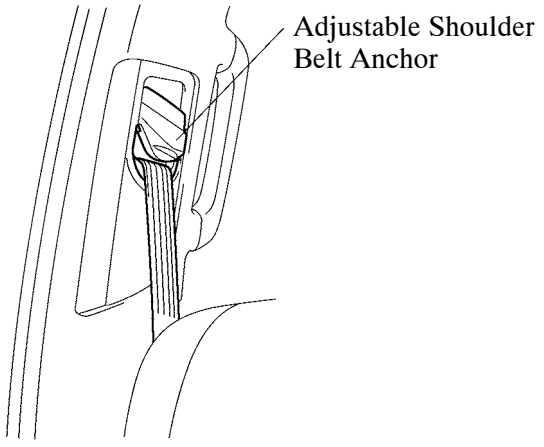

08LBO035Y


Front Seat Belt

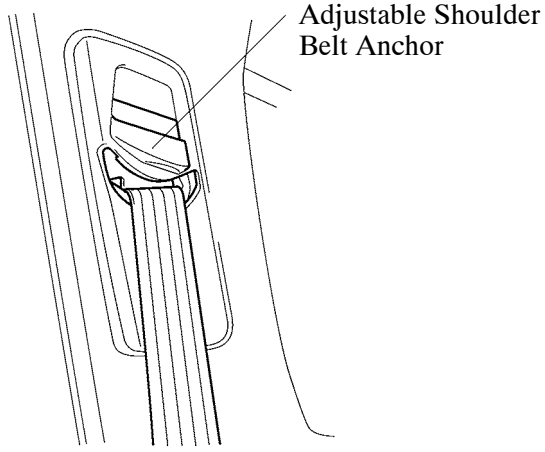

Rear No. 1 Seat Belt 08LBO036Y

4. Rear No. 2 Center Seat Belt

- A 3-point seat belt is provided for the rear No. 2 center seat and a belt retraction box is located in the roof, thus achieving excellent appearance and seat usability when the seat belt is not in use.
- A re-router is used for the center seat to ensure comfort when a passenger wears the seat belt.

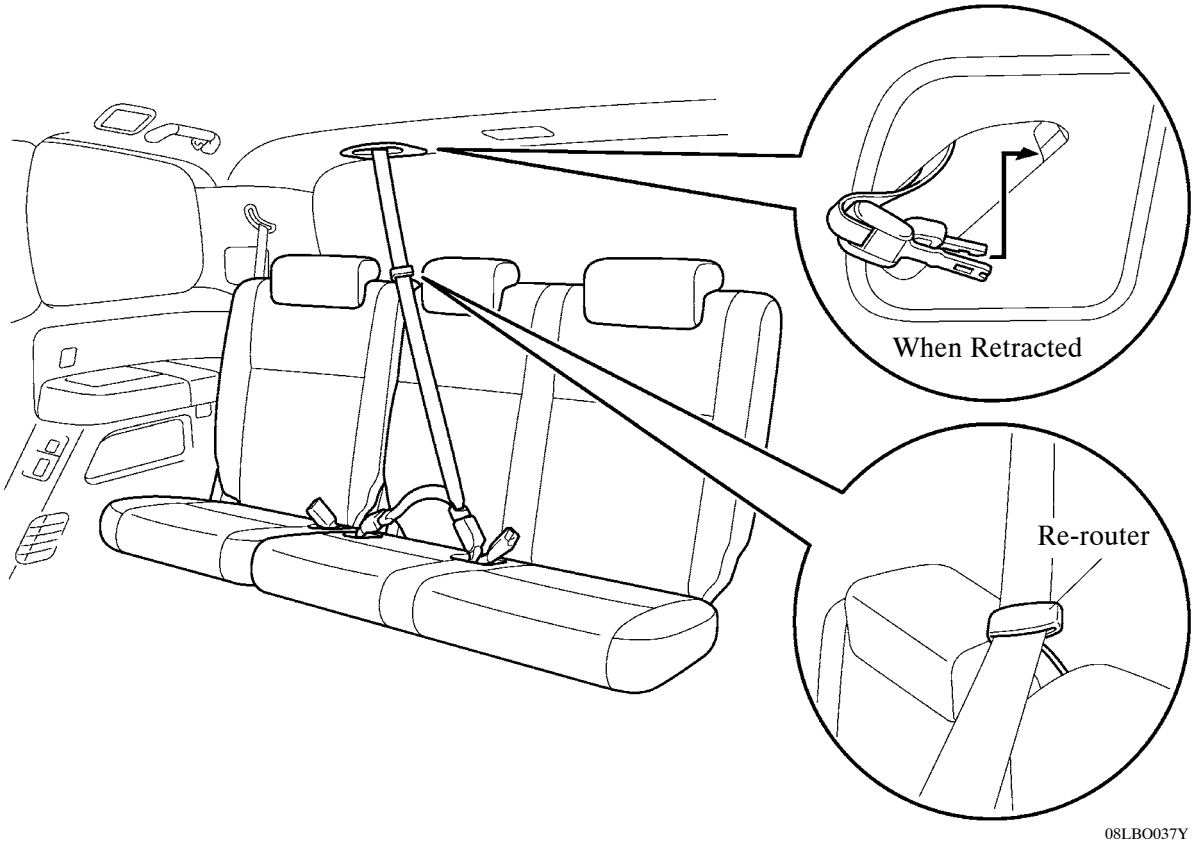

08LBO037Y