
■OPERATING CONDITION

The operating condition of each ultrasonic sensor differs in accordance with its installed position as shown in the table below:

Installation Position	Operating Condition
Front Corner	● Ignition switch is ON. ● Sonar switch is on. ● Shift lever is not in P. ● Vehicle speed is approximately 10 km/h (6 mph) or less.
Rear Center or Corner	● Ignition switch is ON. ● Sonar switch is on. ● Shift lever is in R.

■CONSTRUCTION AND OPERATION

▶ Ultrasonic Sensor ◀

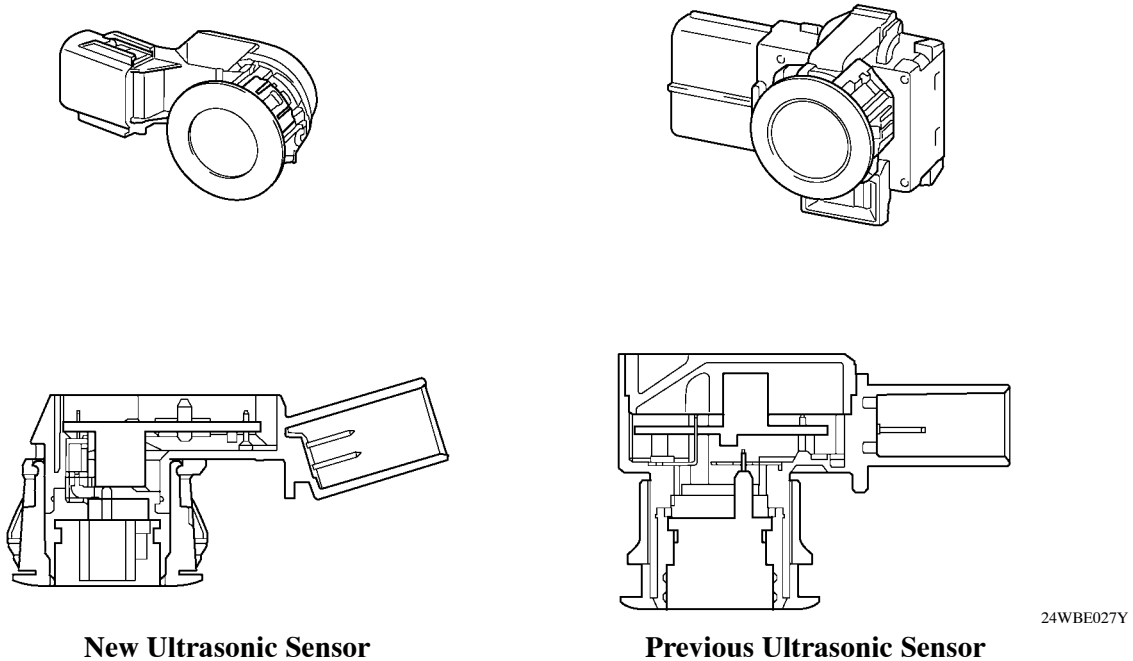

24WBE027Y

New Ultrasonic Sensor **Previous Ultrasonic Sensor**