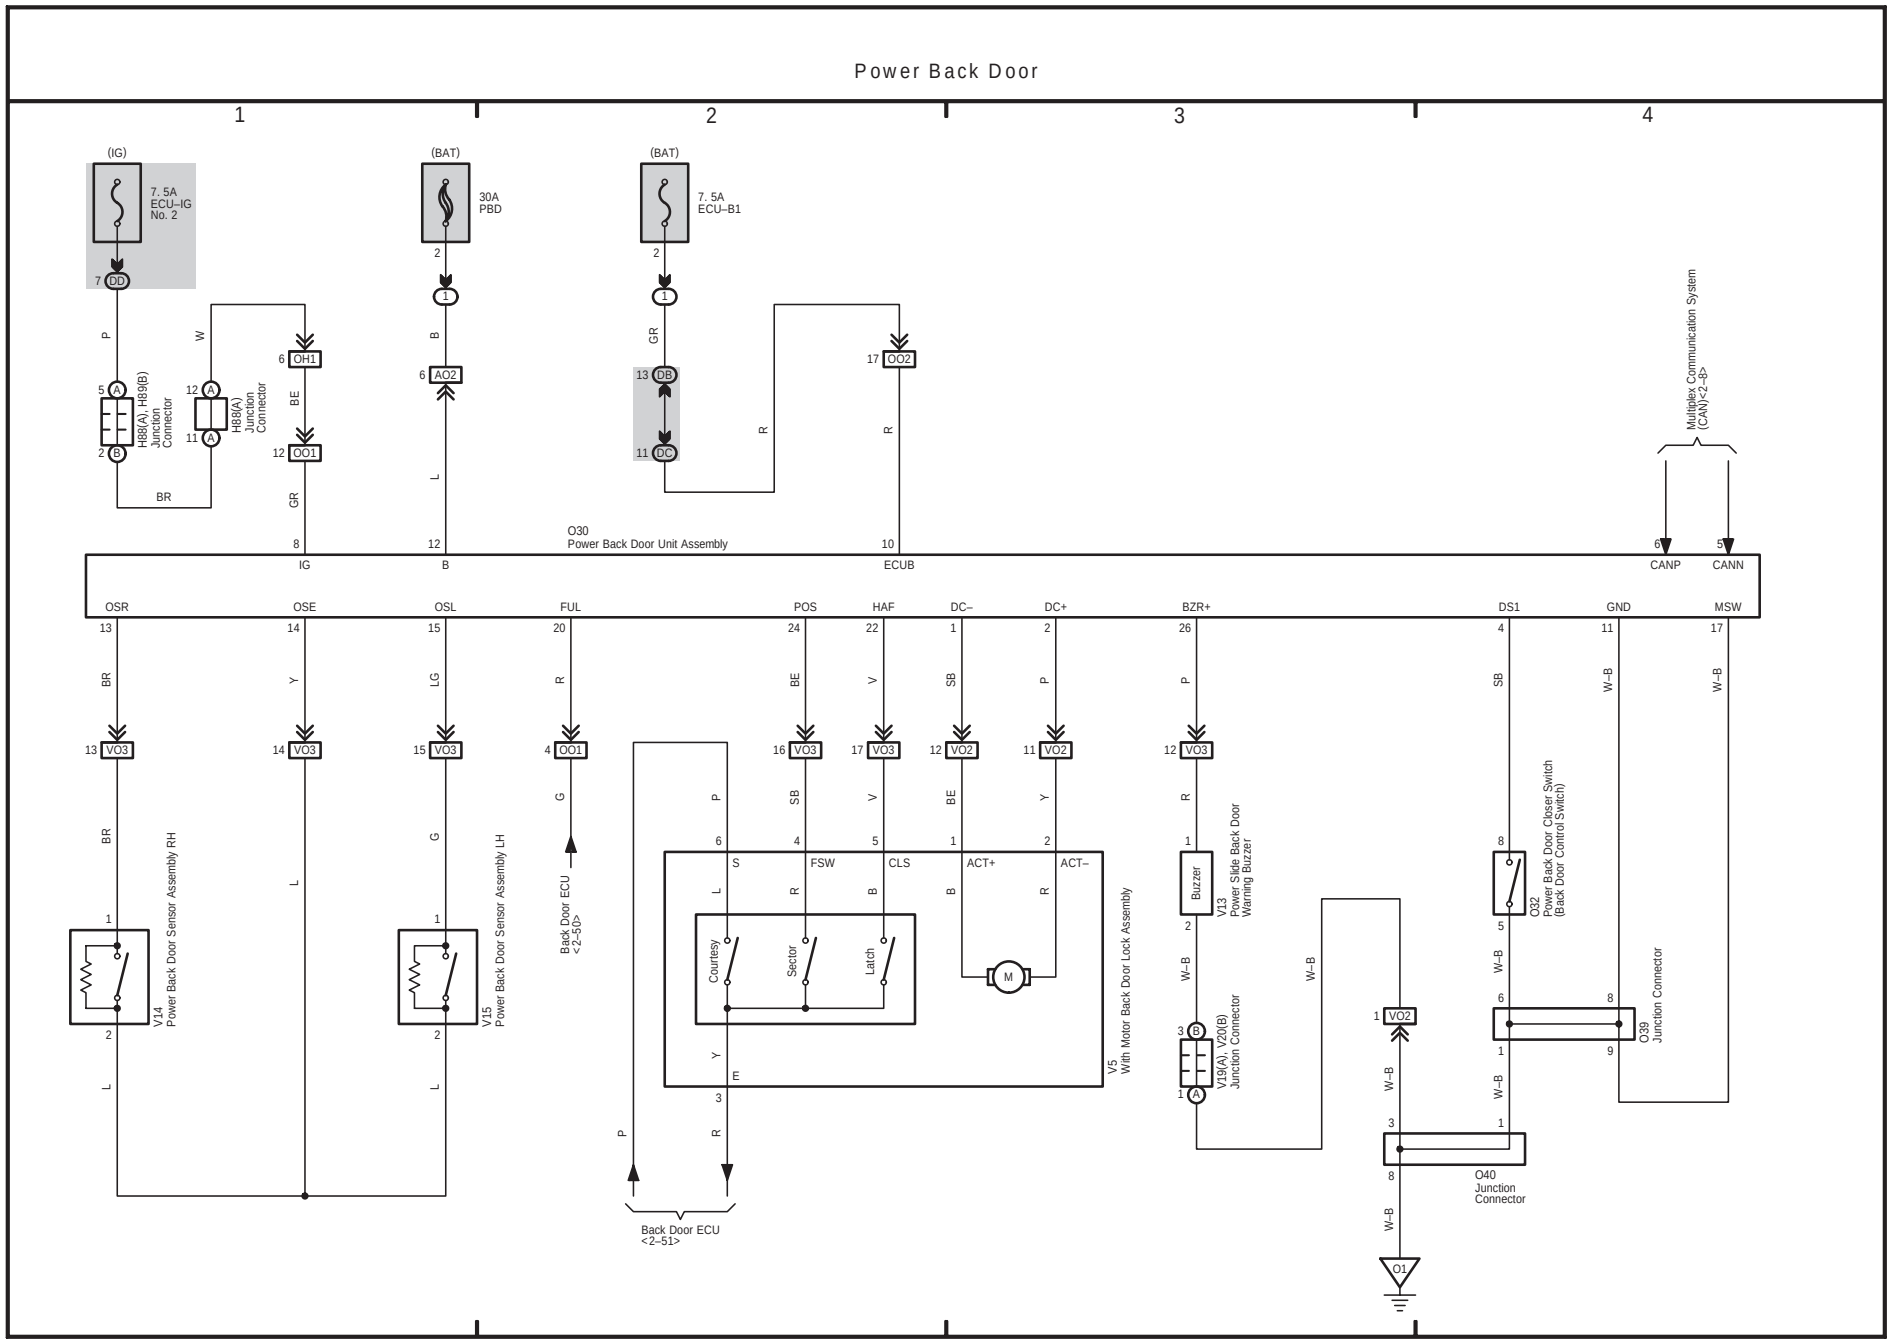

Power Back Door
1
2
3
4
(IG)
7. 5A
ECU–IG
No. 2
(BAT)
30A
PBD
(BAT)
7. 5A
ECU–B1
H88(A), H89(B)
Junction
Connector
H88(A)
Junction
Connector
O30
Power Back Door Unit Assembly
Multiplex Communication System
(CAN)<2-4>
IG
B
ECUB
CANP
CANN
OSR
OSE
OSL
FUL
POS
HAF
DC–
DC+
BZR+
DS1
GND
MSW
V14
Power Back Door Sensor Assembly RH
V15
Power Back Door Sensor Assembly LH
Back Door ECU
<2-50>
Courtesy
Sector
Latch
S
FSW
CLS
ACT+
ACT–
V5
With Motor Back Door Lock Assembly
Back Door ECU
<2-51>
Buzzer
V13
Power Slide Back Door
Warning Buzzer
V19(A), V20(B)
Junction Connector
O32
Power Back Door Closer Switch
(Back Door Control Switch)
O39
Junction Connector
O40
Junction
Connector
O1