
(Cont. next page)


Multiplex Communication System (CAN)

*28 : w/ Dynamic Radar Cruise Control
*38 : w/ Blind Spot Monitor System

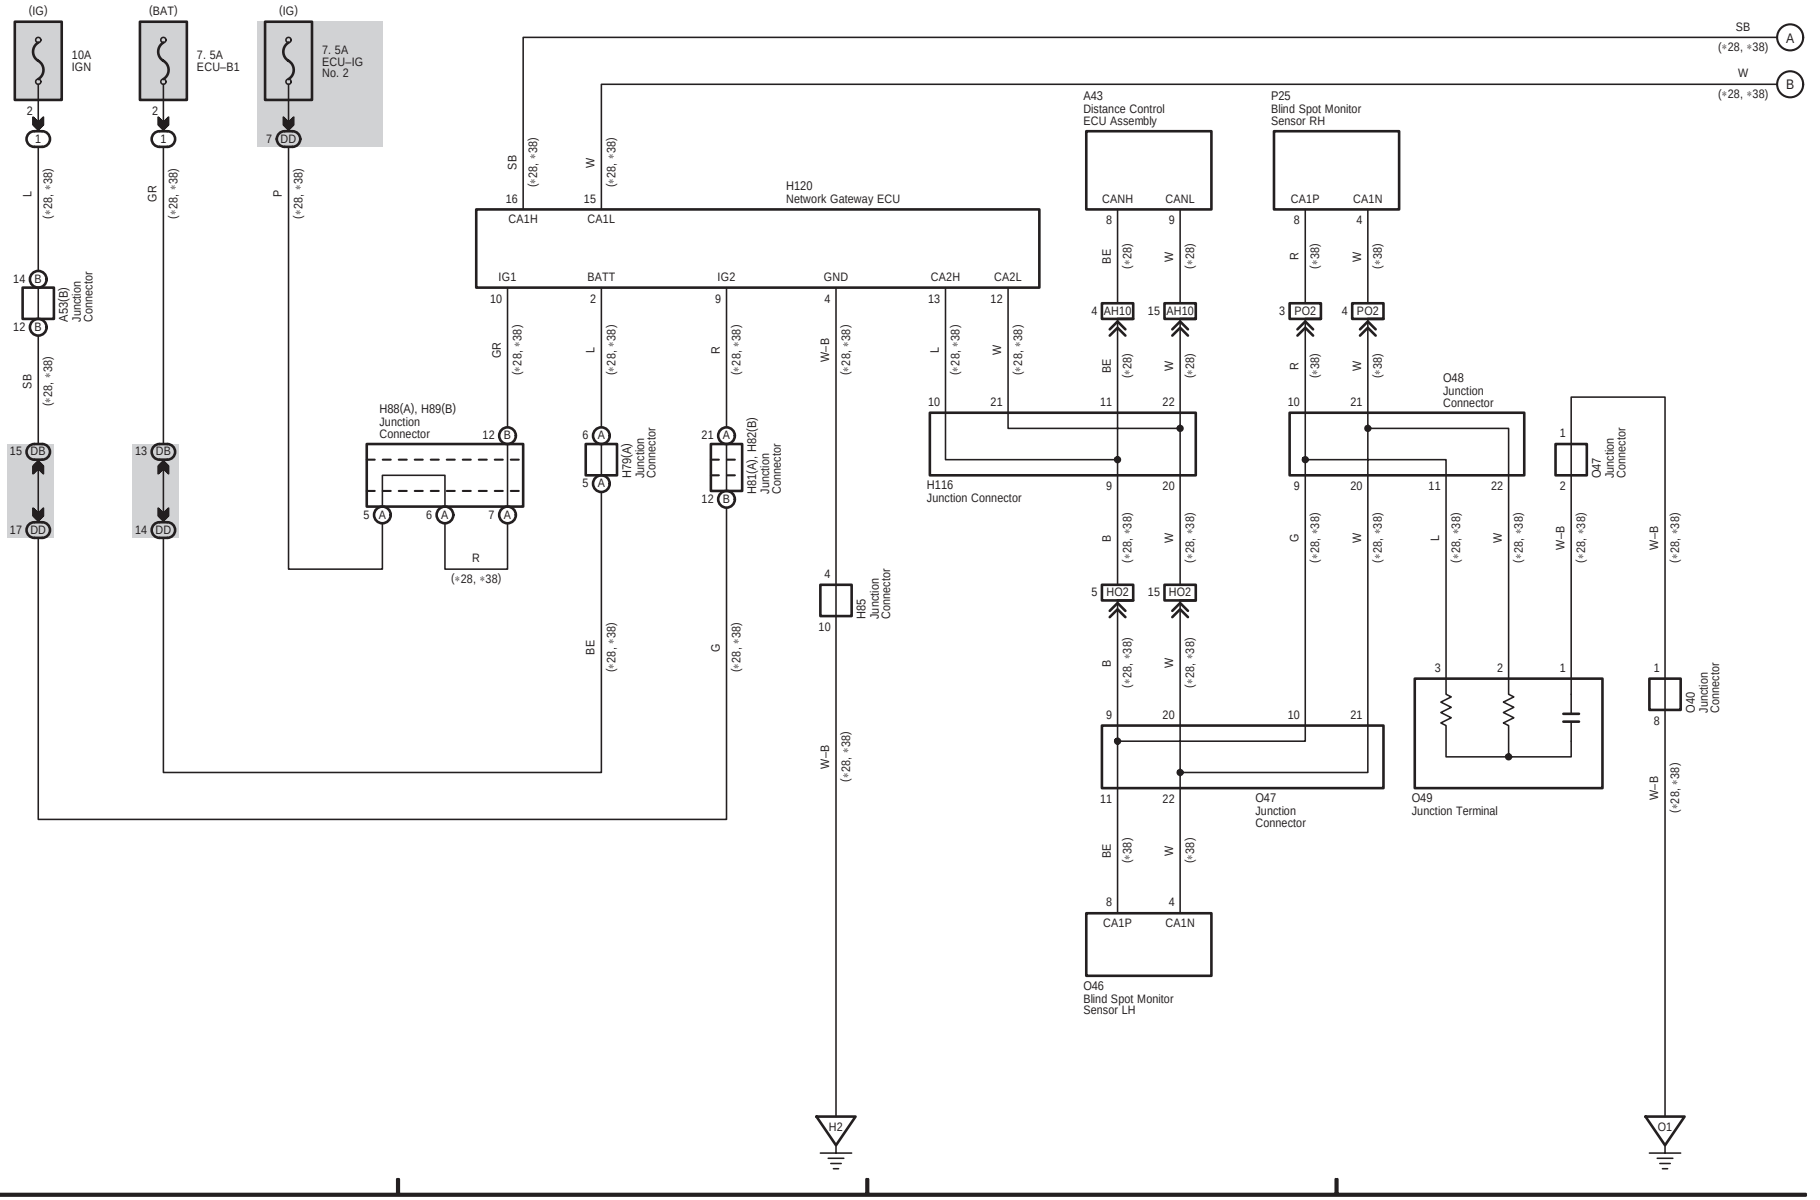


(Cont. next page)

Multiplex Communication System (CAN)

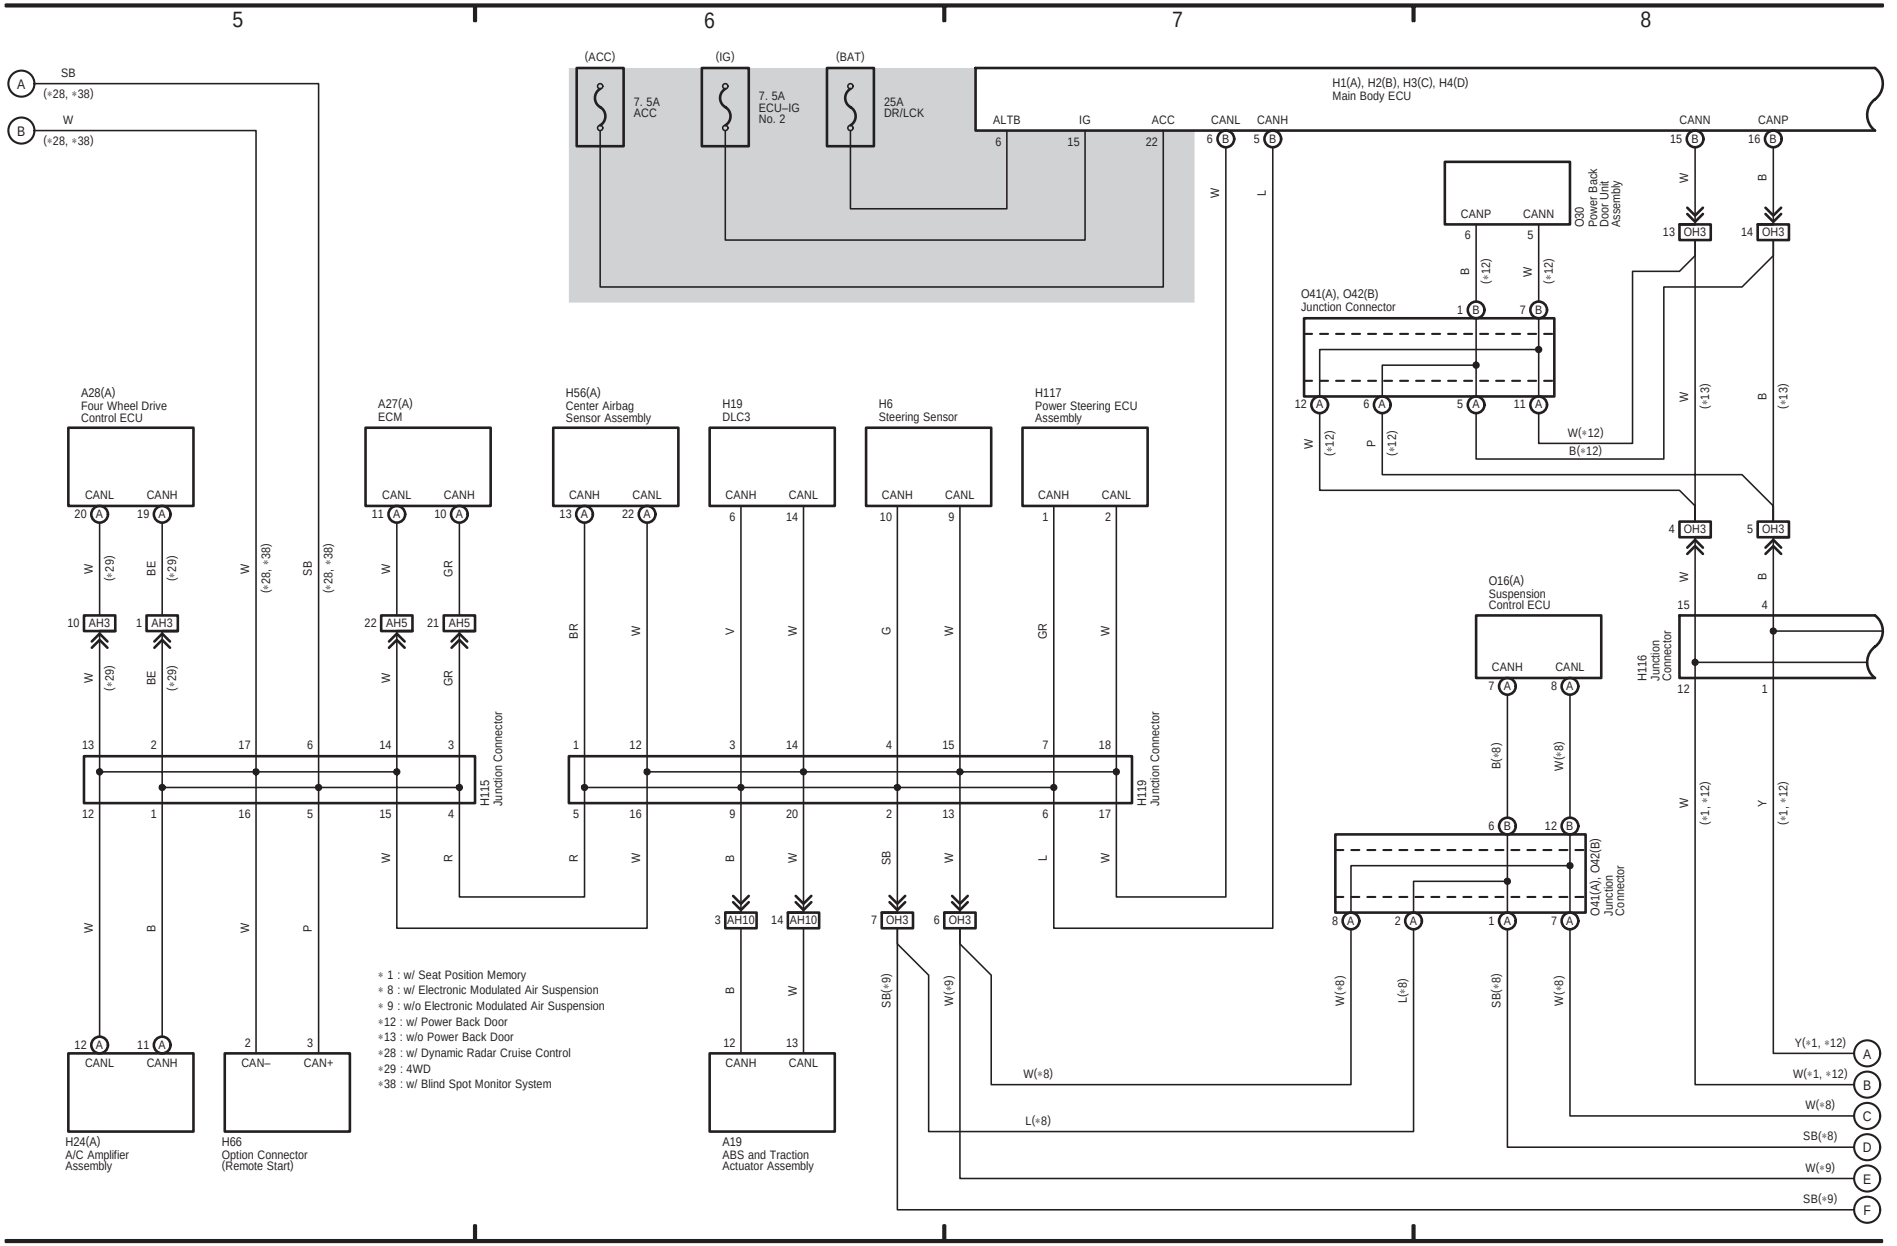


(Cont. next page)

Multiplex Communication System (CAN)

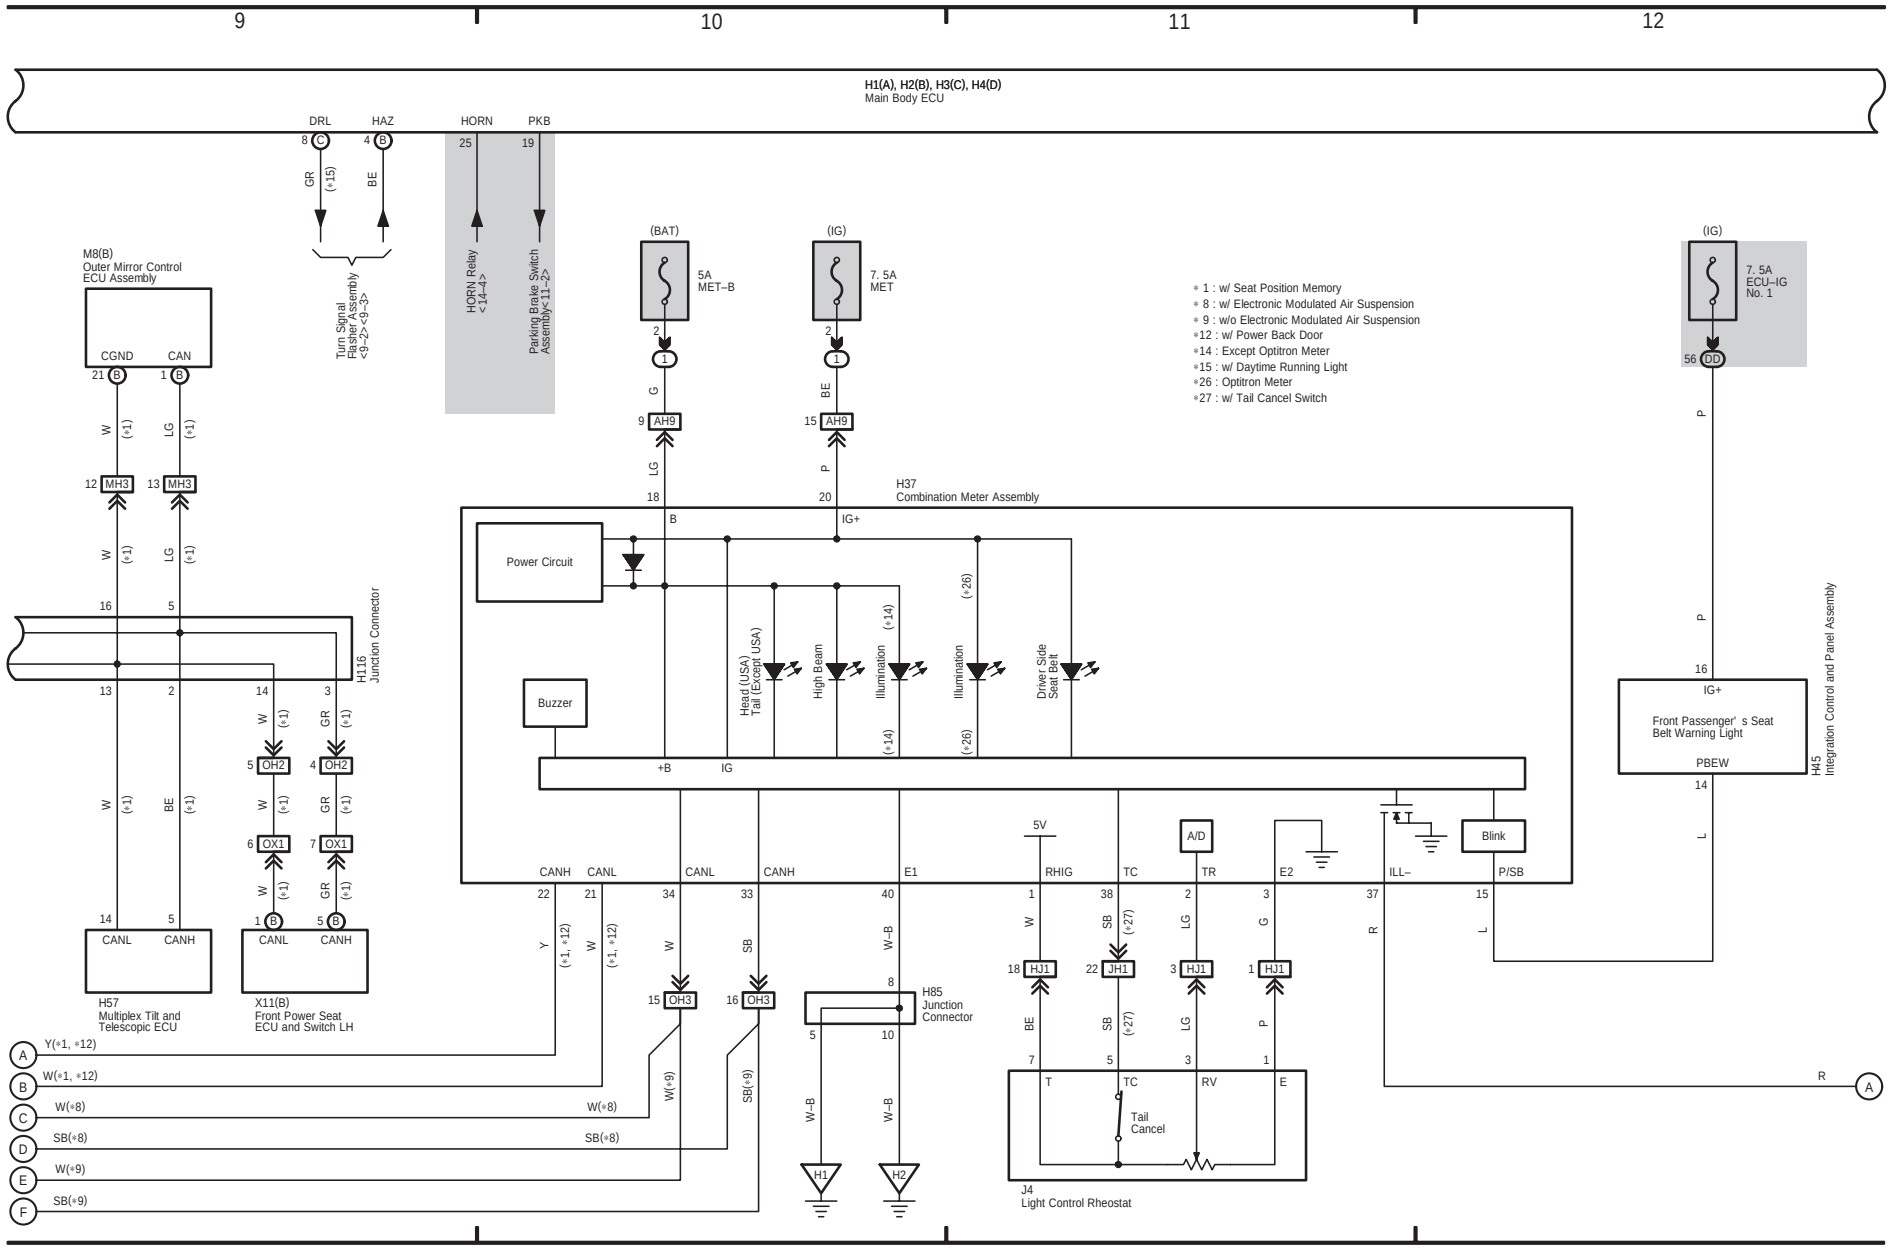

(Cont. next page)


Multiplex Communication System (CAN)

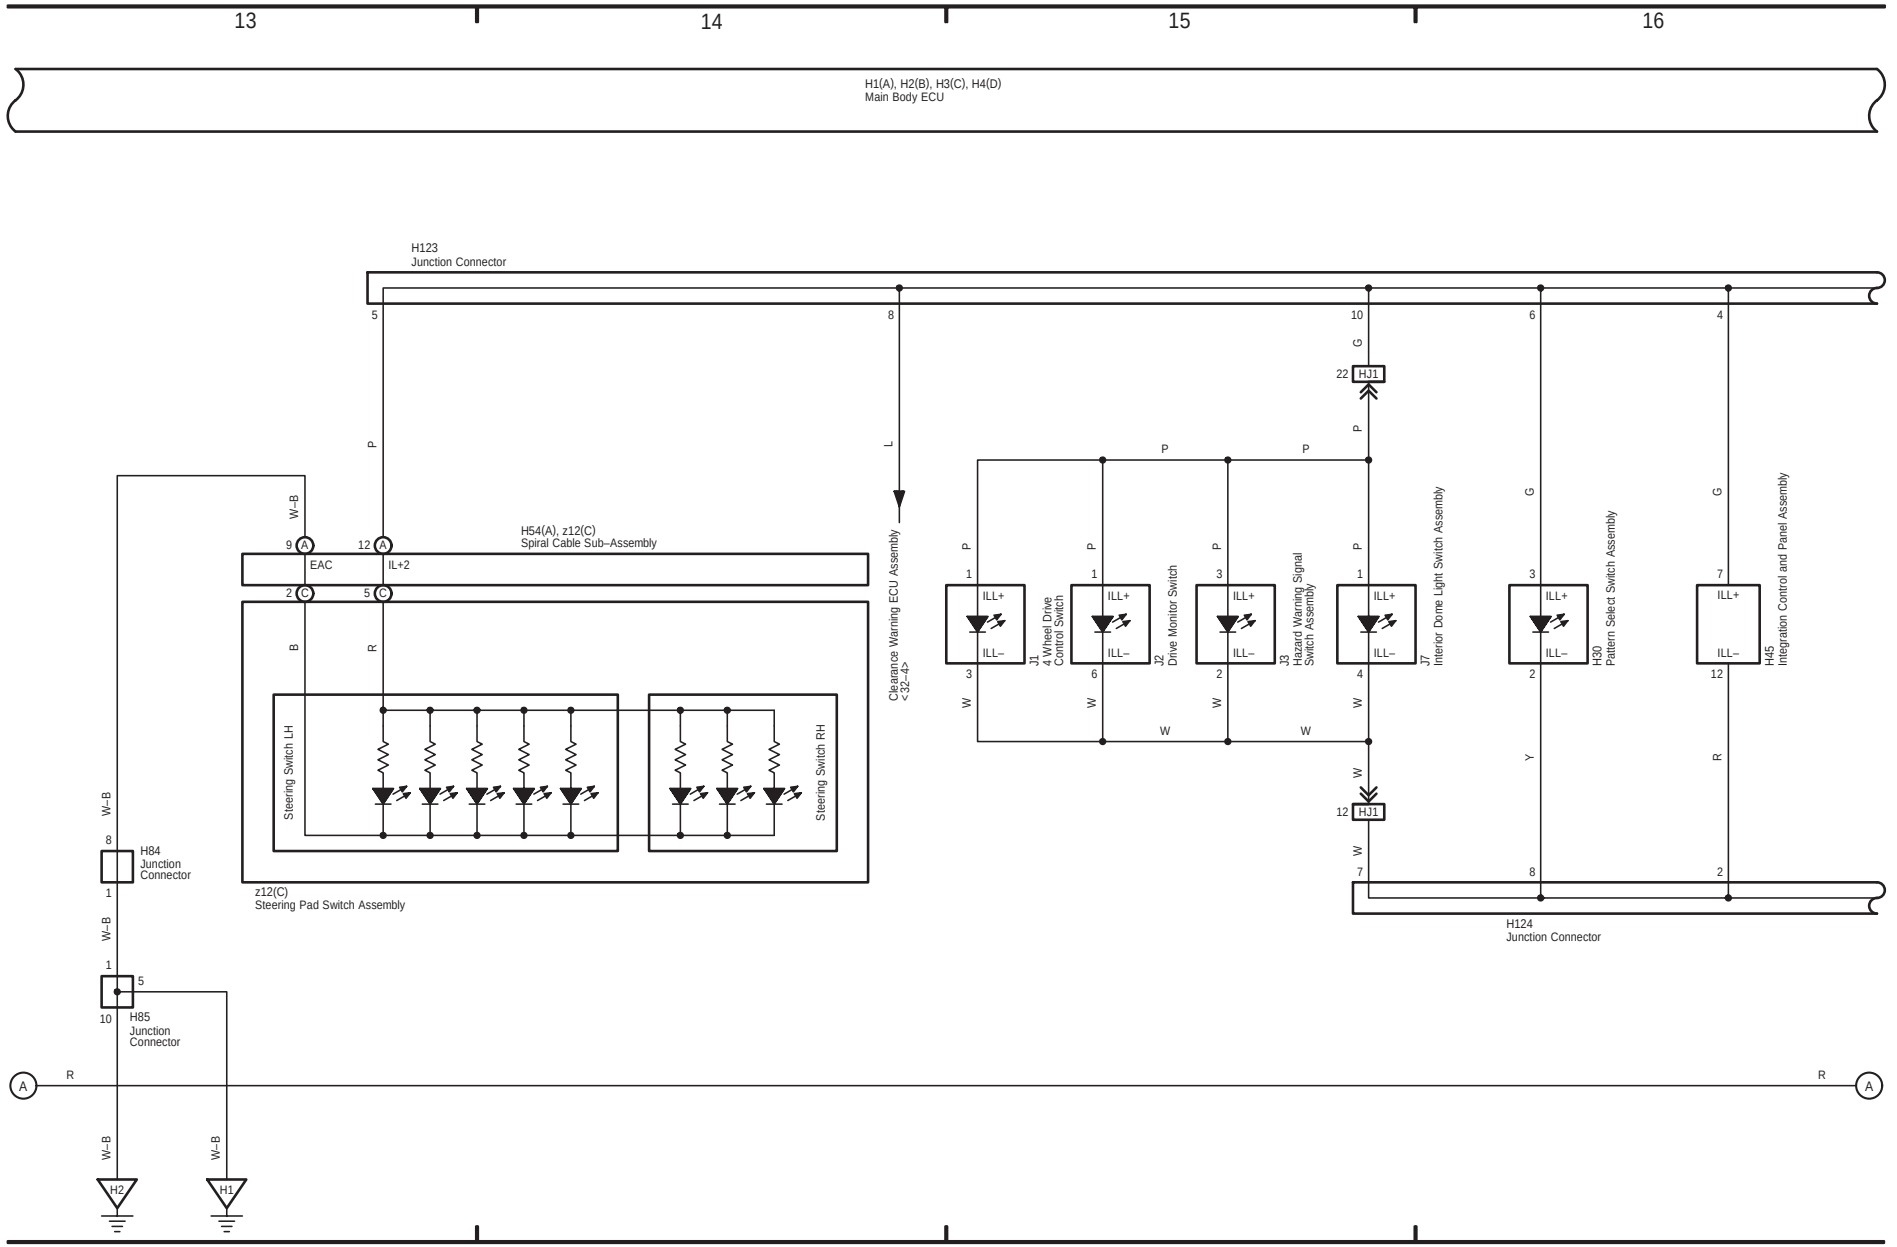

SEQUOIA (EM27L0U)


M

(Cont. next page)

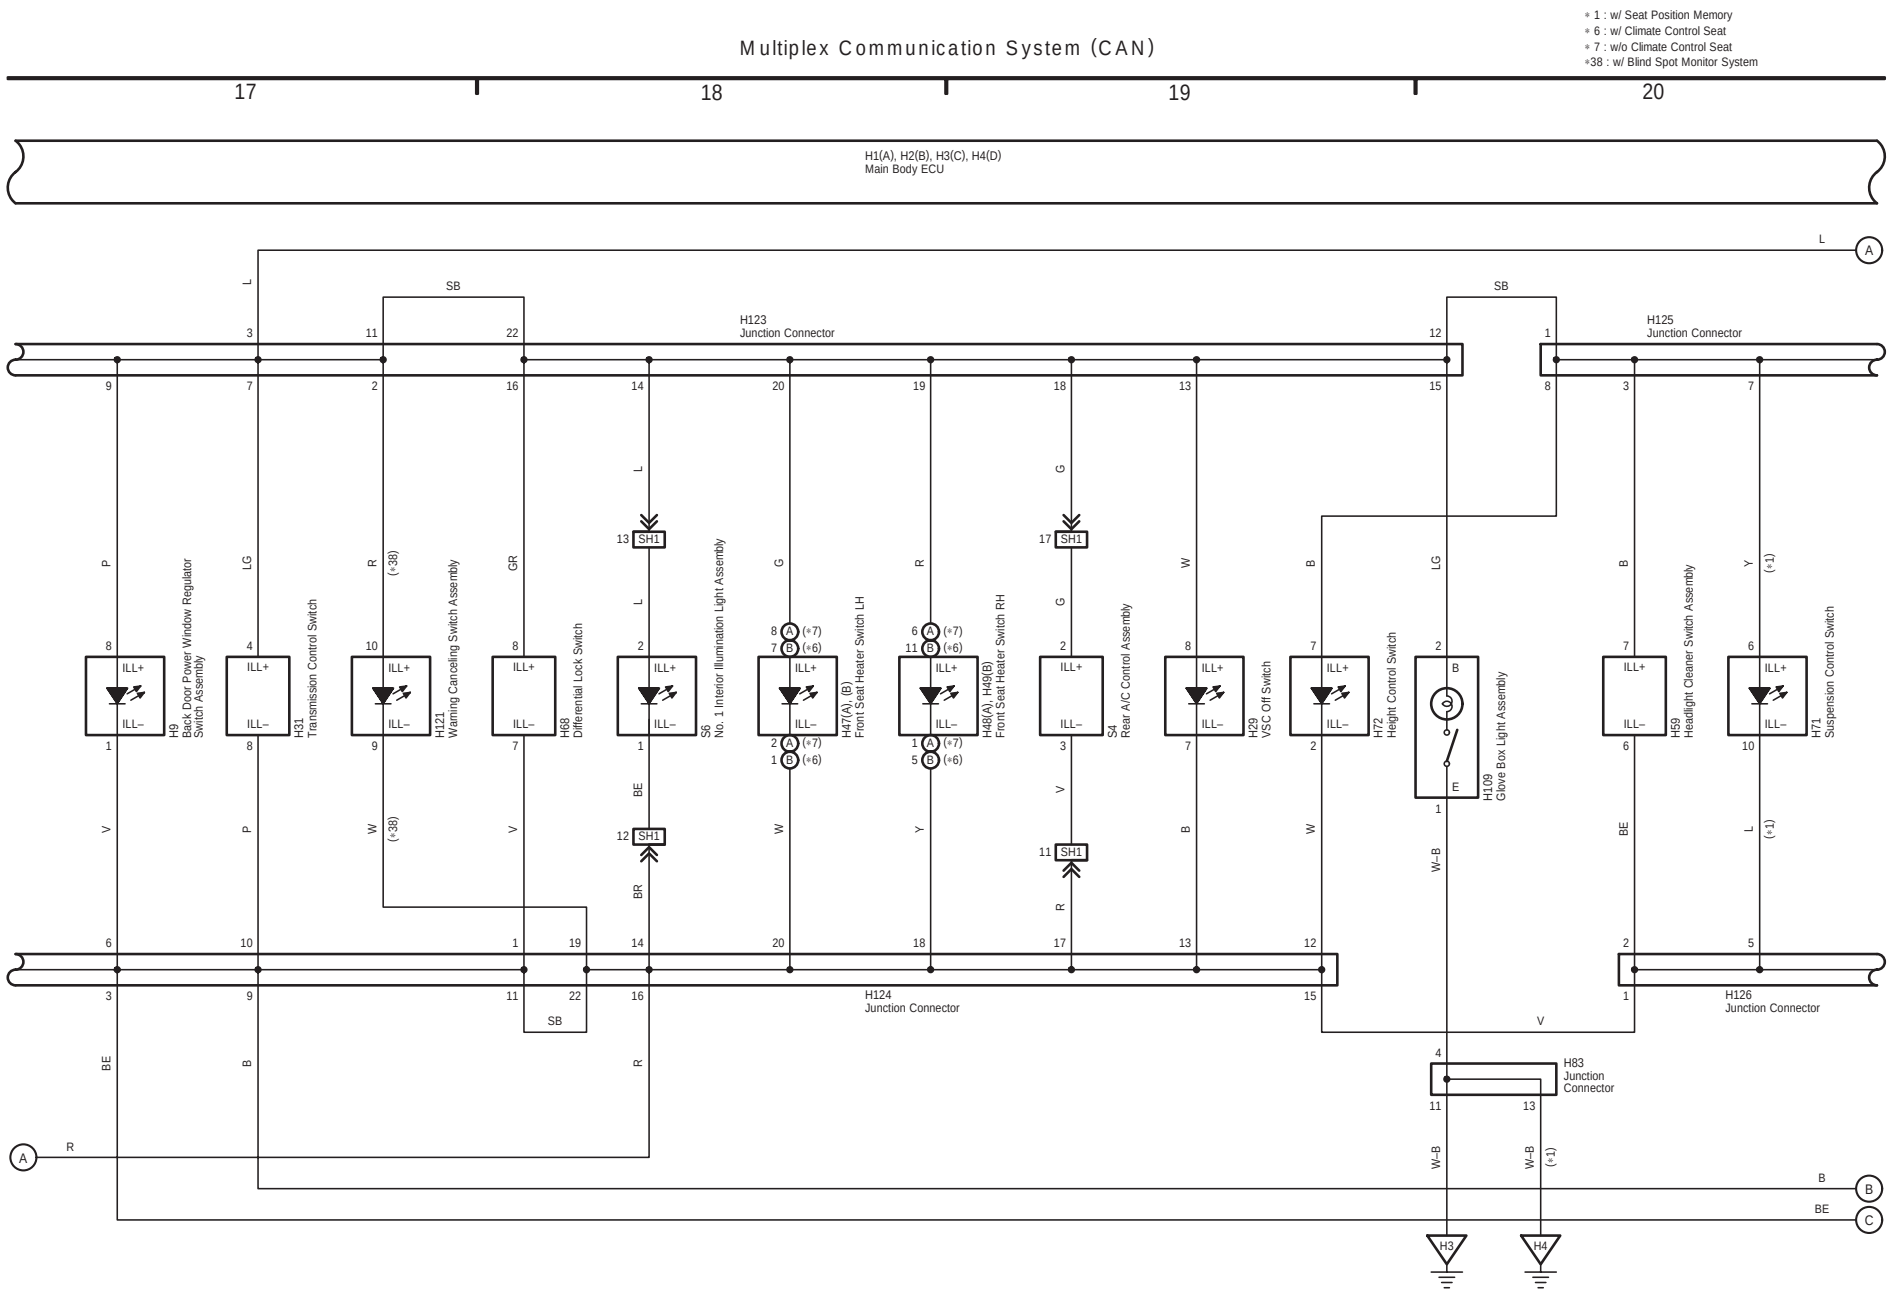

(Cont. next page)


Multiplex Communication System (CAN)

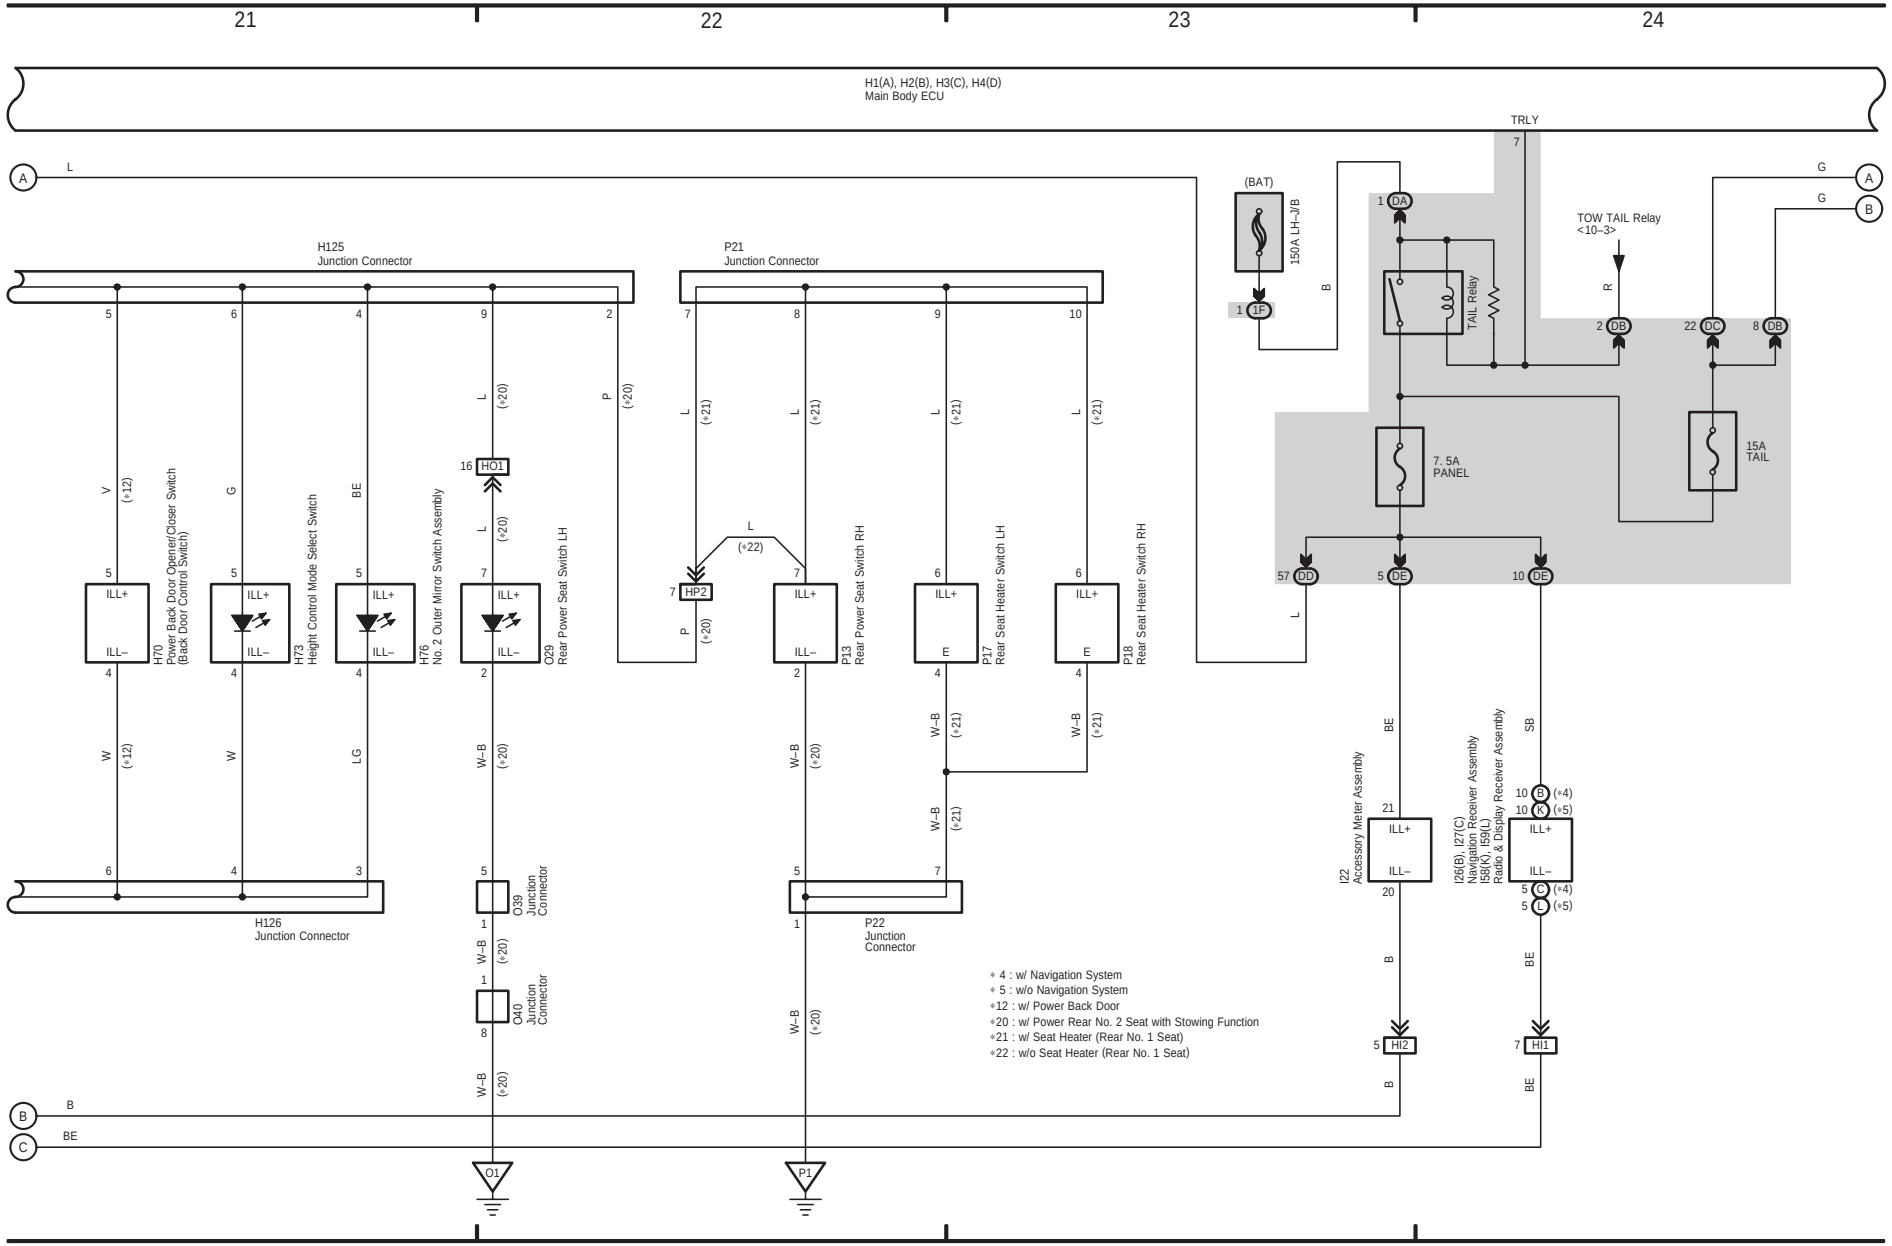

(Cont. next page)

Multiplex Communication System (CAN)

25 26 27 28

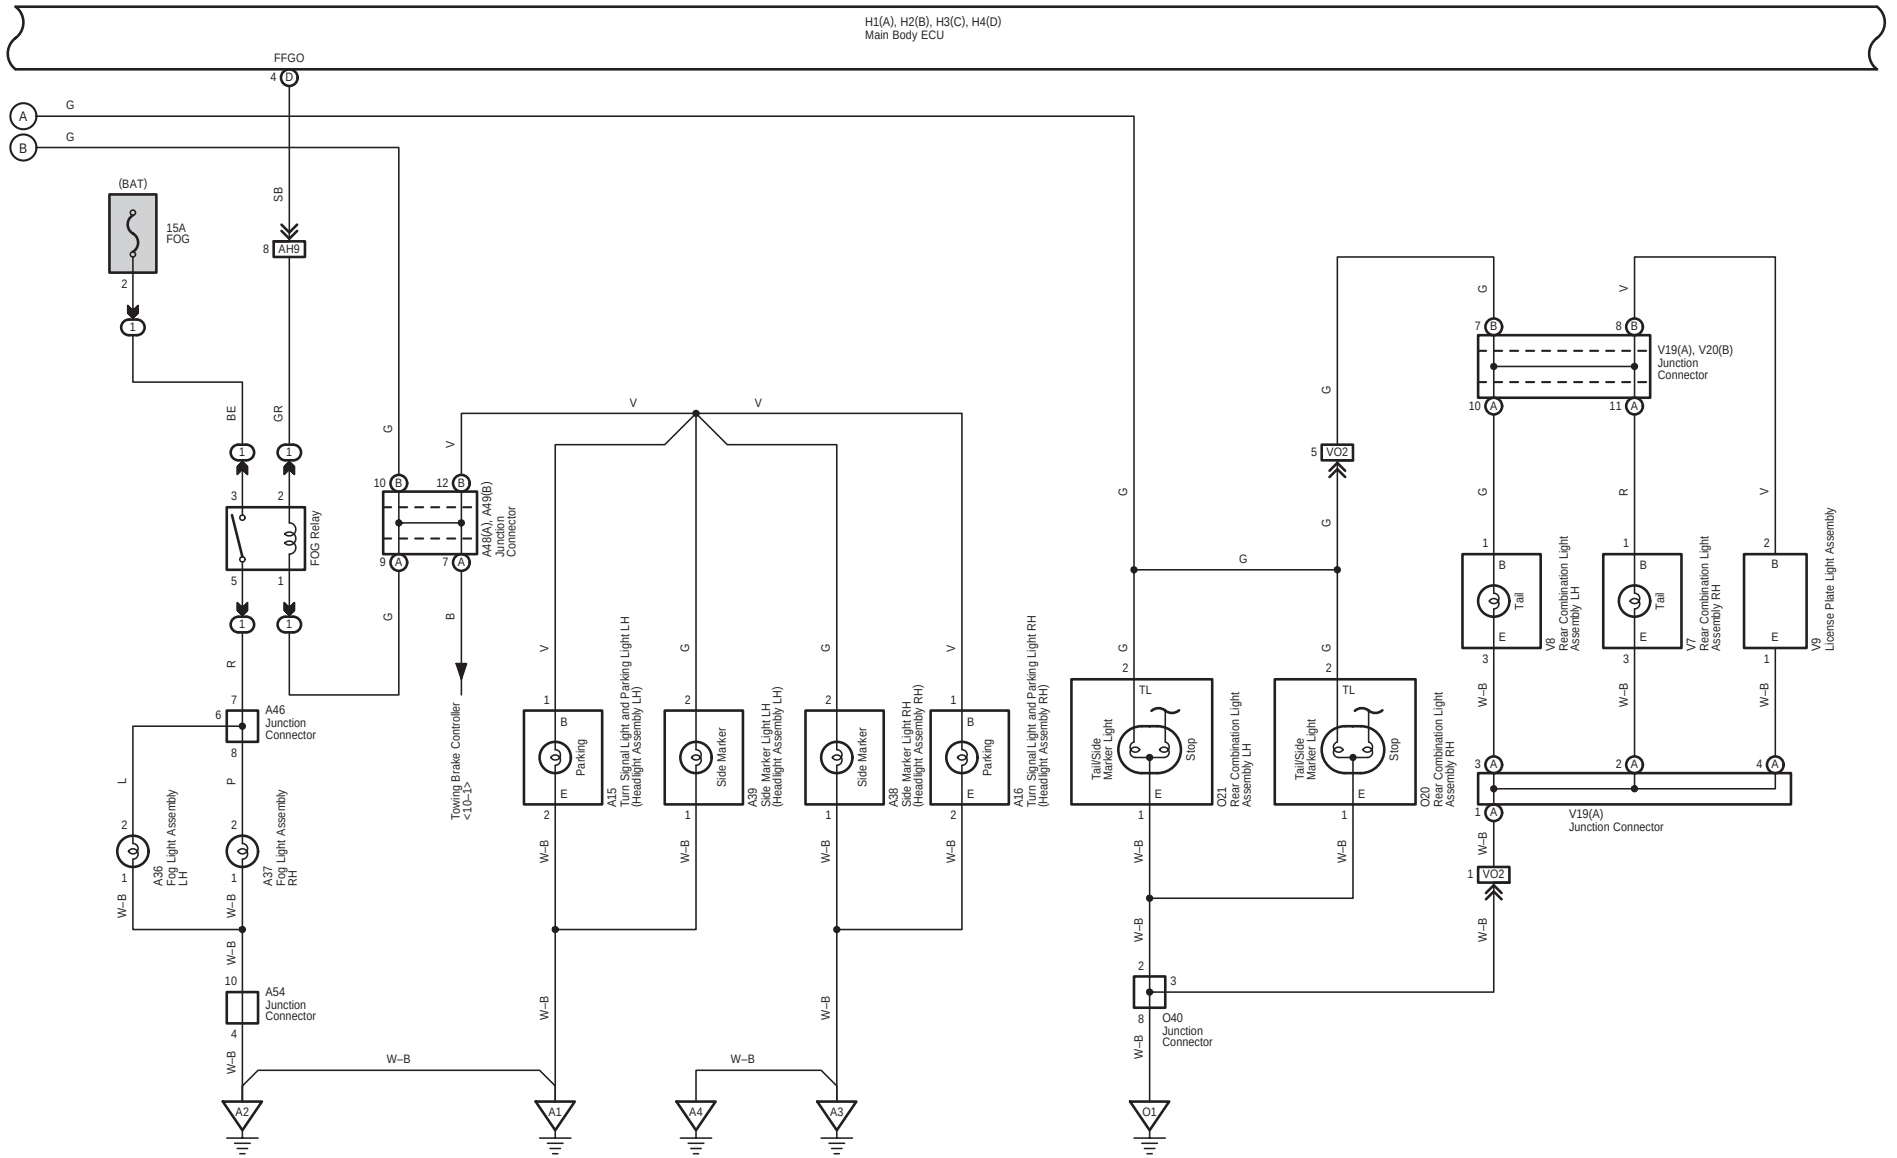


(Cont. next page)

Multiplex Communication System (CAN)


∗ 1 : w/ Seat Position Memory
∗36 : w/ Daytime Running Light
∗37 : w/o Daytime Running Light

29 30 31 32

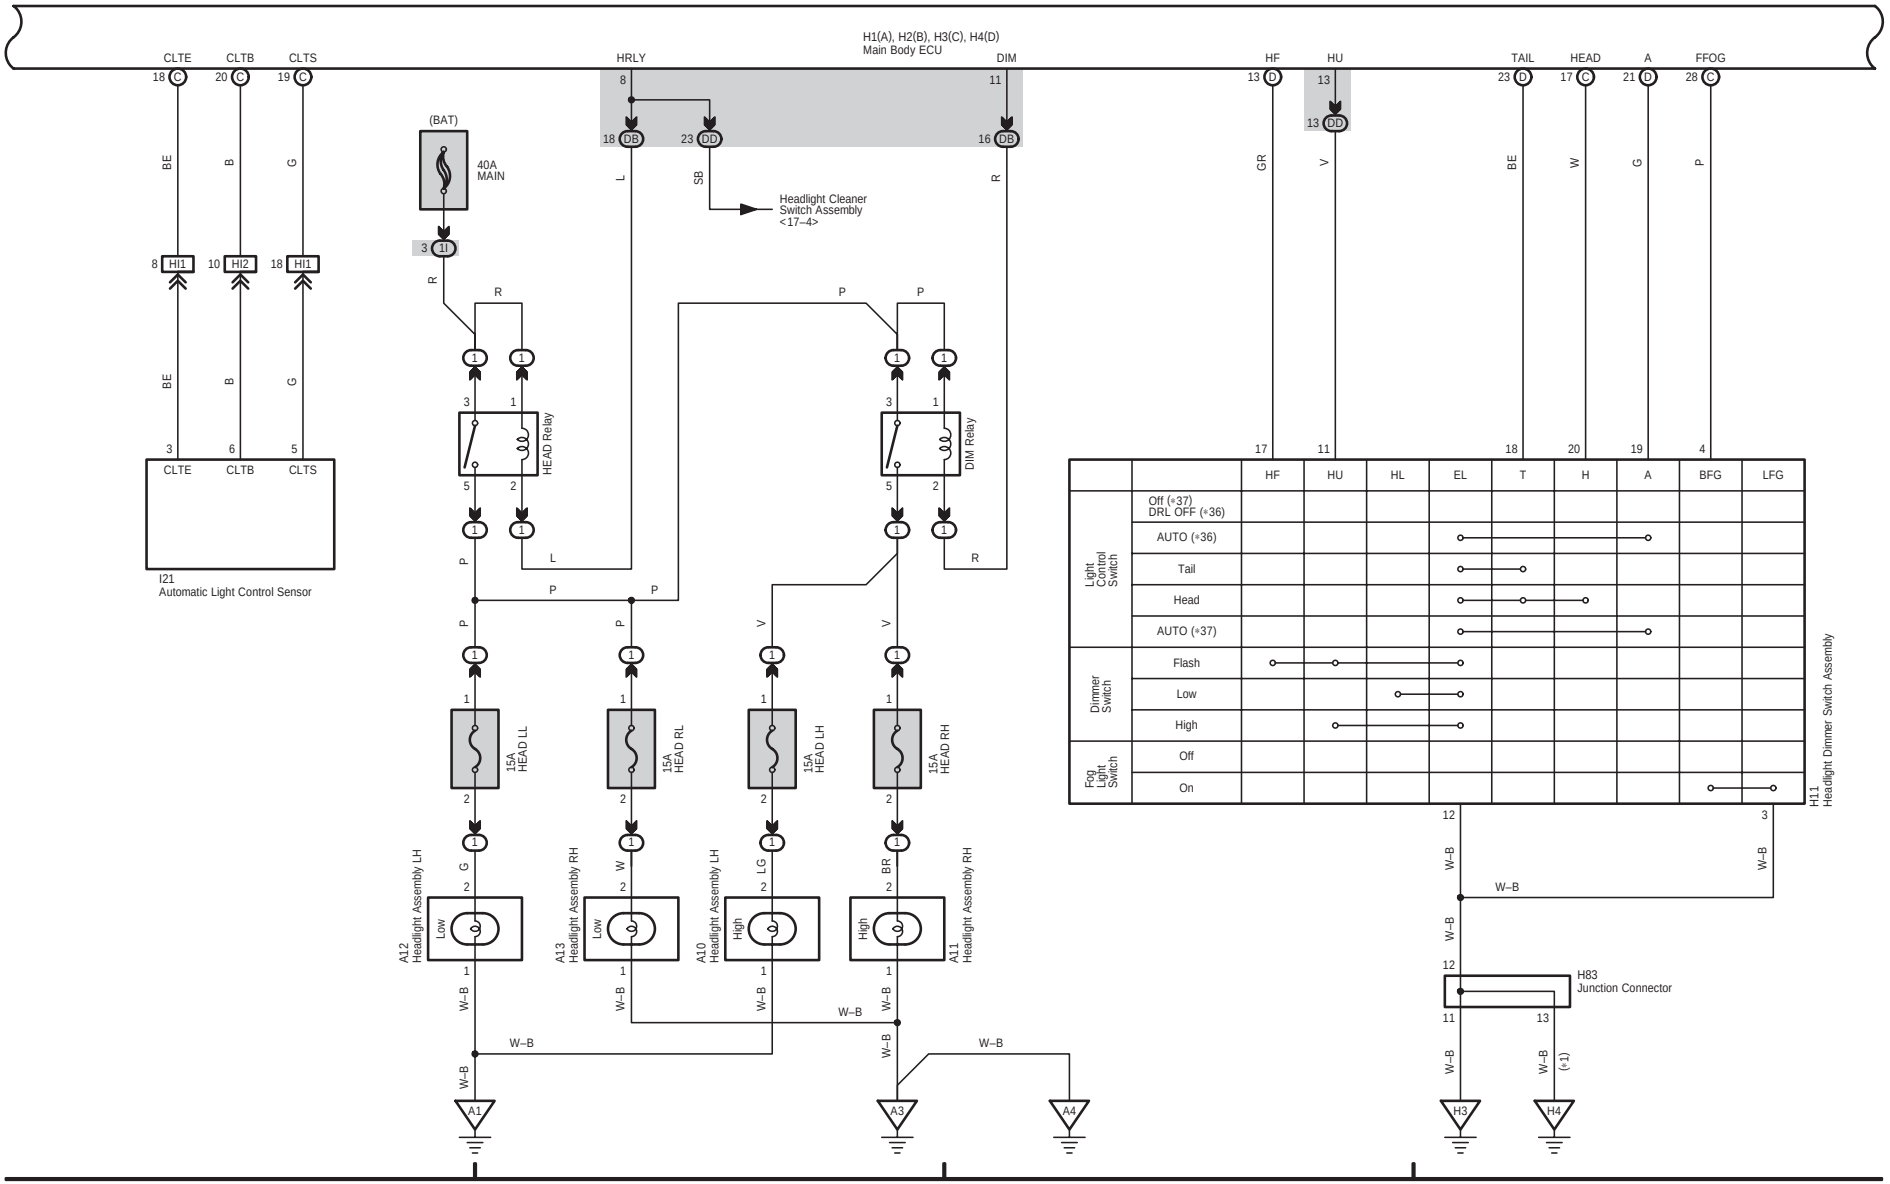

(Cont. next page)


Multiplex Communication System (CAN)

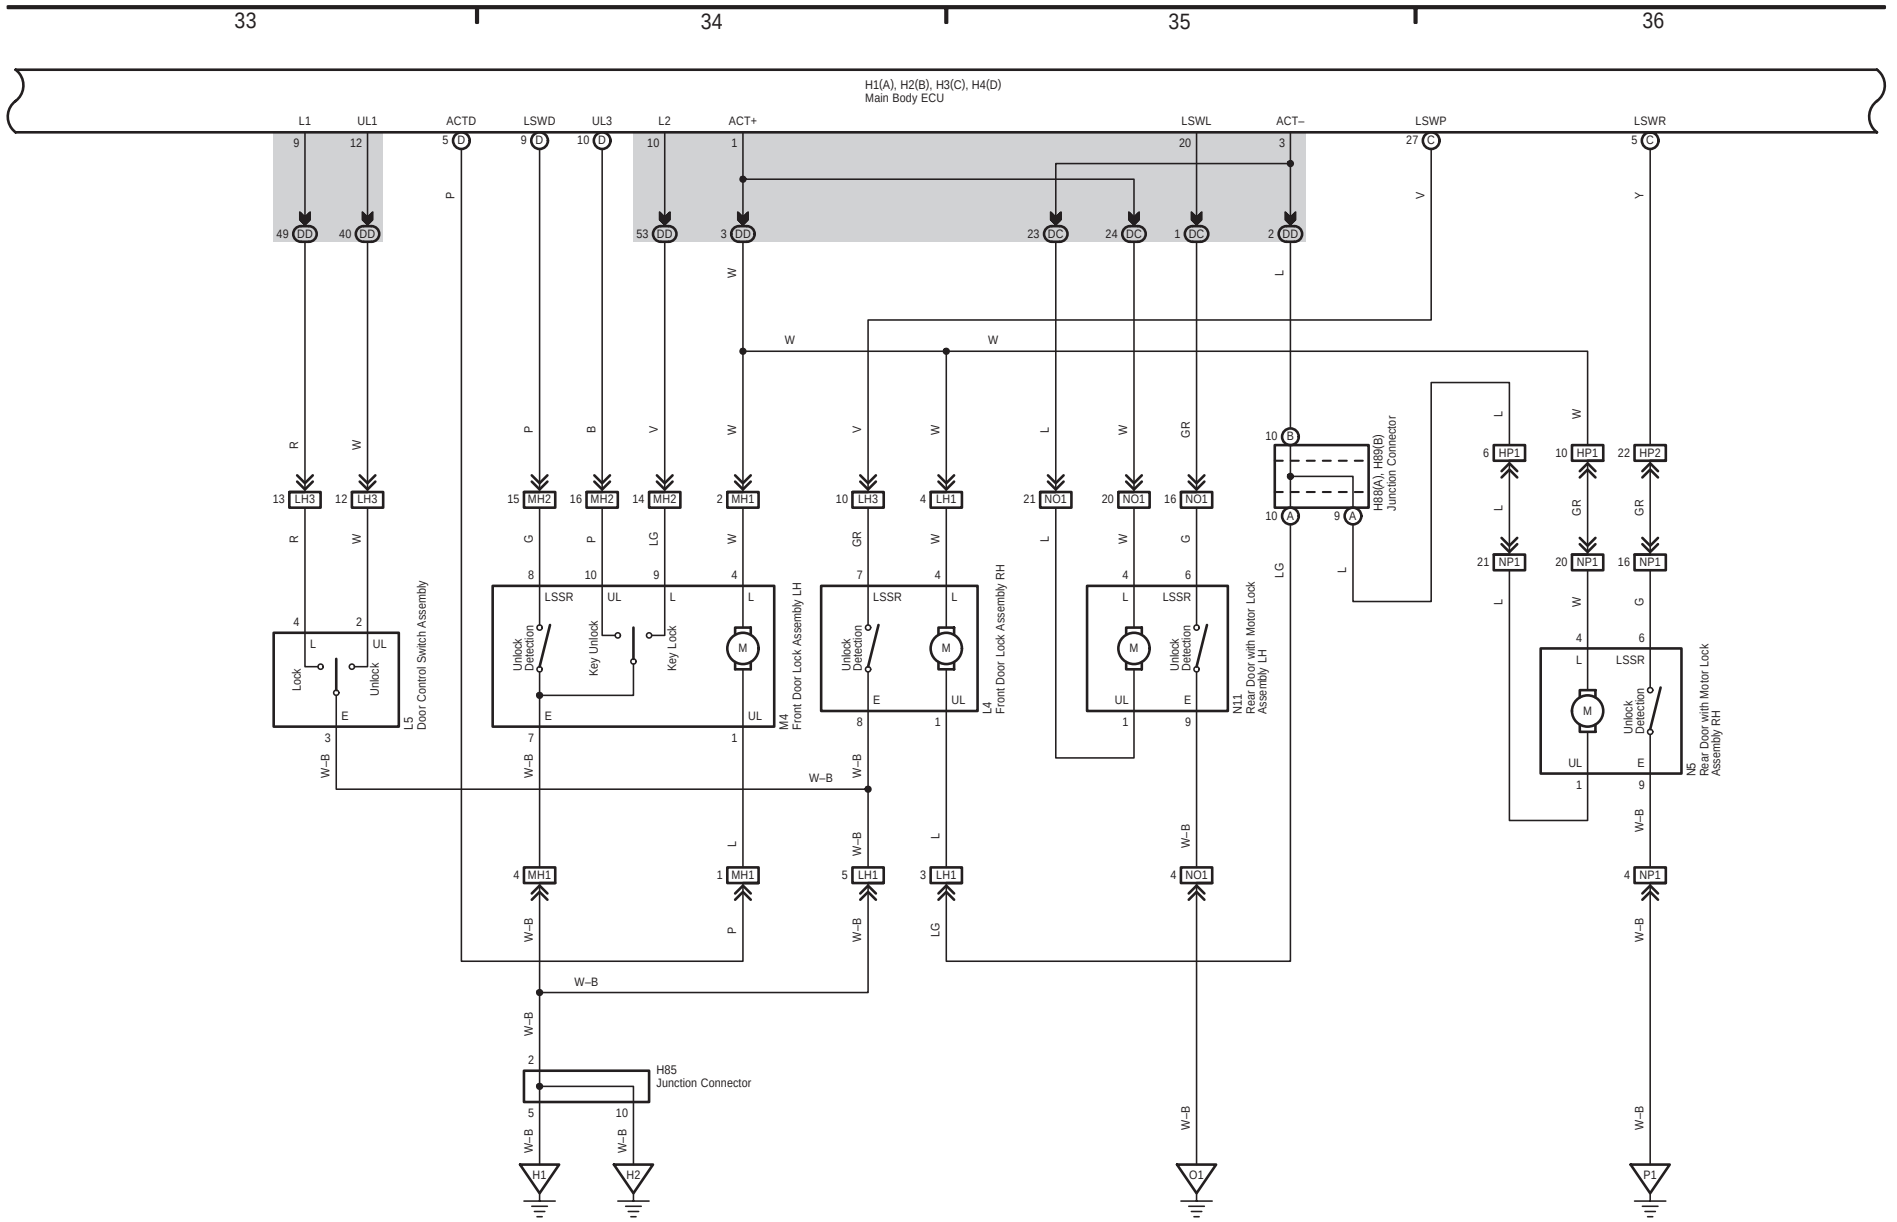

(Cont. next page)


Multiplex Communication System (CAN)

*25 : w/ Glass Breakage Sensor

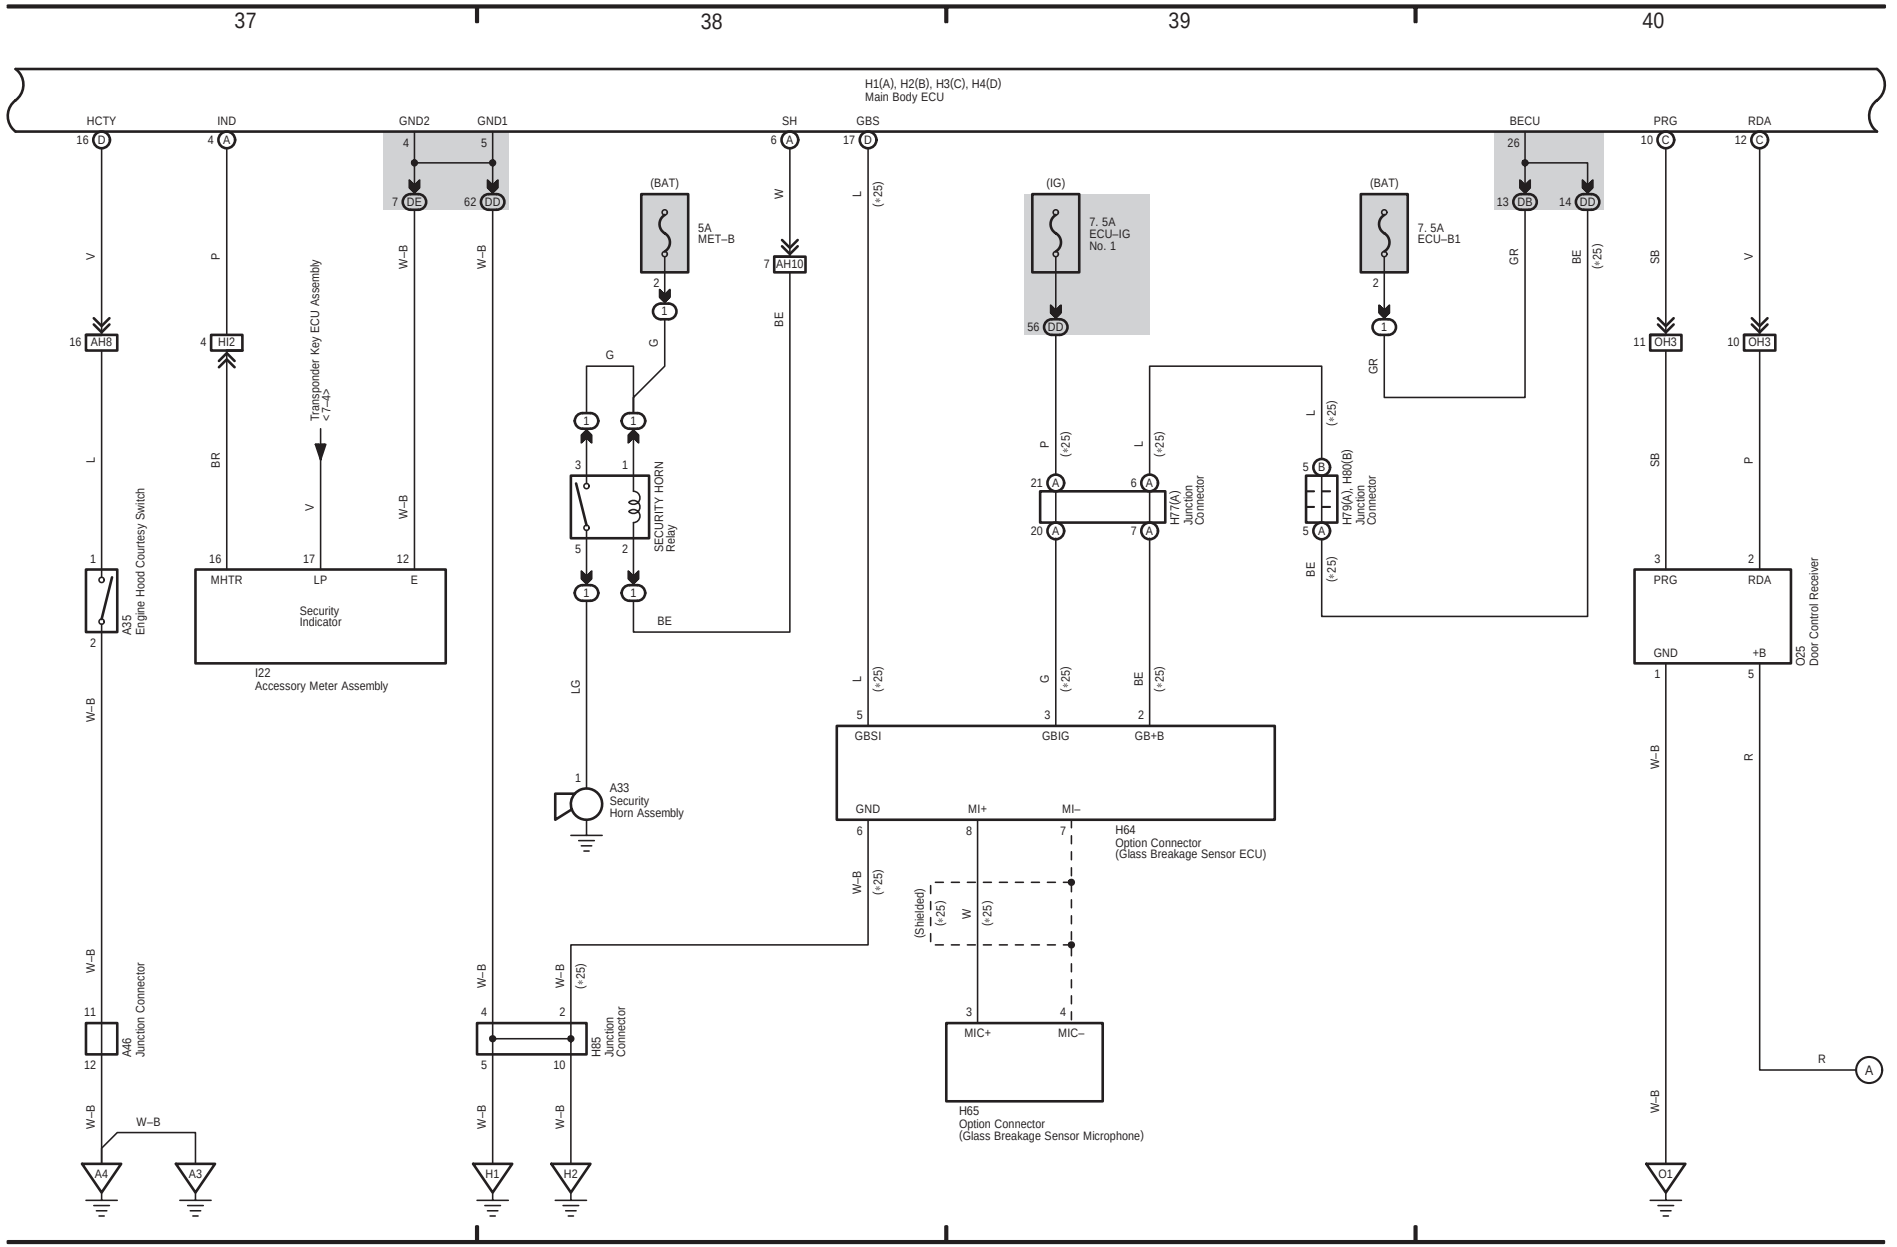

2 SEQUOIA (Cont' d)

(Cont. next page)

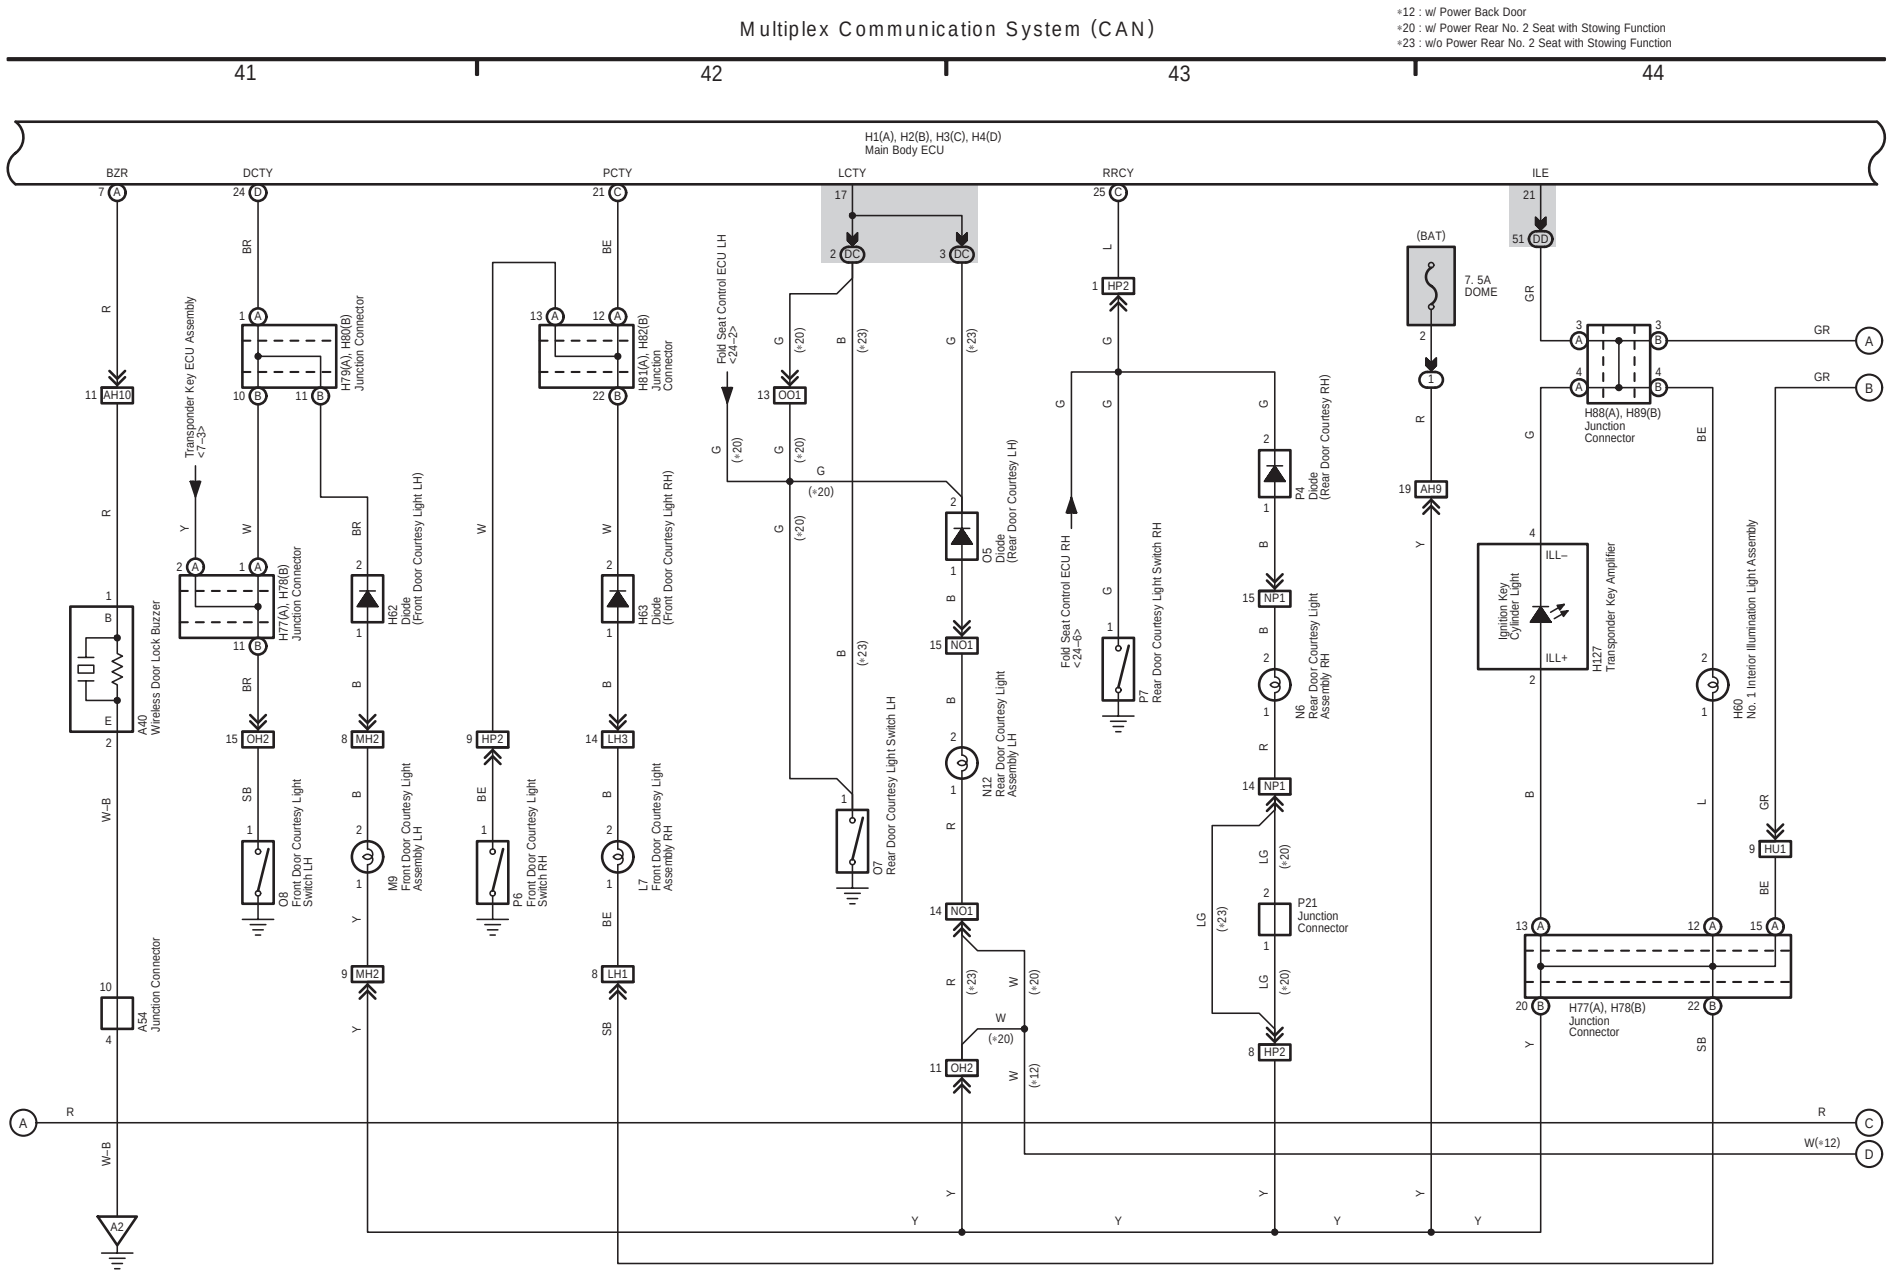


(Cont. next page)

Multiplex Communication System (CAN)

∗12 : w/ Power Back Door
∗18 : w/ Rear Seat Entertainment System
∗19 : w/o Rear Seat Entertainment System
∗24 : w/ Vanity Light

45 46 47 48


H1(A), H2(B), H3(C), H4(D)
Main Body ECU

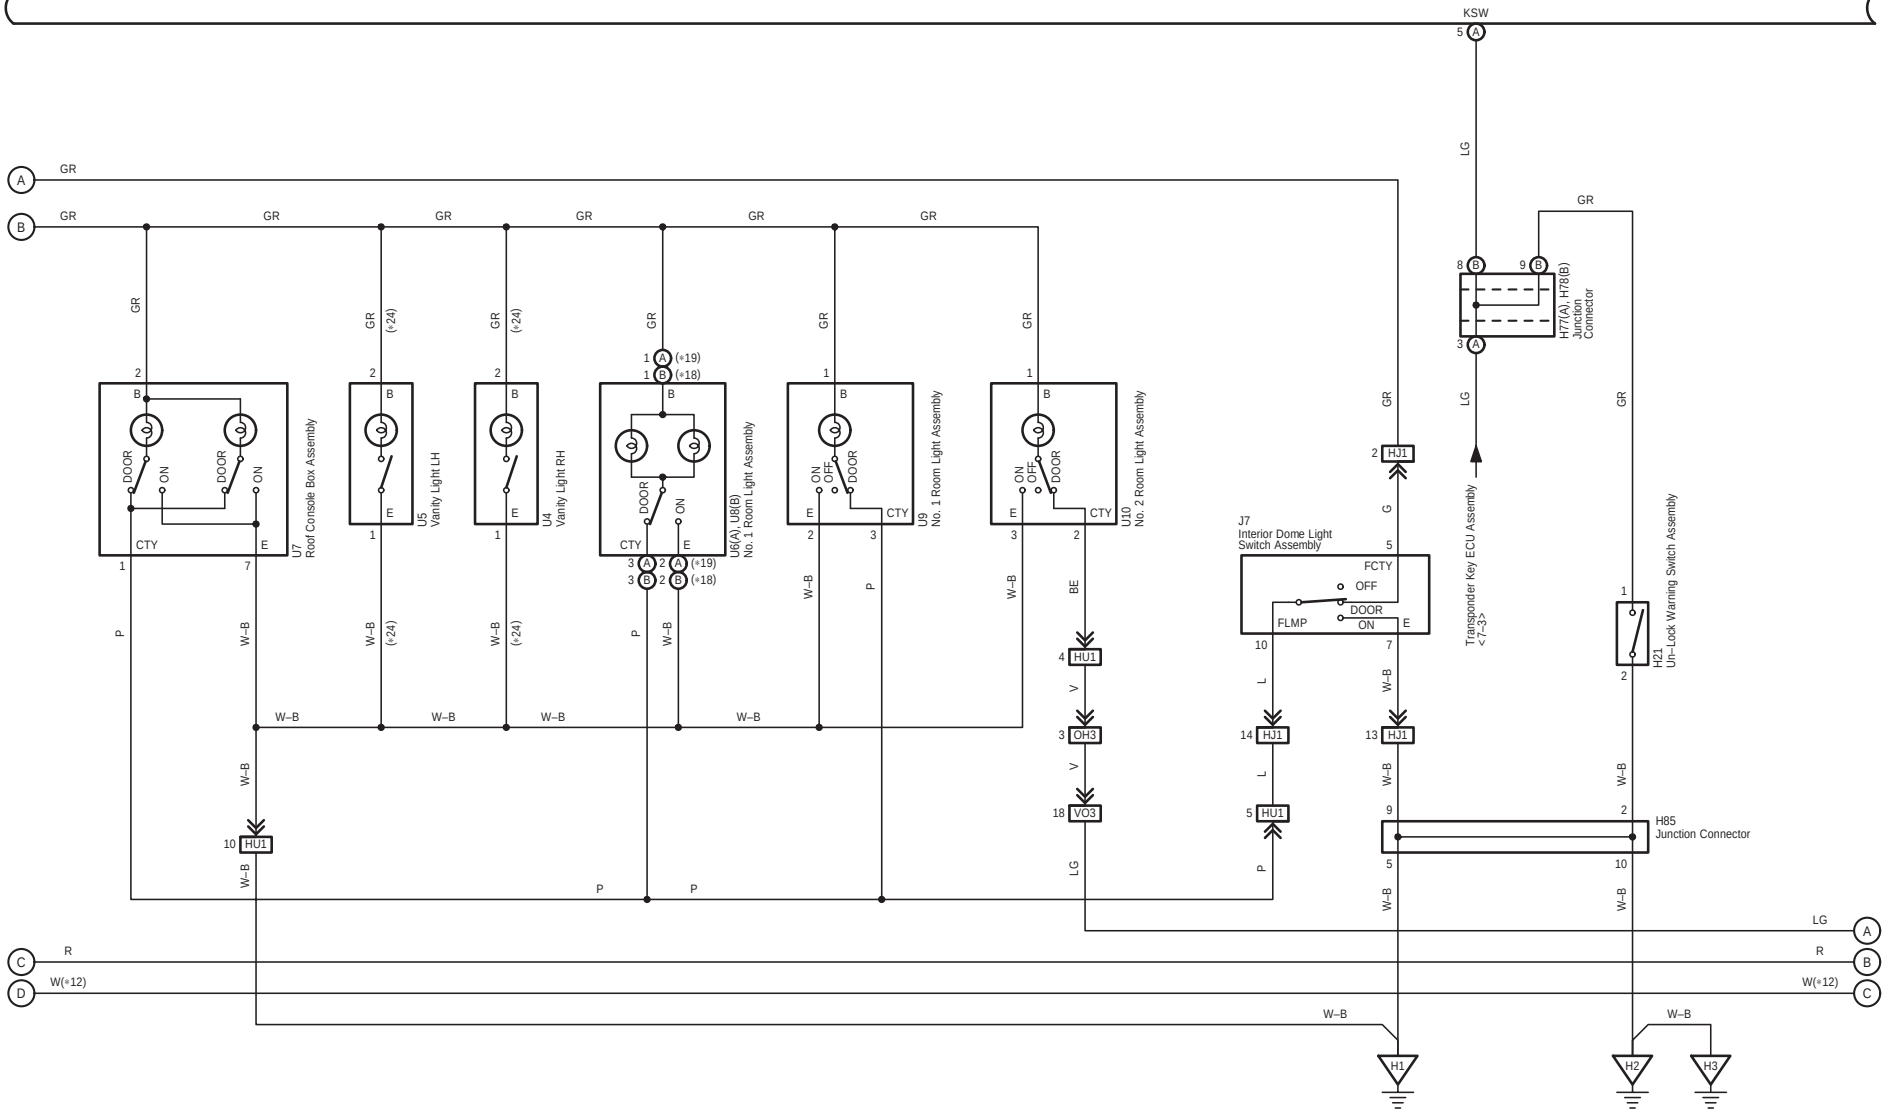

(Cont. next page)


Multiplex Communication System (CAN)

*12 : w/ Power Back Door
*13 : w/o Power Back Door
*20 : w/ Power Rear No. 2 Seat with Stowing Function

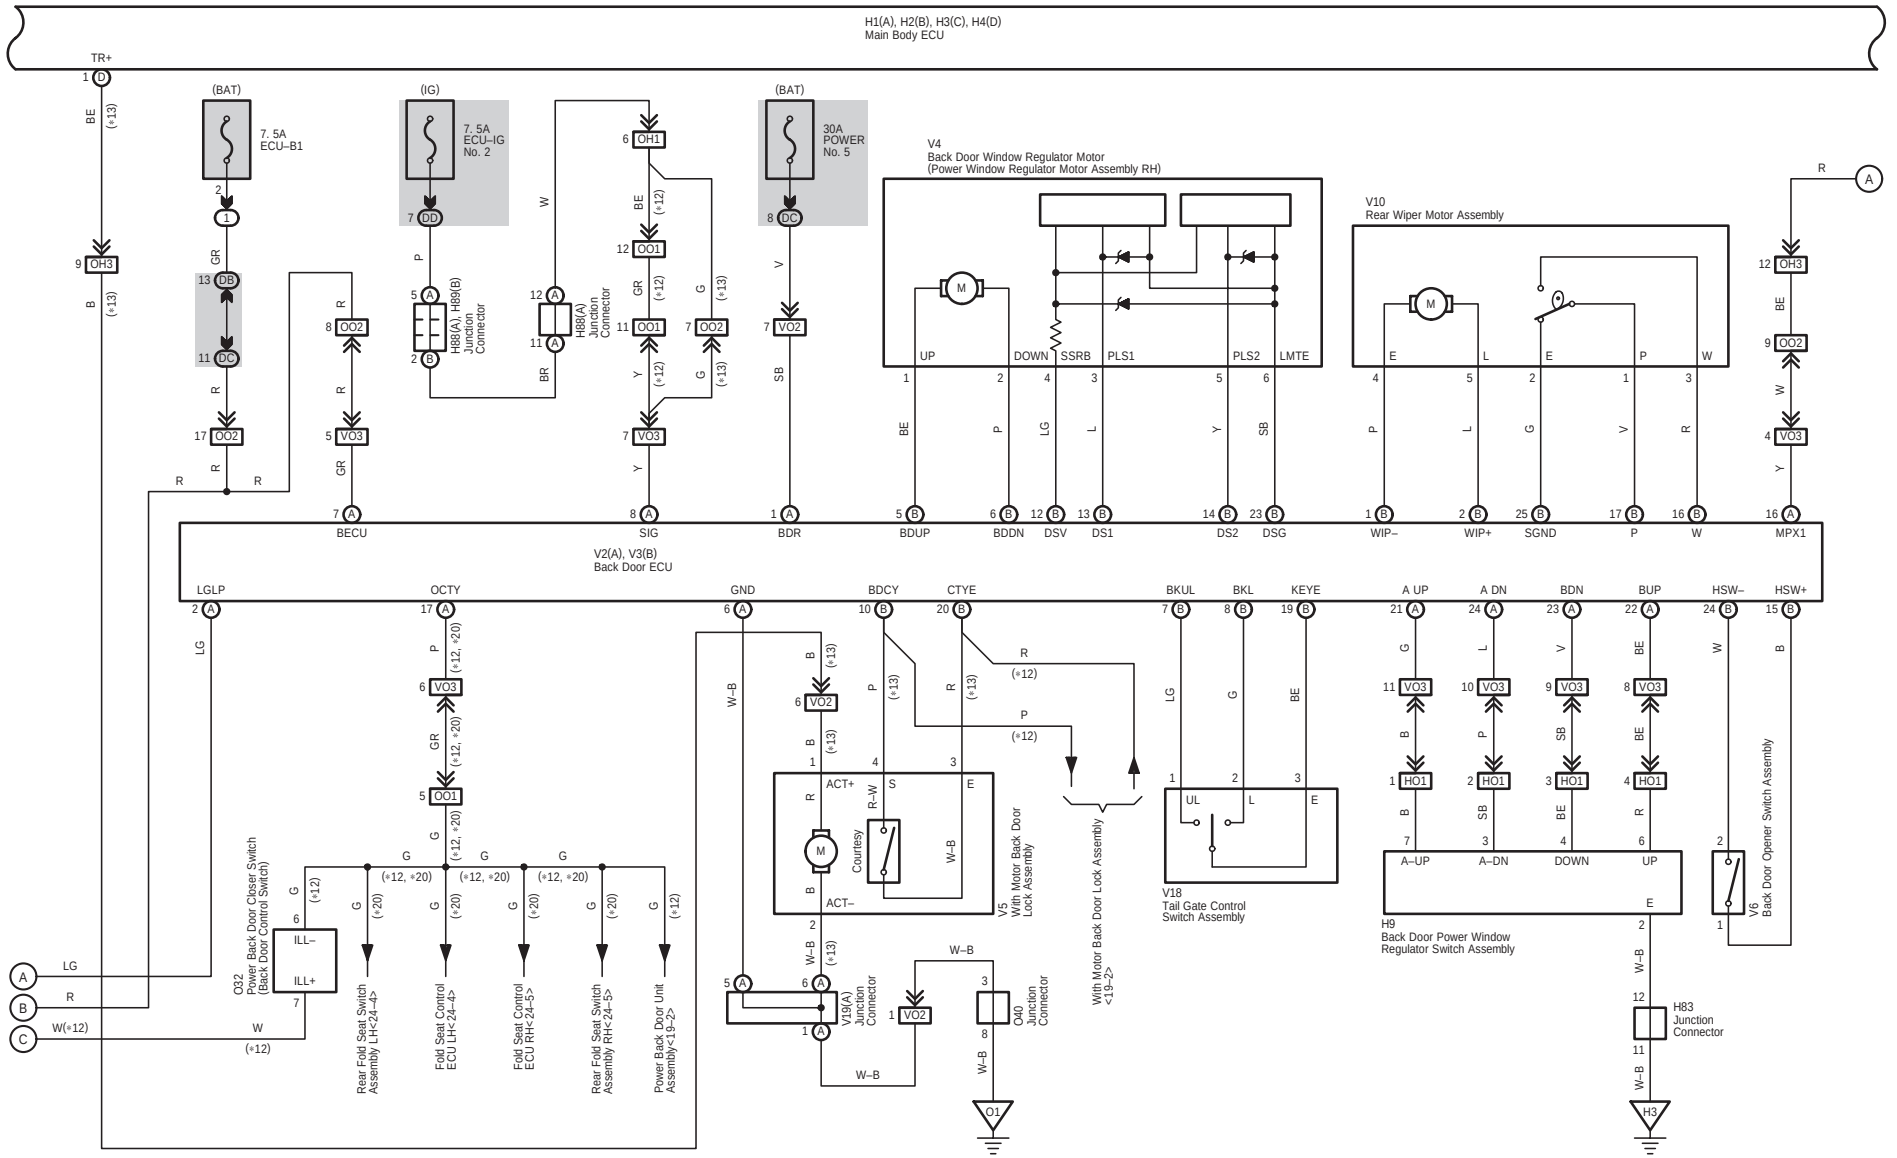

(Cont. next page)

Multiplex Communication System (CAN)

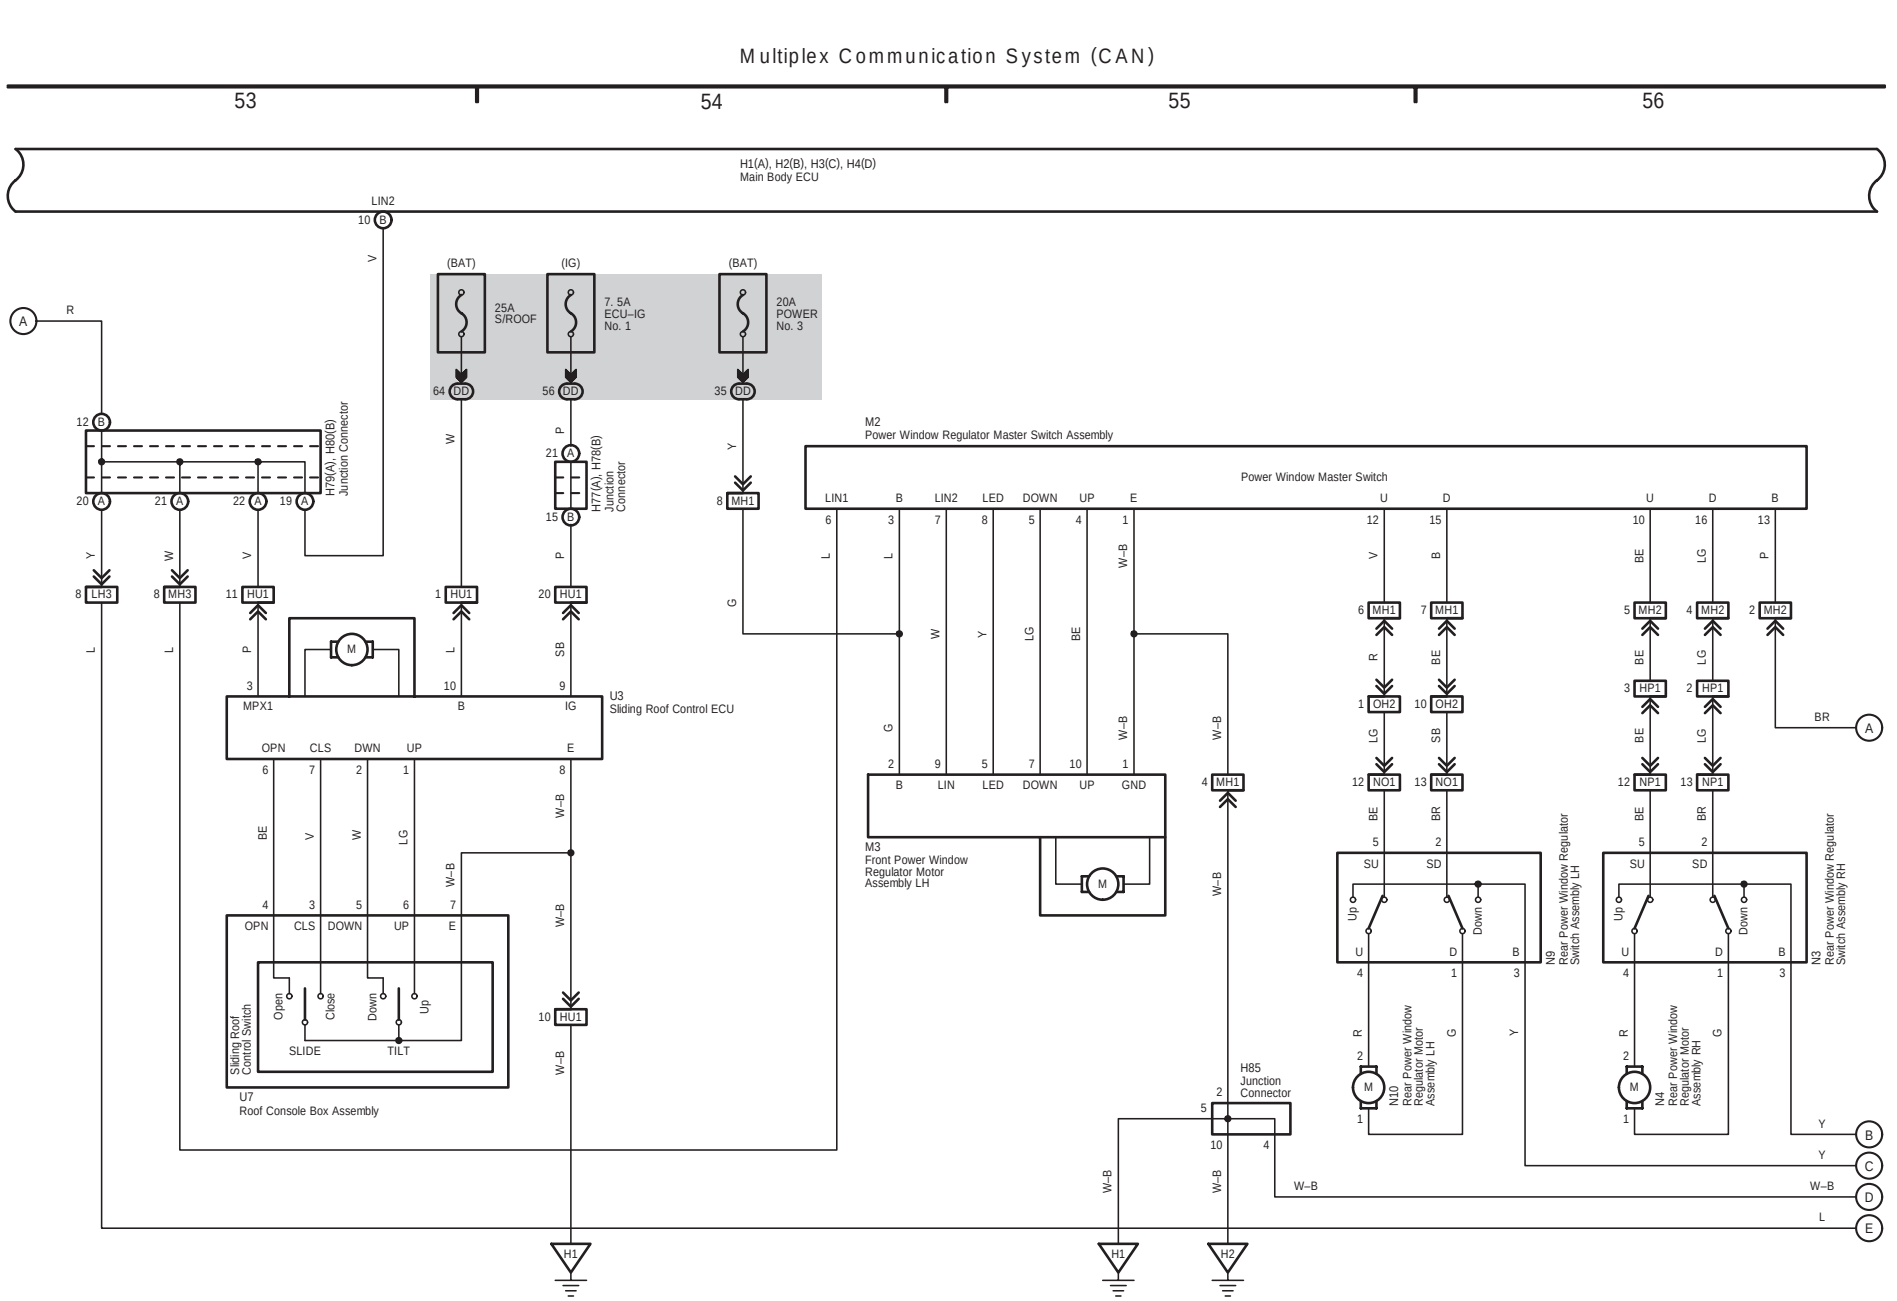

(Cont. next page)

Multiplex Communication System (CAN)

*12 : w/ Power Back Door

57 58 59 60

H1(A), H2(B), H3(C), H4(D)
Main Body ECU

PWS

PBDS

(BAT)

30A POWER No. 1

P/W Relay

25A POWER NO. 4

L3
Front Power Window Regulator Motor Assembly RH

LIN LED UP DOWN AUTO GND B

L2
Front Power Window Regulator Switch Assembly RH

LED UP DOWN AUTO GND

H70
Power Back Door Opener/Closer Switch (Back Door Control Switch)


H84
Junction Connector

H85
Junction Connector

H1 H2

(Cont. next page)

Multiplex Communication System (CAN)

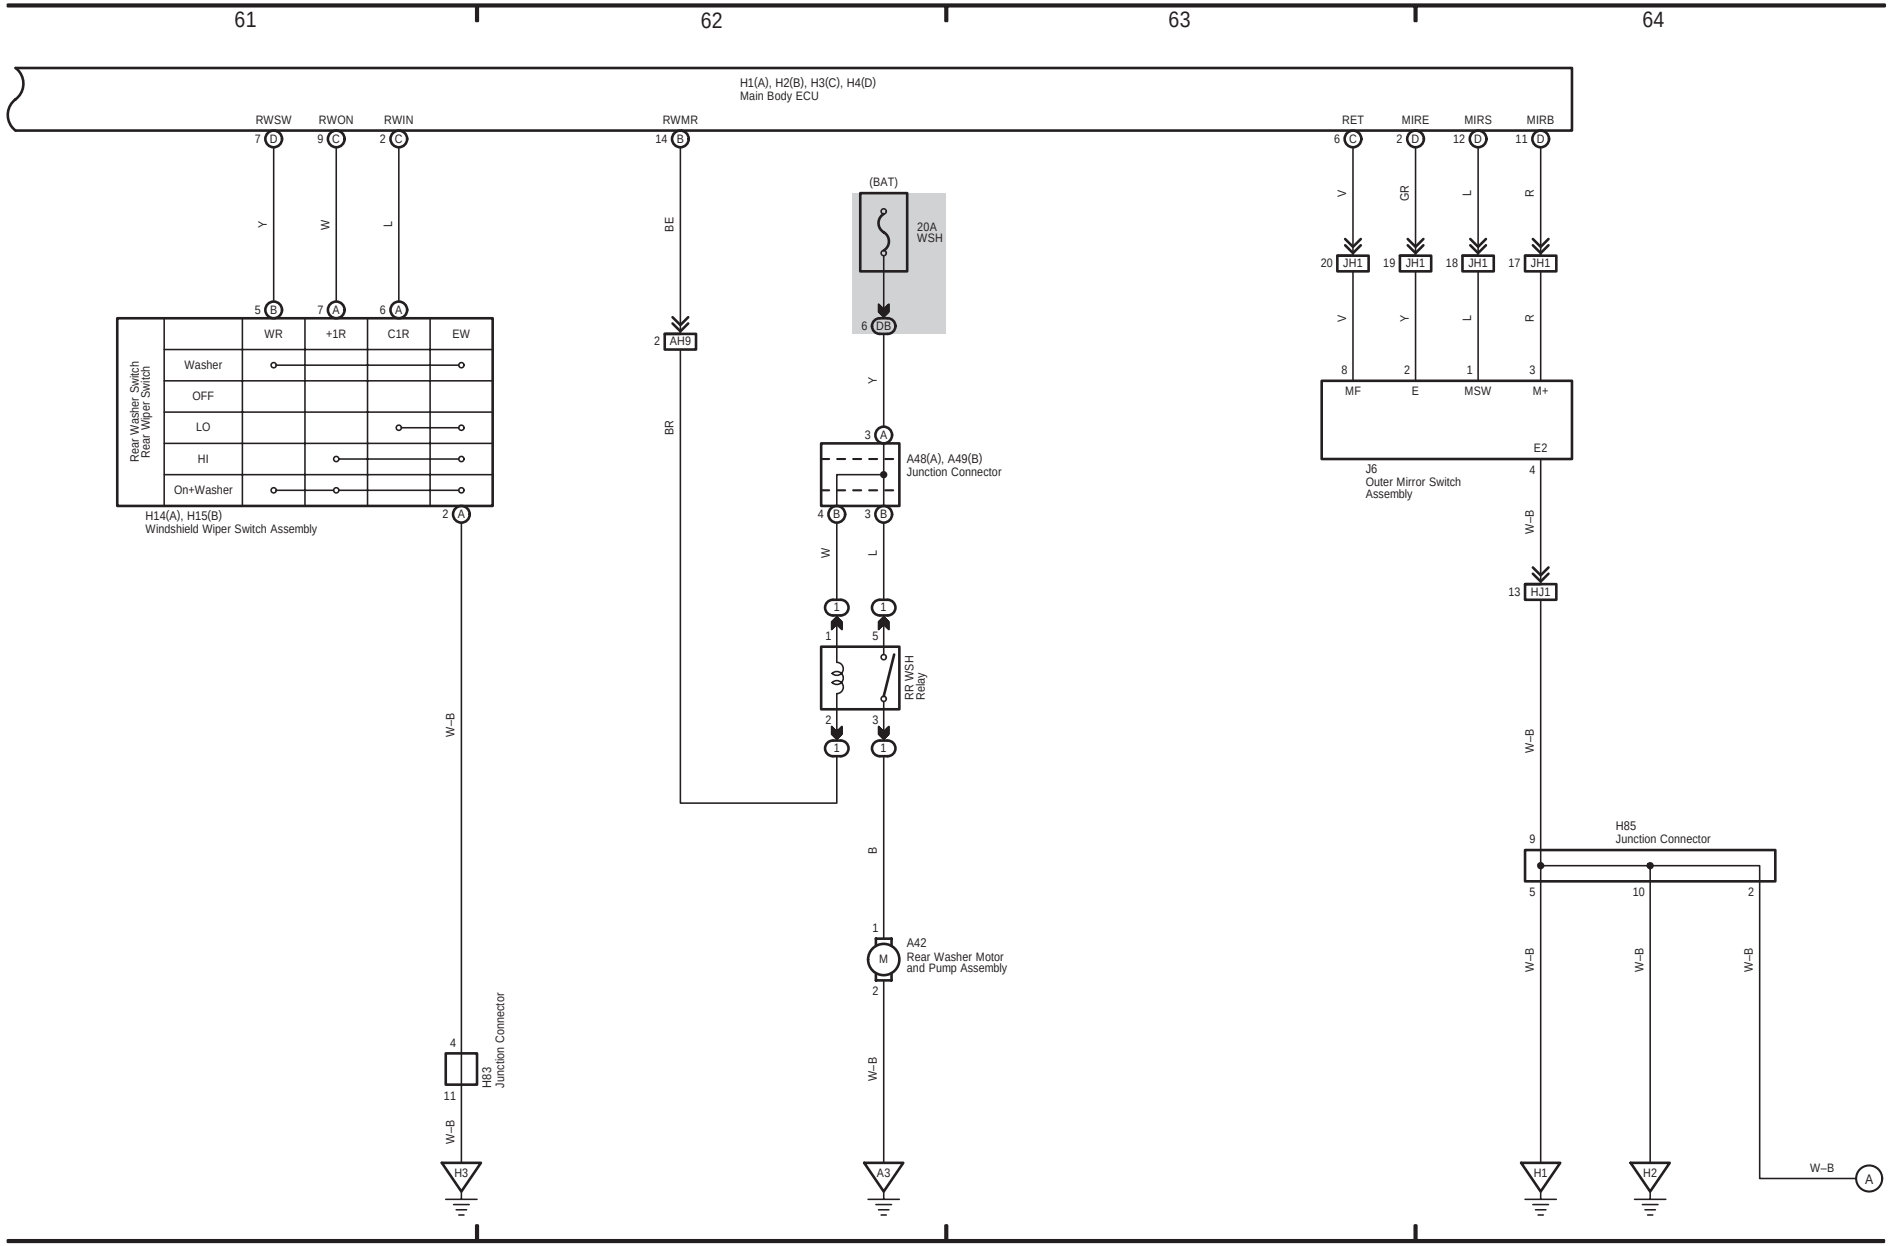

2 SEQUOIA (Cont' d)

