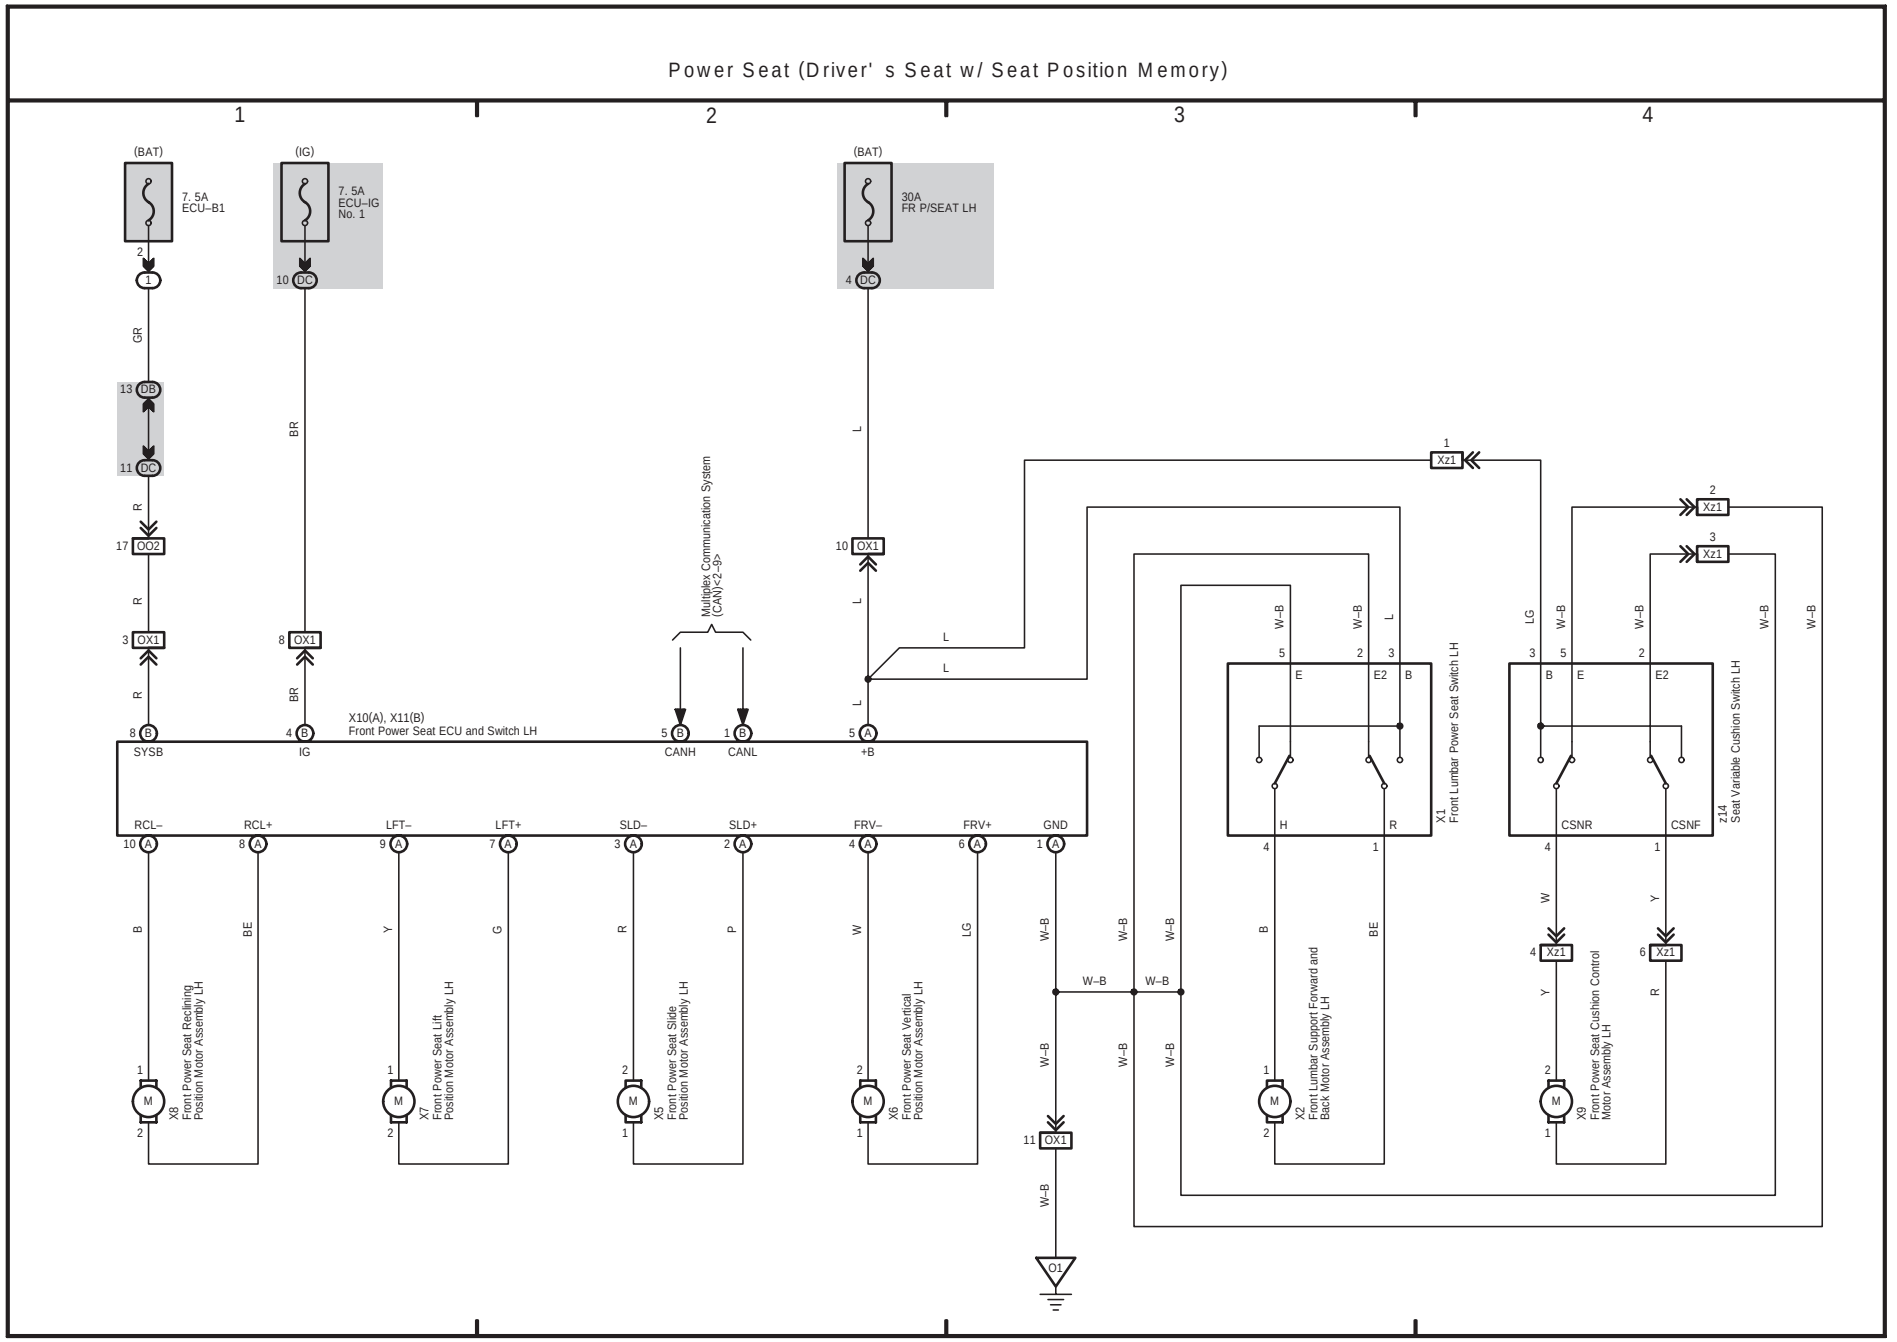

Power Seat (Driver' s Seat w/ Seat Position Memory)
1
2
3
4
(BAT)
7. 5A
ECU–B1
(IG)
7. 5A
ECU–IG
No. 1
(BAT)
30A
FR P/SEAT LH
GR
BR
L
13 DB
11 DC
10 DC
4 DC
17 OO2
3 OX1
8 OX1
10 OX1
11 OX1
Multiplex Communication System
(CAN)<2–3>
X10(A), X11(B)
Front Power Seat ECU and Switch LH
8 B SYSB
4 B IG
5 B CANH
1 B CANL
5 A +B
RCL–
RCL+
LFT–
LFT+
SLD–
SLD+
FRV–
FRV+
GND
10 A
8 A
9 A
7 A
3 A
2 A
4 A
6 A
1 A
B
BE
Y
G
R
P
W
LG
W–B
X8
Front Power Seat Reclining
Position Motor Assembly LH
X7
Front Power Seat Lift
Position Motor Assembly LH
X5
Front Power Seat Slide
Position Motor Assembly LH
X6
Front Power Seat Vertical
Position Motor Assembly LH
O1
1 Xz1
2 Xz1
3 Xz1
4 Xz1
6 Xz1
X1
Front Lumbar Power Seat Switch LH
E
E2
B
H
R
X2
Front Lumbar Support Forward and
Back Motor Assembly LH
Z14
Seat Variable Cushion Switch LH
CSNR
CSNF
X9
Front Power Seat Cushion Control
Motor Assembly LH