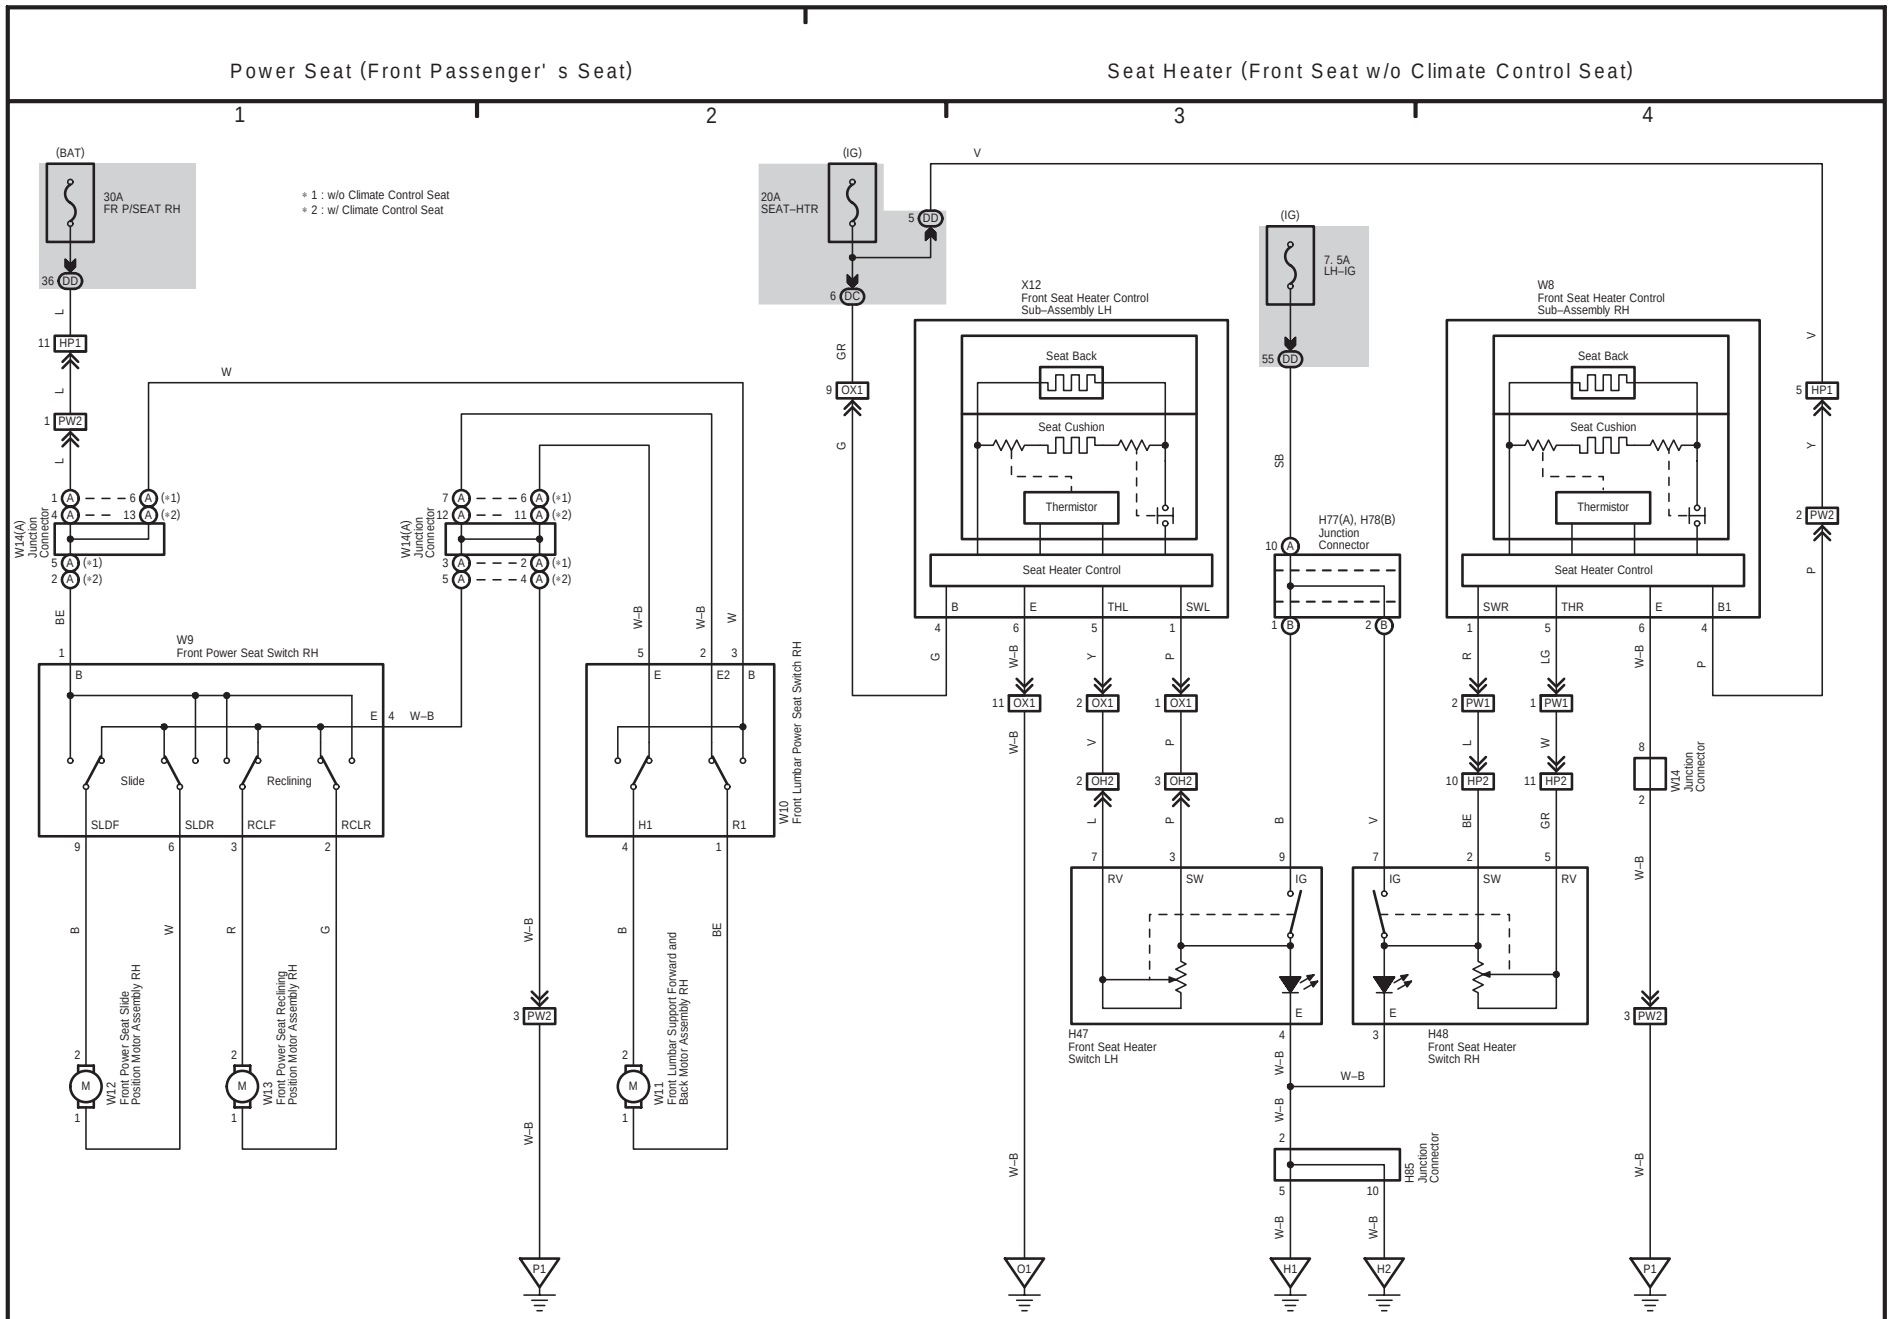

Power Seat (Front Passenger' s Seat)
Seat Heater (Front Seat w/o Climate Control Seat)
1
2
3
4
(BAT)
30A
FR P/SEAT RH
* 1 : w/o Climate Control Seat
* 2 : w/ Climate Control Seat
(IG)
20A
SEAT–HTR
7. 5A
LH–IG
X12
Front Seat Heater Control
Sub–Assembly LH
W8
Front Seat Heater Control
Sub–Assembly RH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
H77(A), H78(B)
Junction
Connector
W14(A)
Junction
Connector
W14
Junction
Connector
W9
Front Power Seat Switch RH
W10
Front Lumbar Power Seat Switch RH
Slide
Reclining
SLDF
SLDR
RCLF
RCLR
H1
R1
W12
Front Power Seat Slide
Position Motor Assembly RH
W13
Front Power Seat Reclining
Position Motor Assembly RH
W11
Front Lumbar Support Forward and
Back Motor Assembly RH
H47
Front Seat Heater
Switch LH
H48
Front Seat Heater
Switch RH
H85
Junction
Connector
P1
O1
H1
H2