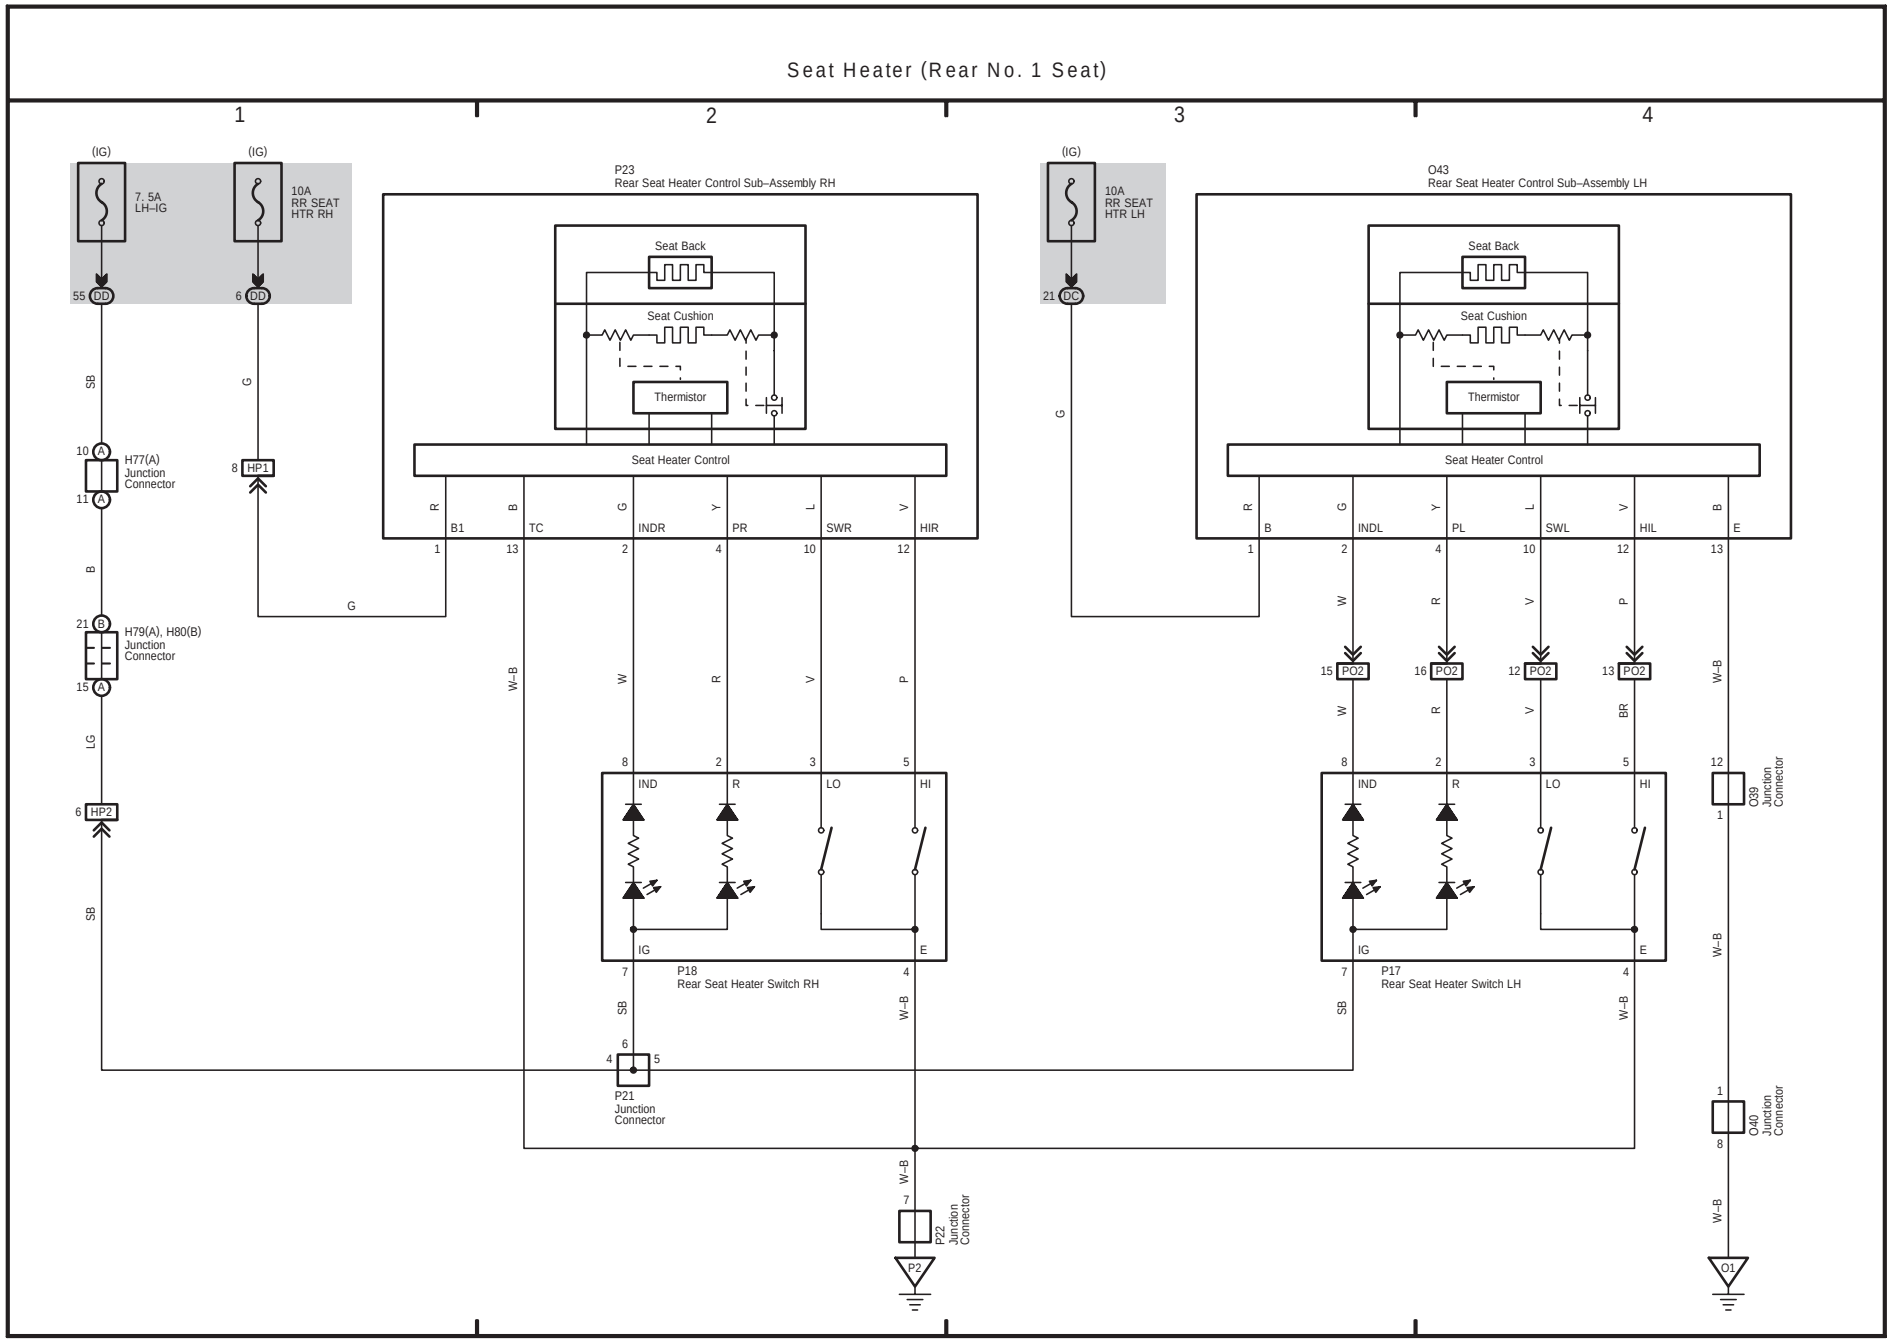

Seat Heater (Rear No. 1 Seat)
1
2
3
4
(IG)
7. 5A
LH–IG
10A
RR SEAT
HTR RH
55 DD
6 DD
SB
G
10 A
11 A
H77(A)
Junction
Connector
8 HP1
B
21 B
15 A
H79(A), H80(B)
Junction
Connector
LG
6 HP2
SB
G
P23
Rear Seat Heater Control Sub–Assembly RH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
R
B1
B
TC
G
INDR
Y
PR
L
SWR
V
HIR
1
13
2
4
10
12
W–B
W
R
V
P
8
2
3
5
IND
R
LO
HI
IG
E
7
4
P18
Rear Seat Heater Switch RH
SB
W–B
6
4
5
P21
Junction
Connector
W–B
7
P22
Junction
Connector
P2
(IG)
10A
RR SEAT
HTR LH
21 DC
G
O43
Rear Seat Heater Control Sub–Assembly LH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
R
B
G
INDL
Y
PL
L
SWL
V
HIL
B
E
1
2
4
10
12
13
W
R
V
P
15 PO2
16 PO2
12 PO2
13 PO2
W
R
V
BR
8
2
3
5
IND
R
LO
HI
IG
E
7
4
P17
Rear Seat Heater Switch LH
SB
W–B
W–B
12
O39
Junction
Connector
1
W–B
1
O40
Junction
Connector
8
W–B
O1