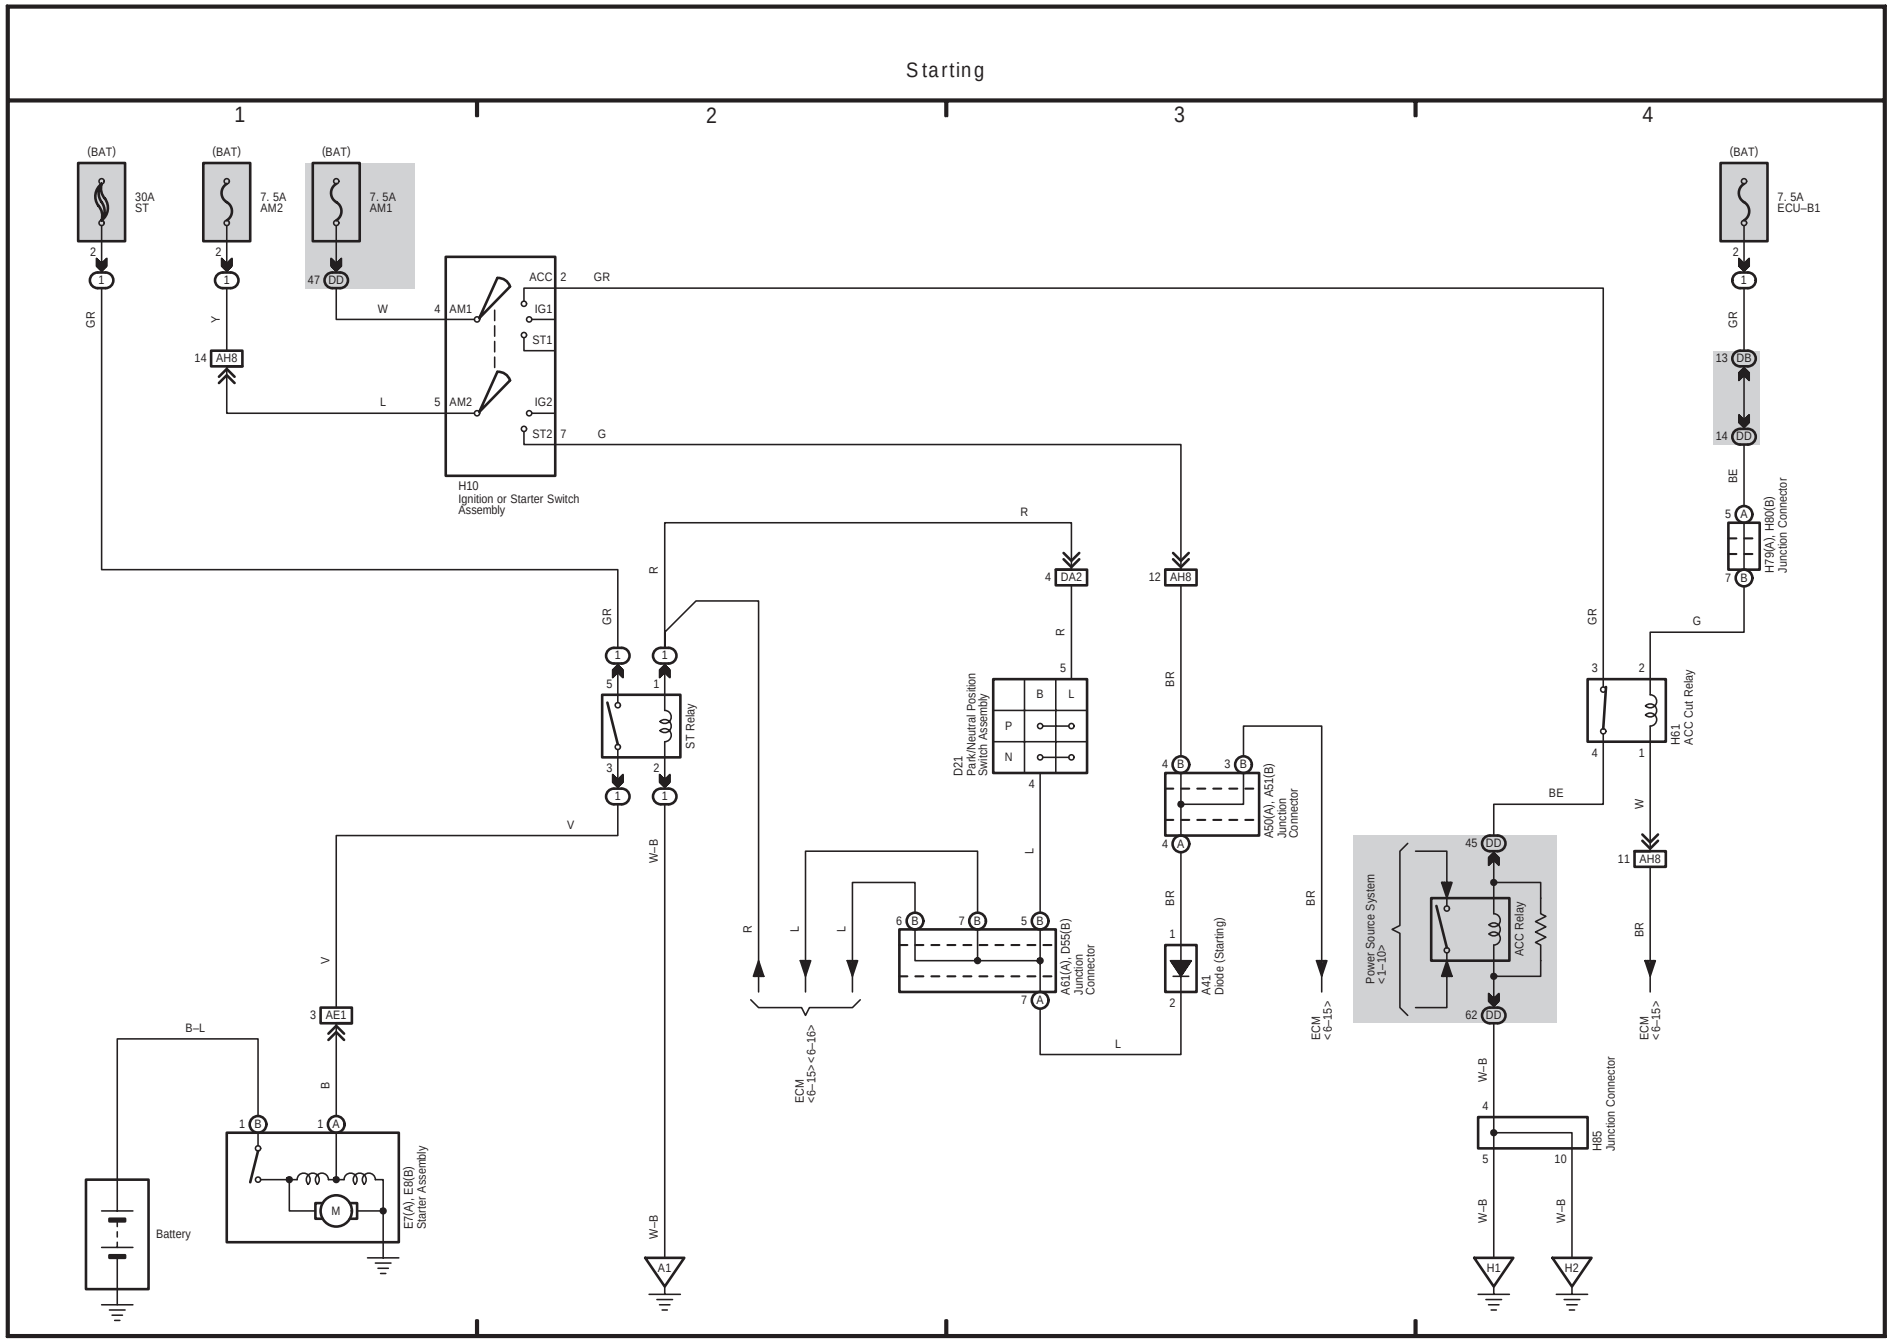

Starting
1
2
3
4
(BAT)
30A ST
7. 5A AM2
7. 5A AM1
7. 5A ECU–B1
H10 Ignition or Starter Switch Assembly
ST Relay
D21 Park/Neutral Position Switch Assembly
A50(A), A51(B) Junction Connector
A61(A), D55(B) Junction Connector
A41 Diode (Starting)
ACC Cut Relay
H61
H79(A), H80(B) Junction Connector
Power Source System <1–10>
ACC Relay
H85 Junction Connector
E7(A), E8(B) Starter Assembly
Battery
ECM <6–15>
ECM <6–15><6–16>
A1
H1
H2