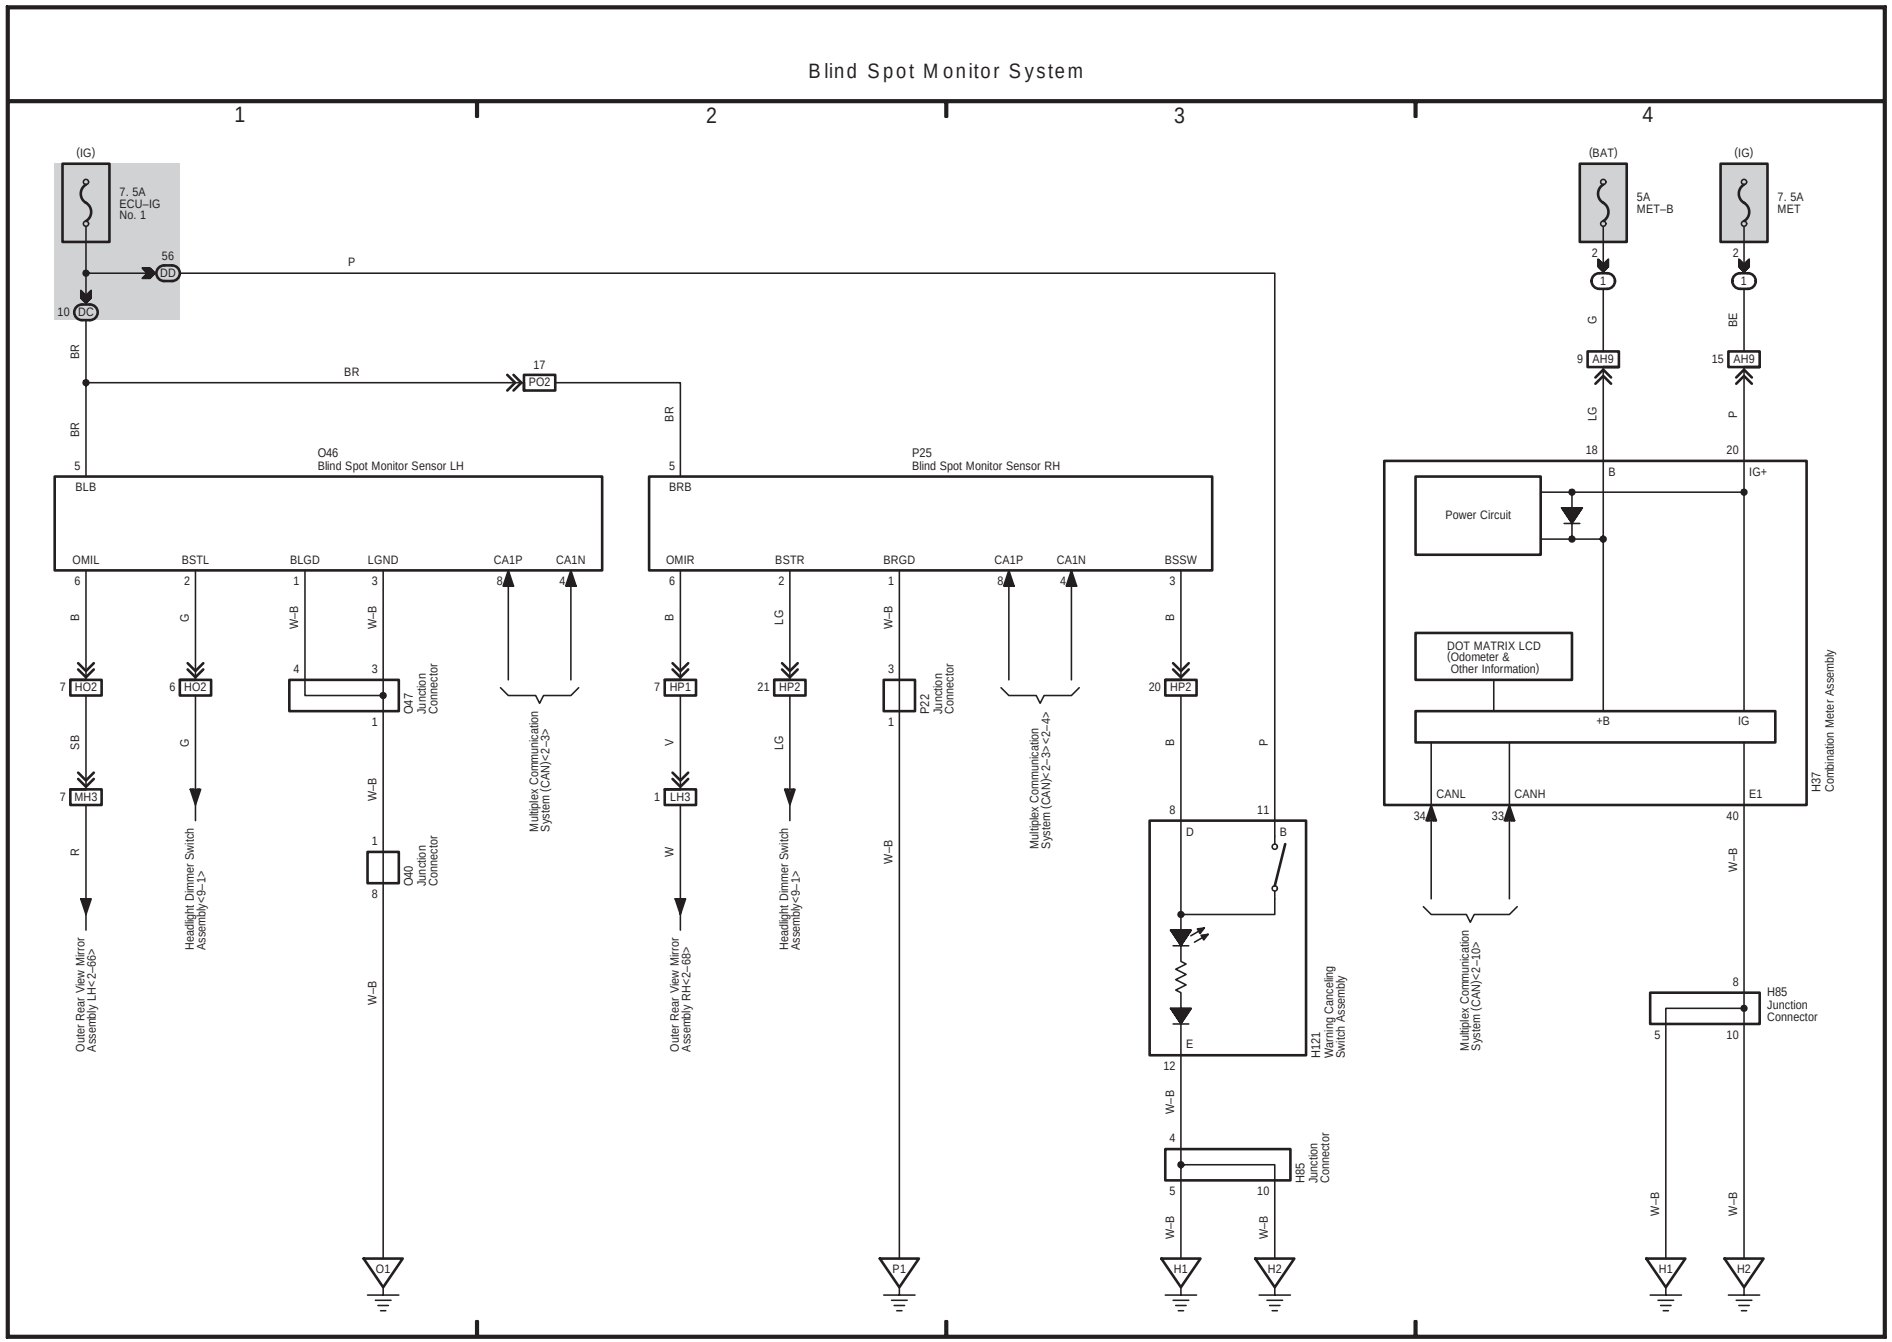

Blind Spot Monitor System
1
2
3
4
(IG)
7. 5A
ECU–IG
No. 1
56
DD
10
DC
P
BR
BR
17
PO2
BR
BR
5
O46
Blind Spot Monitor Sensor LH
BLB
OMIL
BSTL
BLGD
LGND
CA1P
CA1N
6
2
1
3
8
4
B
G
W–B
W–B
7
HO2
6
HO2
4
3
O47
Junction
Connector
1
SB
G
W–B
7
MH3
1
O40
Junction
Connector
8
R
W–B
Outer Rear View Mirror
Assembly LH<2–66>
Headlight Dimmer Switch
Assembly<9–1>
Multiplex Communication
System (CAN)<2–3>
O1
5
P25
Blind Spot Monitor Sensor RH
BRB
OMIR
BSTR
BRGD
CA1P
CA1N
BSSW
6
2
1
8
4
3
B
LG
W–B
7
HP1
21
HP2
3
P22
Junction
Connector
1
V
LG
W
1
LH3
Outer Rear View Mirror
Assembly RH<2–68>
Headlight Dimmer Switch
Assembly<9–1>
P1
Multiplex Communication
System (CAN)<2–3><2–4>
20
HP2
B
P
8
11
D
B
E
H121
Warning Canceling
Switch Assembly
12
W–B
4
H85
Junction
Connector
5
10
W–B
W–B
H1
H2
(BAT)
5A
MET–B
2
1
G
9
AH9
LG
18
B
(IG)
7. 5A
MET
2
1
BE
15
AH9
P
20
IG+
Power Circuit
DOT MATRIX LCD
(Odometer &
Other Information)
+B
IG
CANL
CANH
E1
34
33
40
H37
Combination Meter Assembly
Multiplex Communication
System (CAN)<2–10>
W–B
8
H85
Junction
Connector
5
10
W–B
W–B
H1
H2