

(Cont. next page)

Engine Control

* 3 : 3UR–FE
* 6 : 3UR–FBE

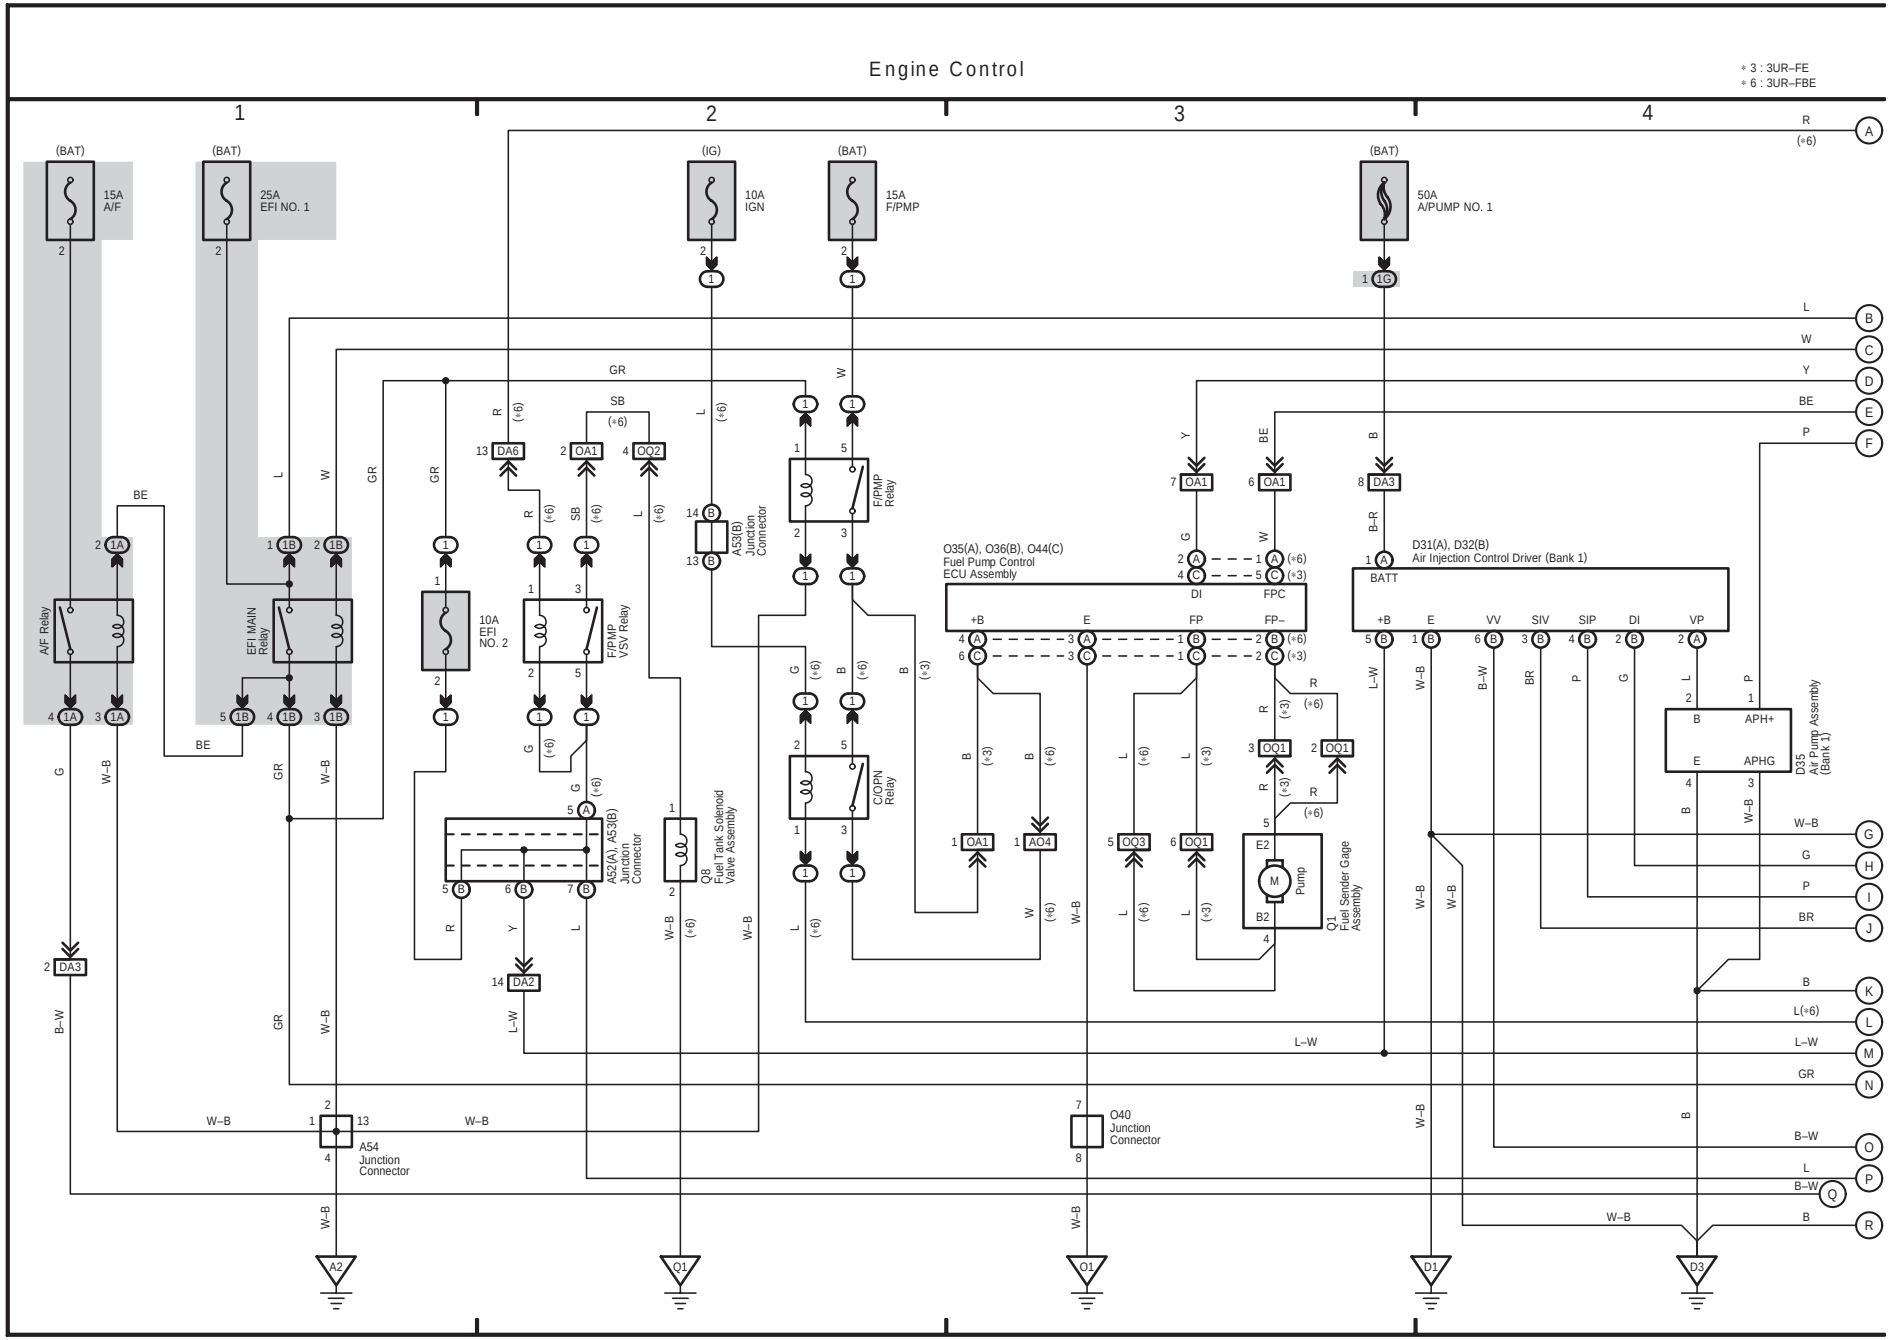

(Cont. next page)

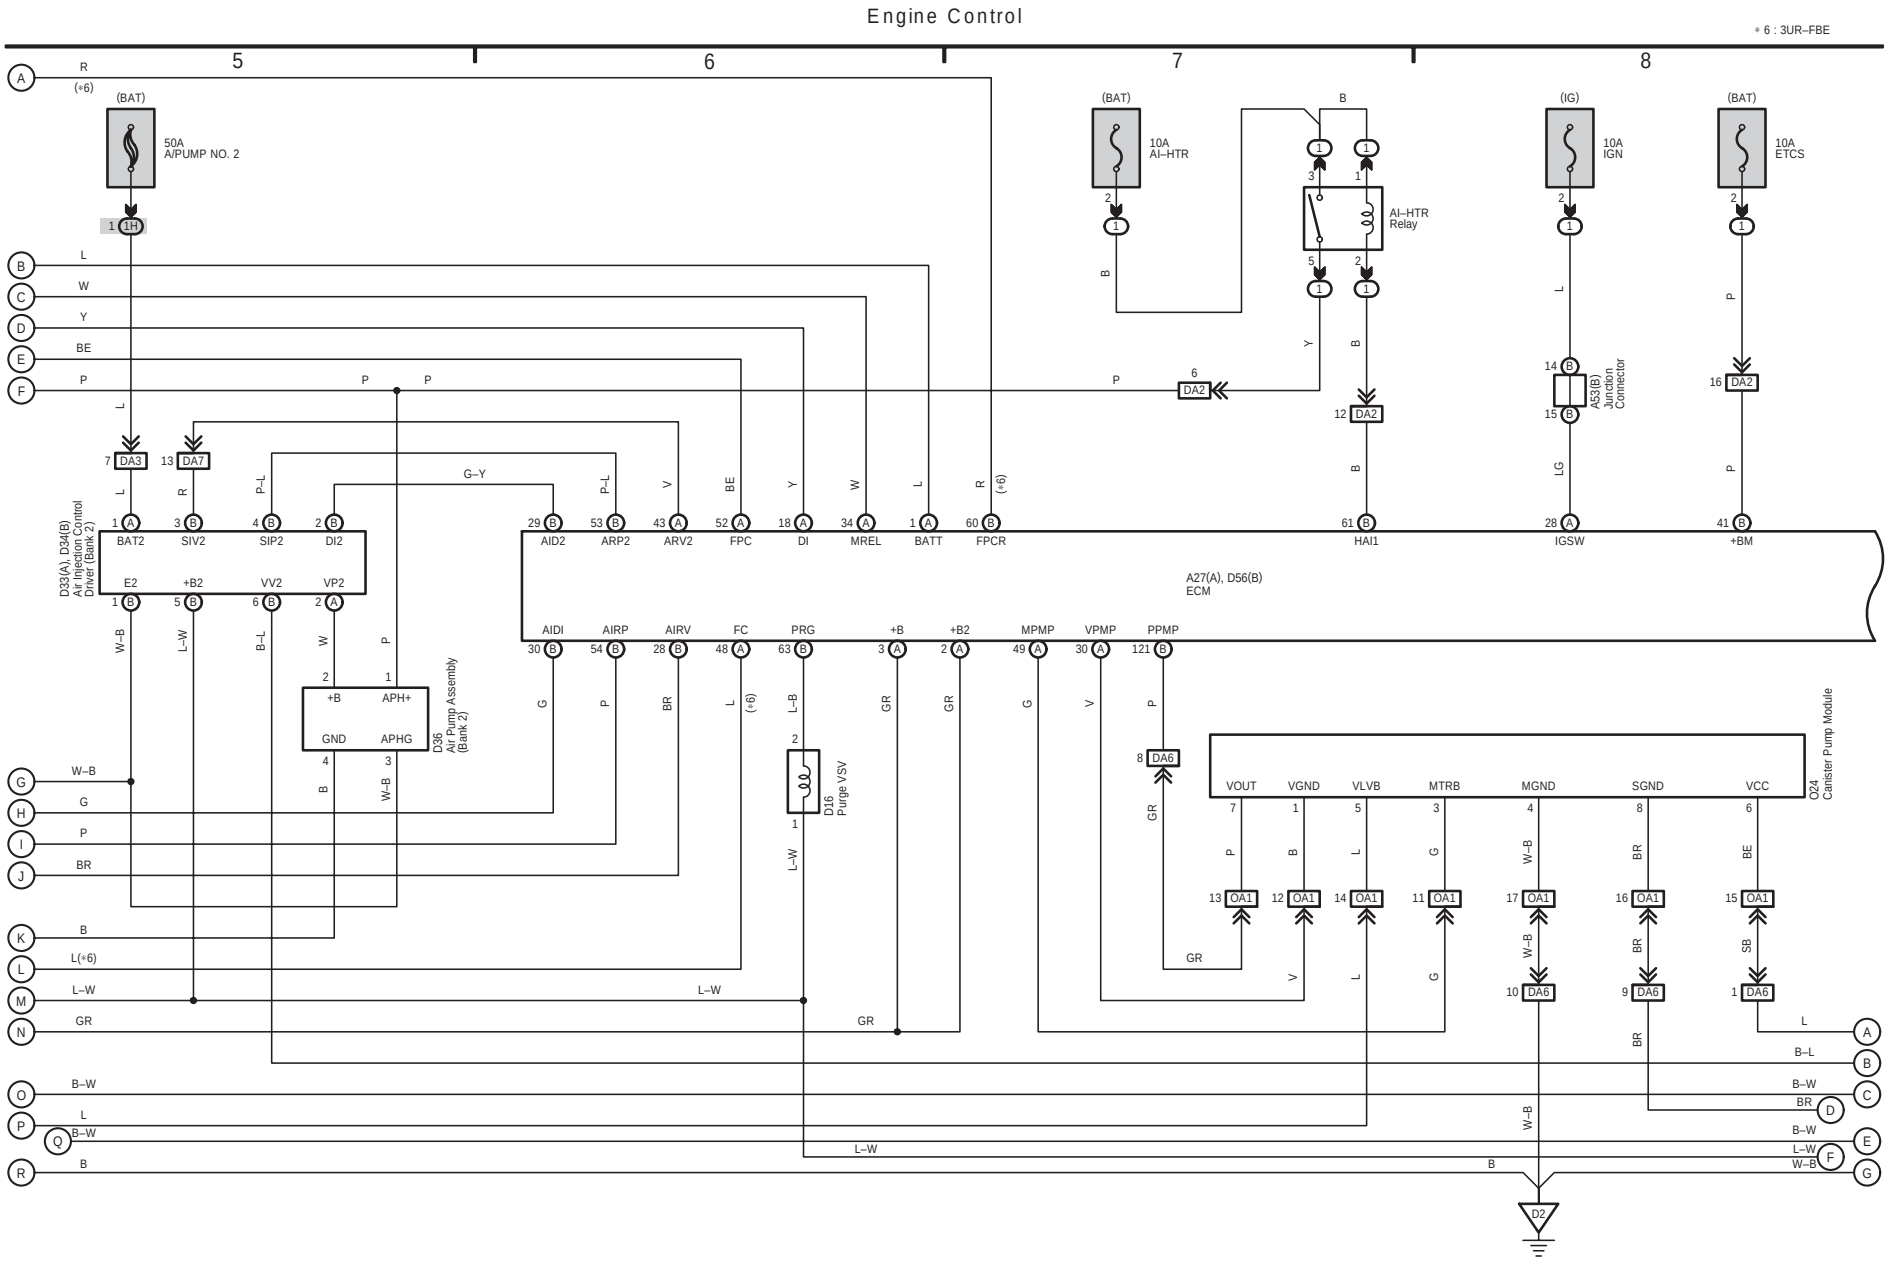


(Cont. next page)


Engine Control

* 1 : Shielded

9 10 11 12

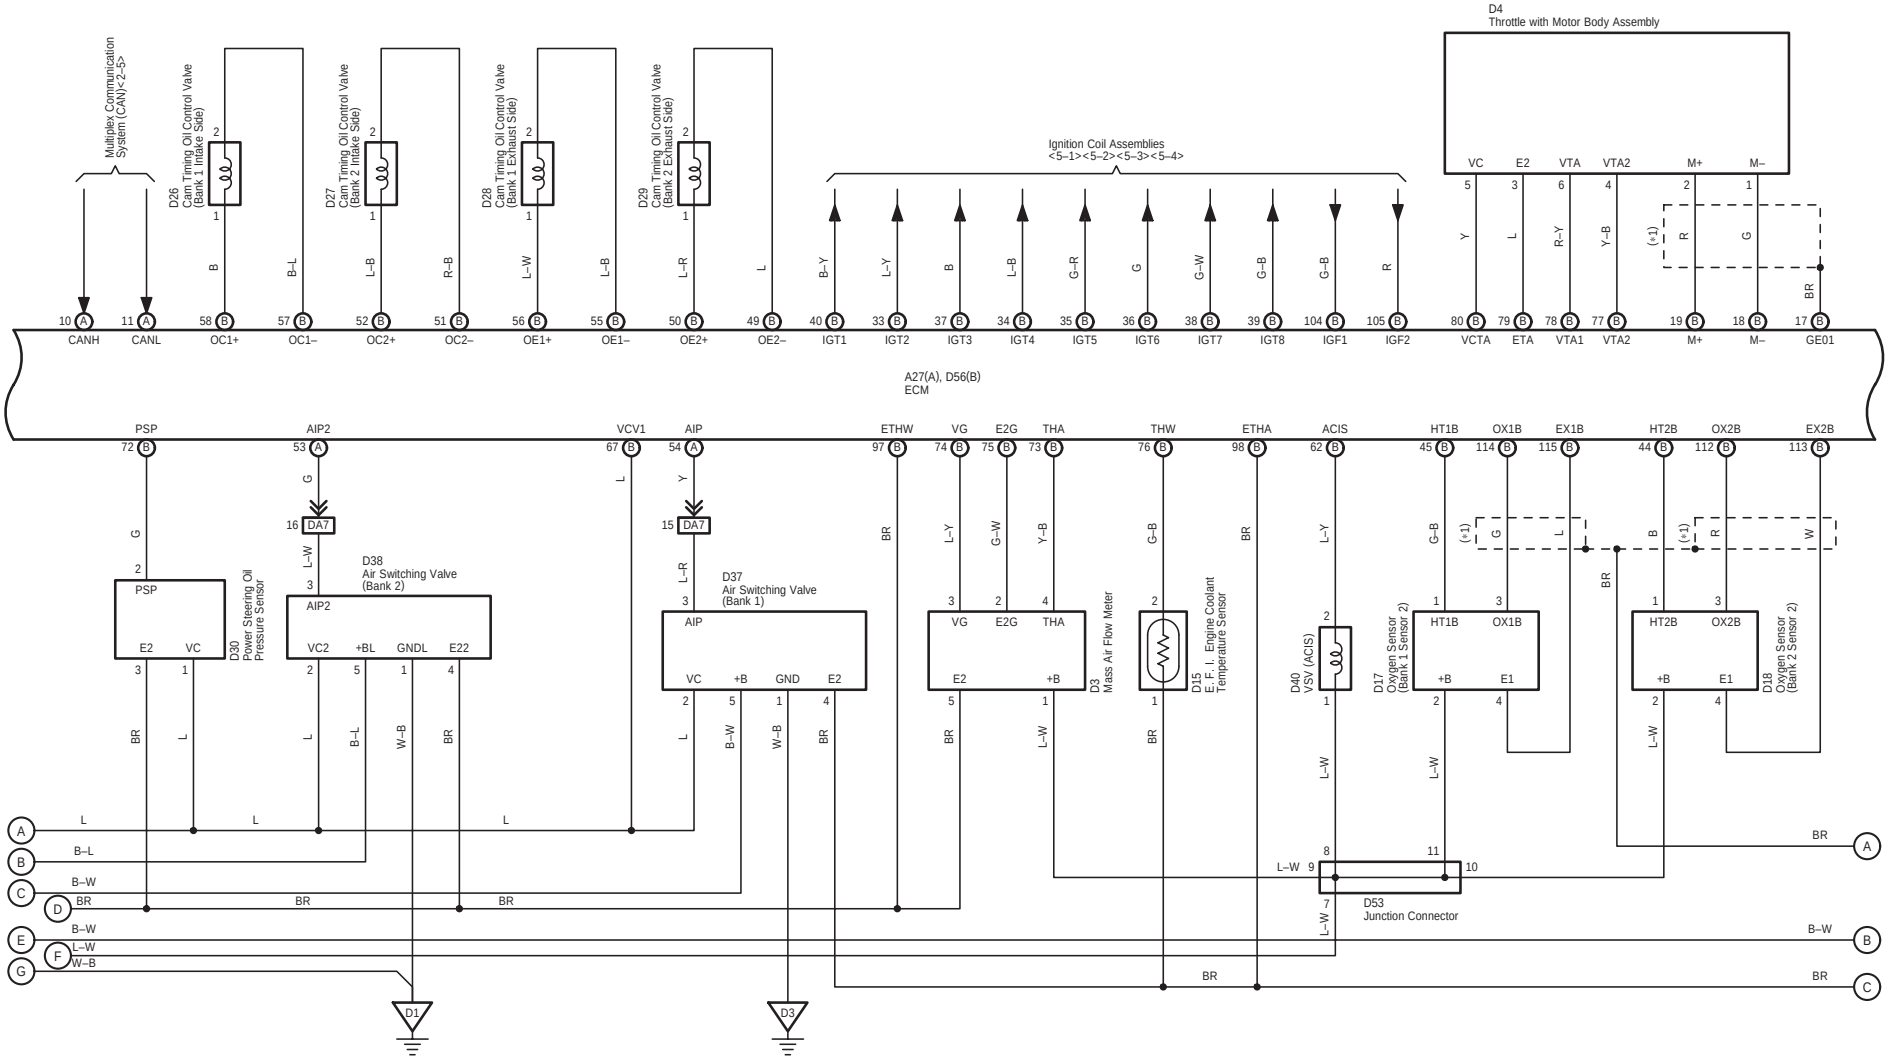


(Cont. next page)

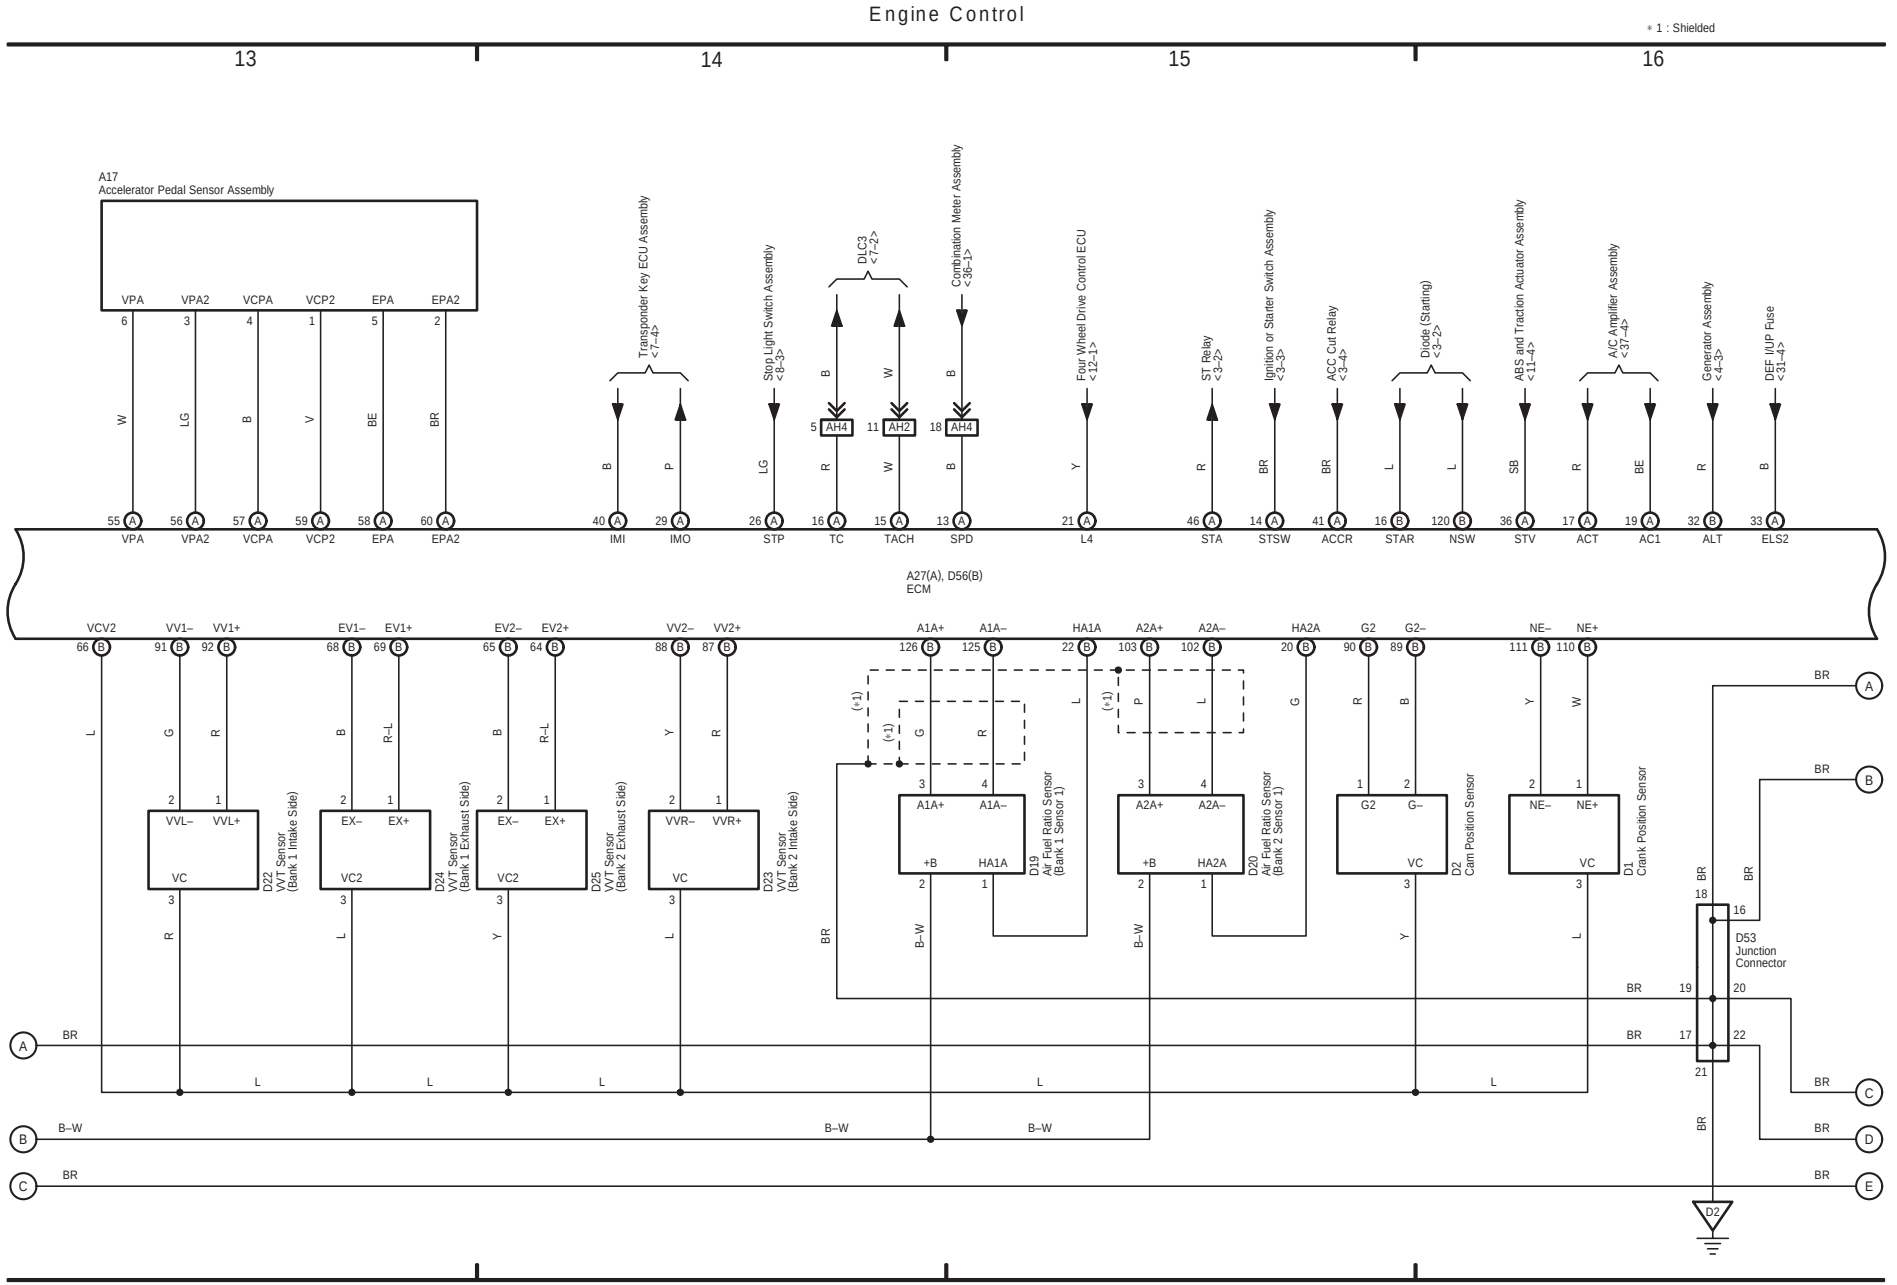

(Cont. next page)

Cruise Control or Dynamic Radar Cruise Control


* 1 : Shielded

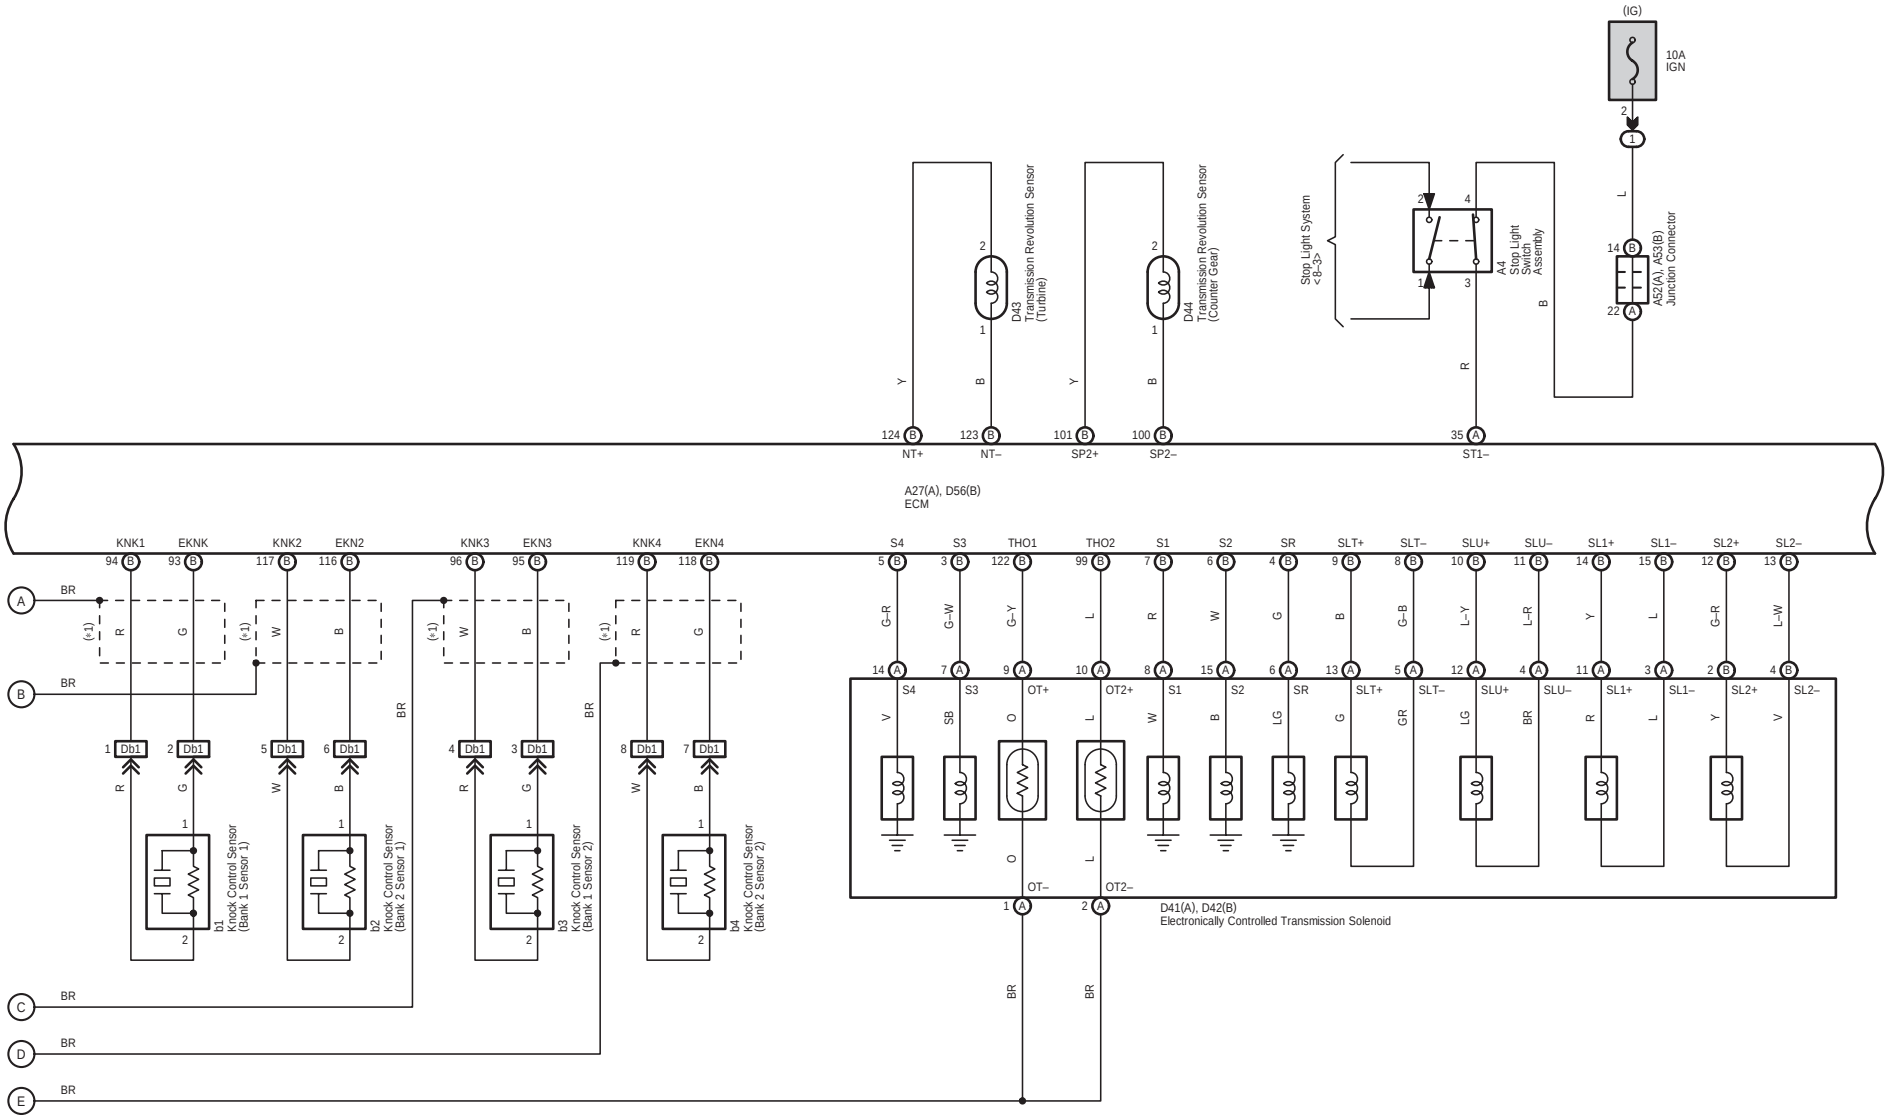

(Cont. next page)

Cruise Control or Dynamic Radar Cruise Control


* 2 : w/ Dynamic Radar Cruise Control

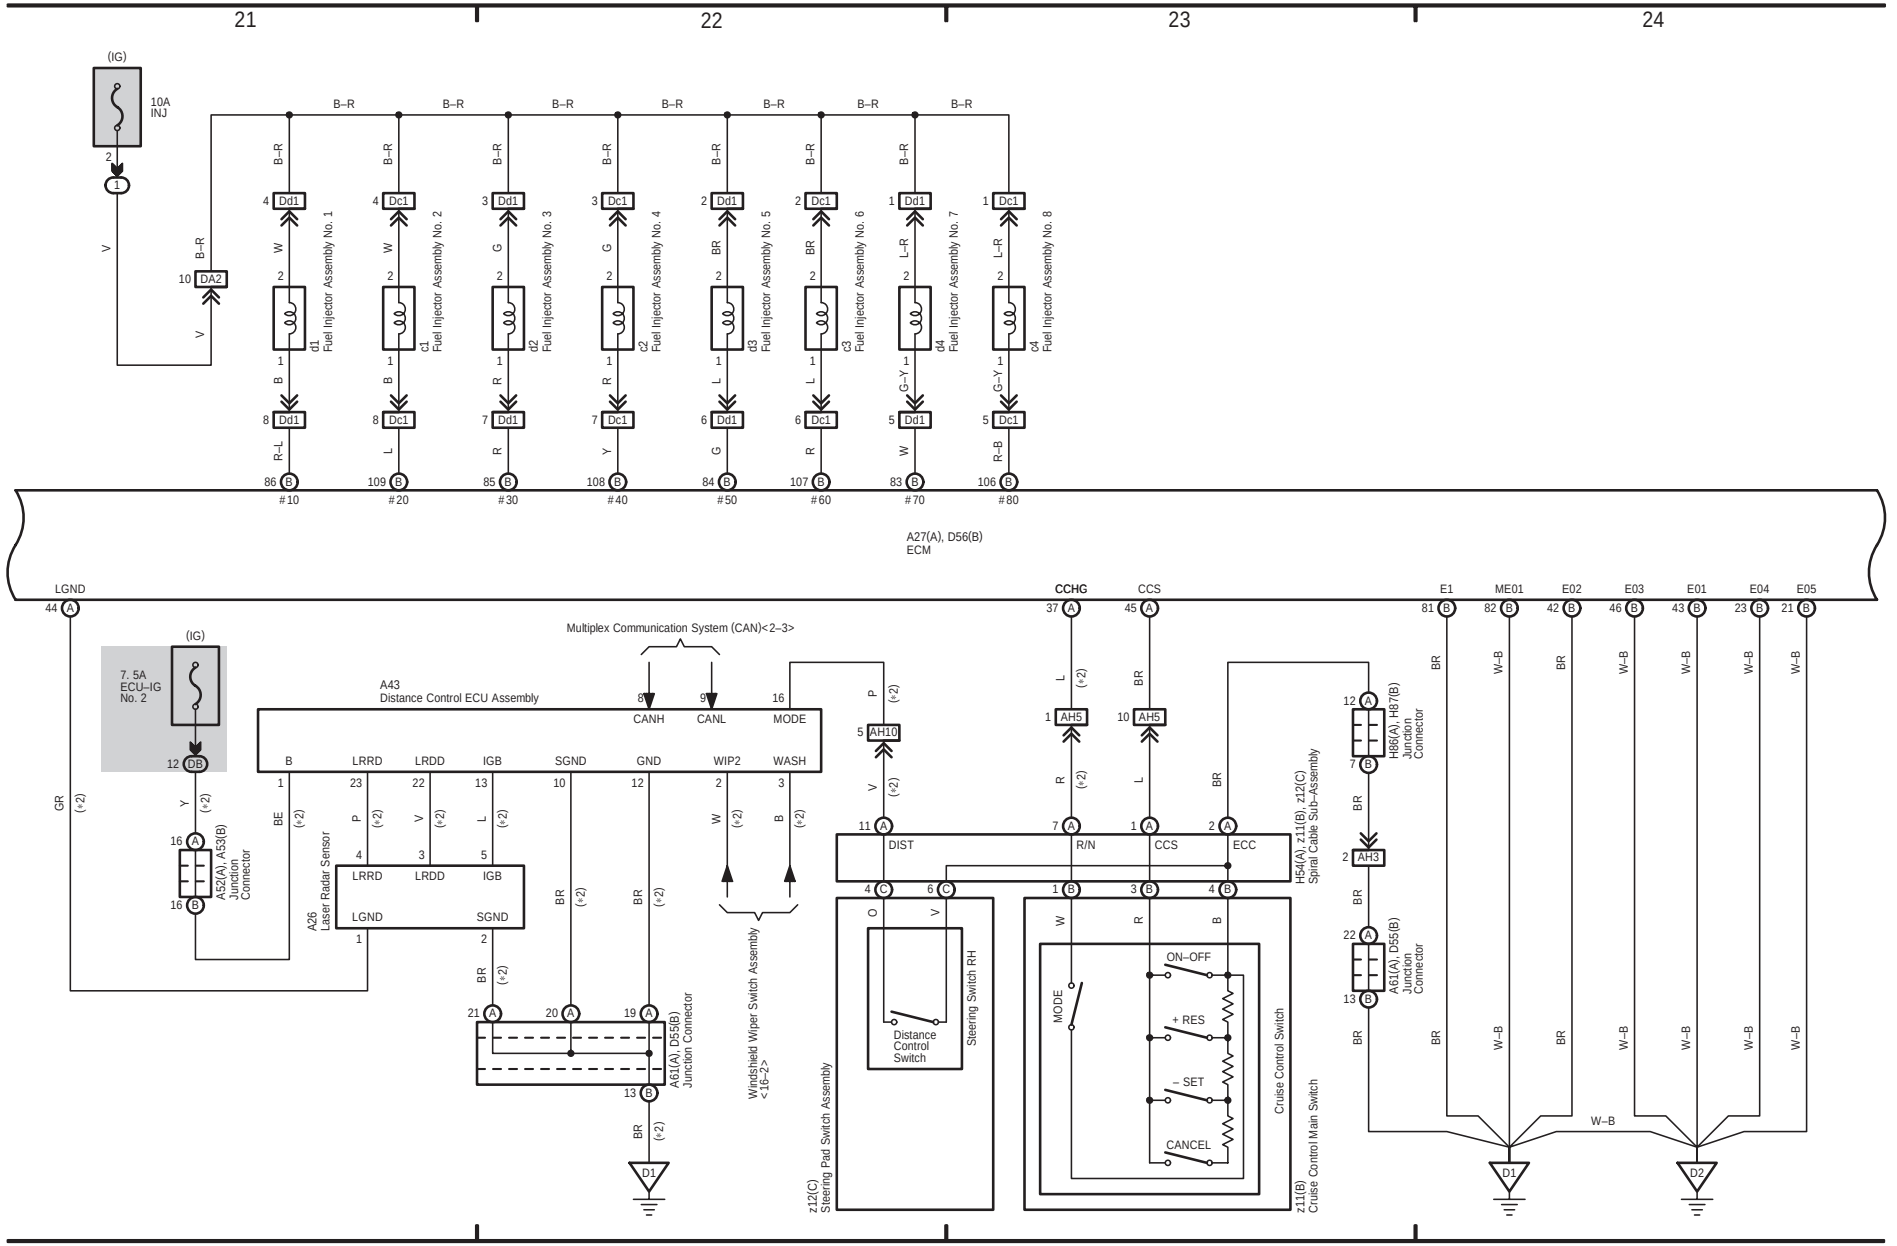


(Cont. next page)

Electronically Controlled Transmission and A/T Indicator

* 7 : 2WD

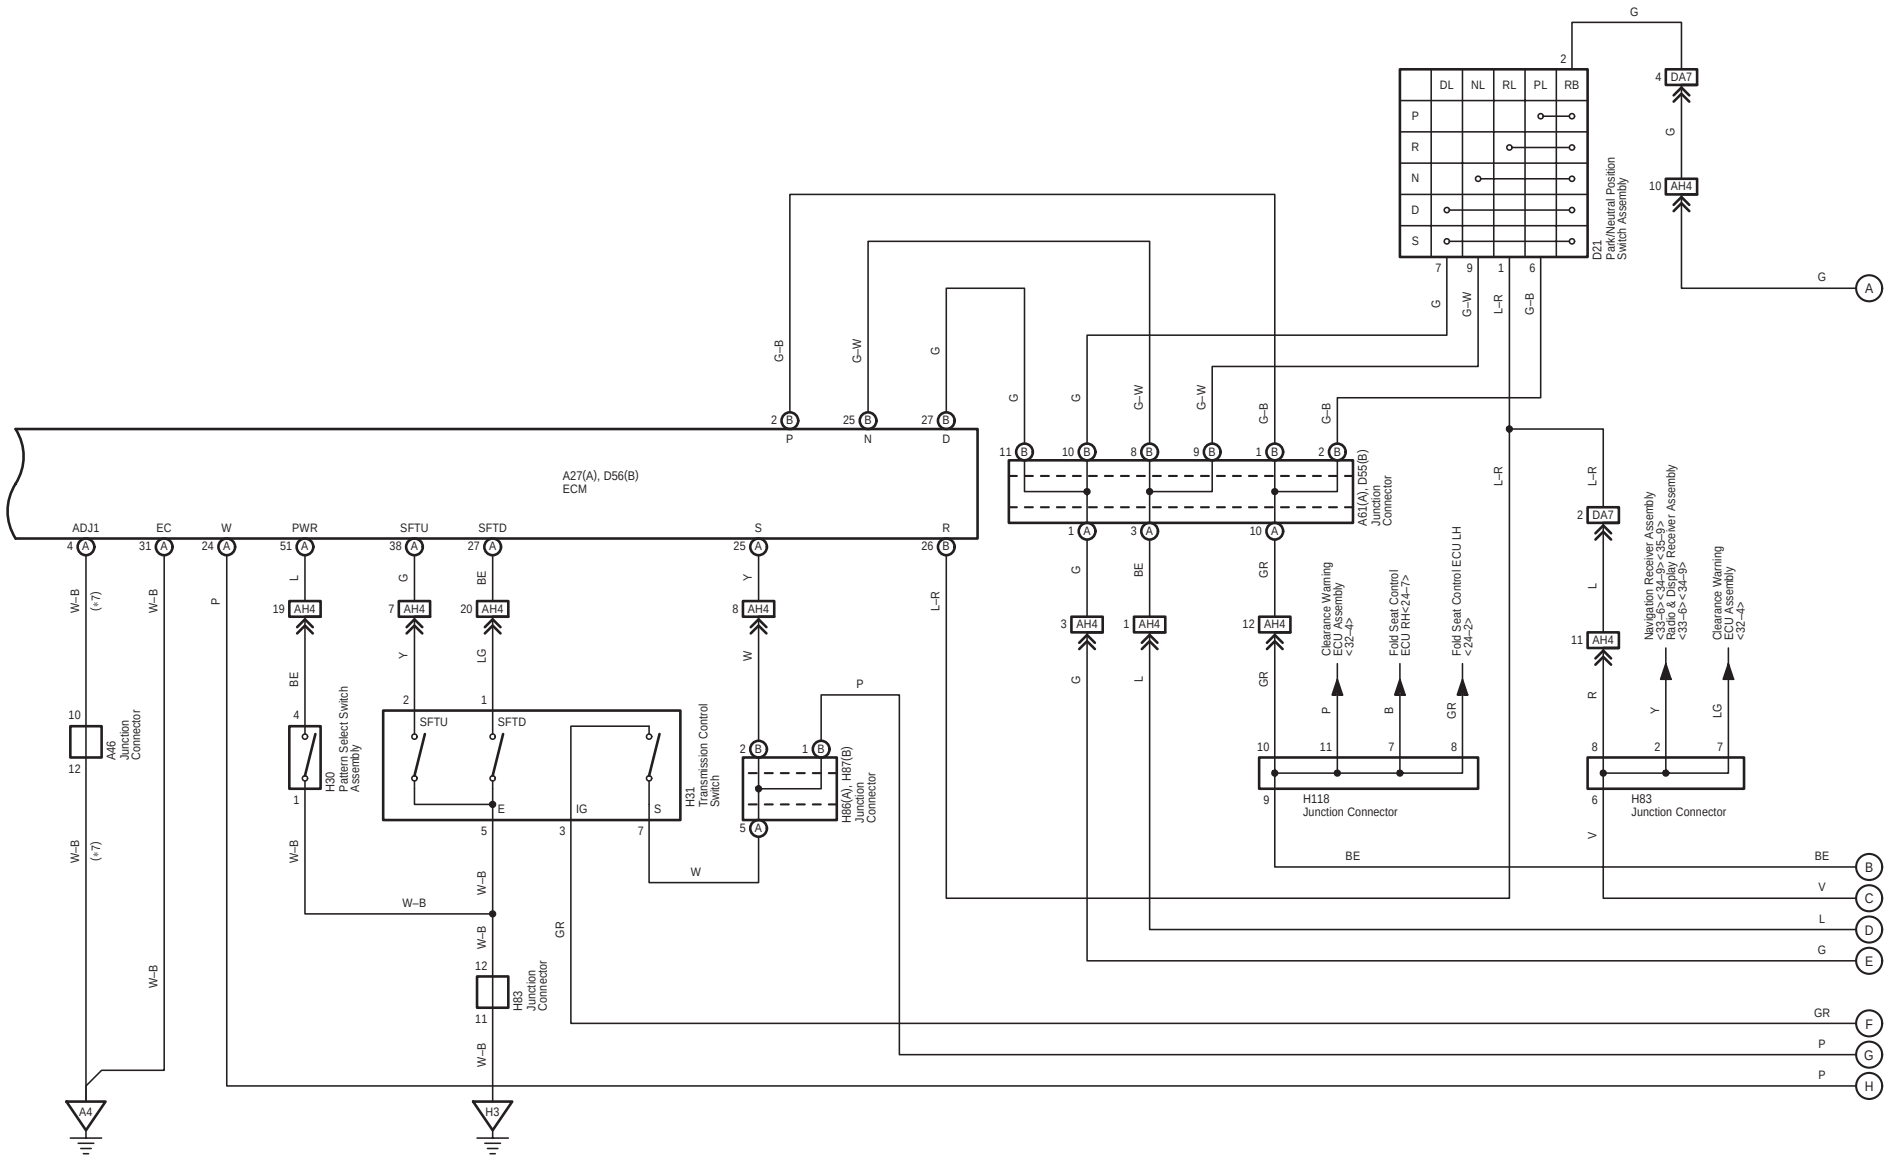

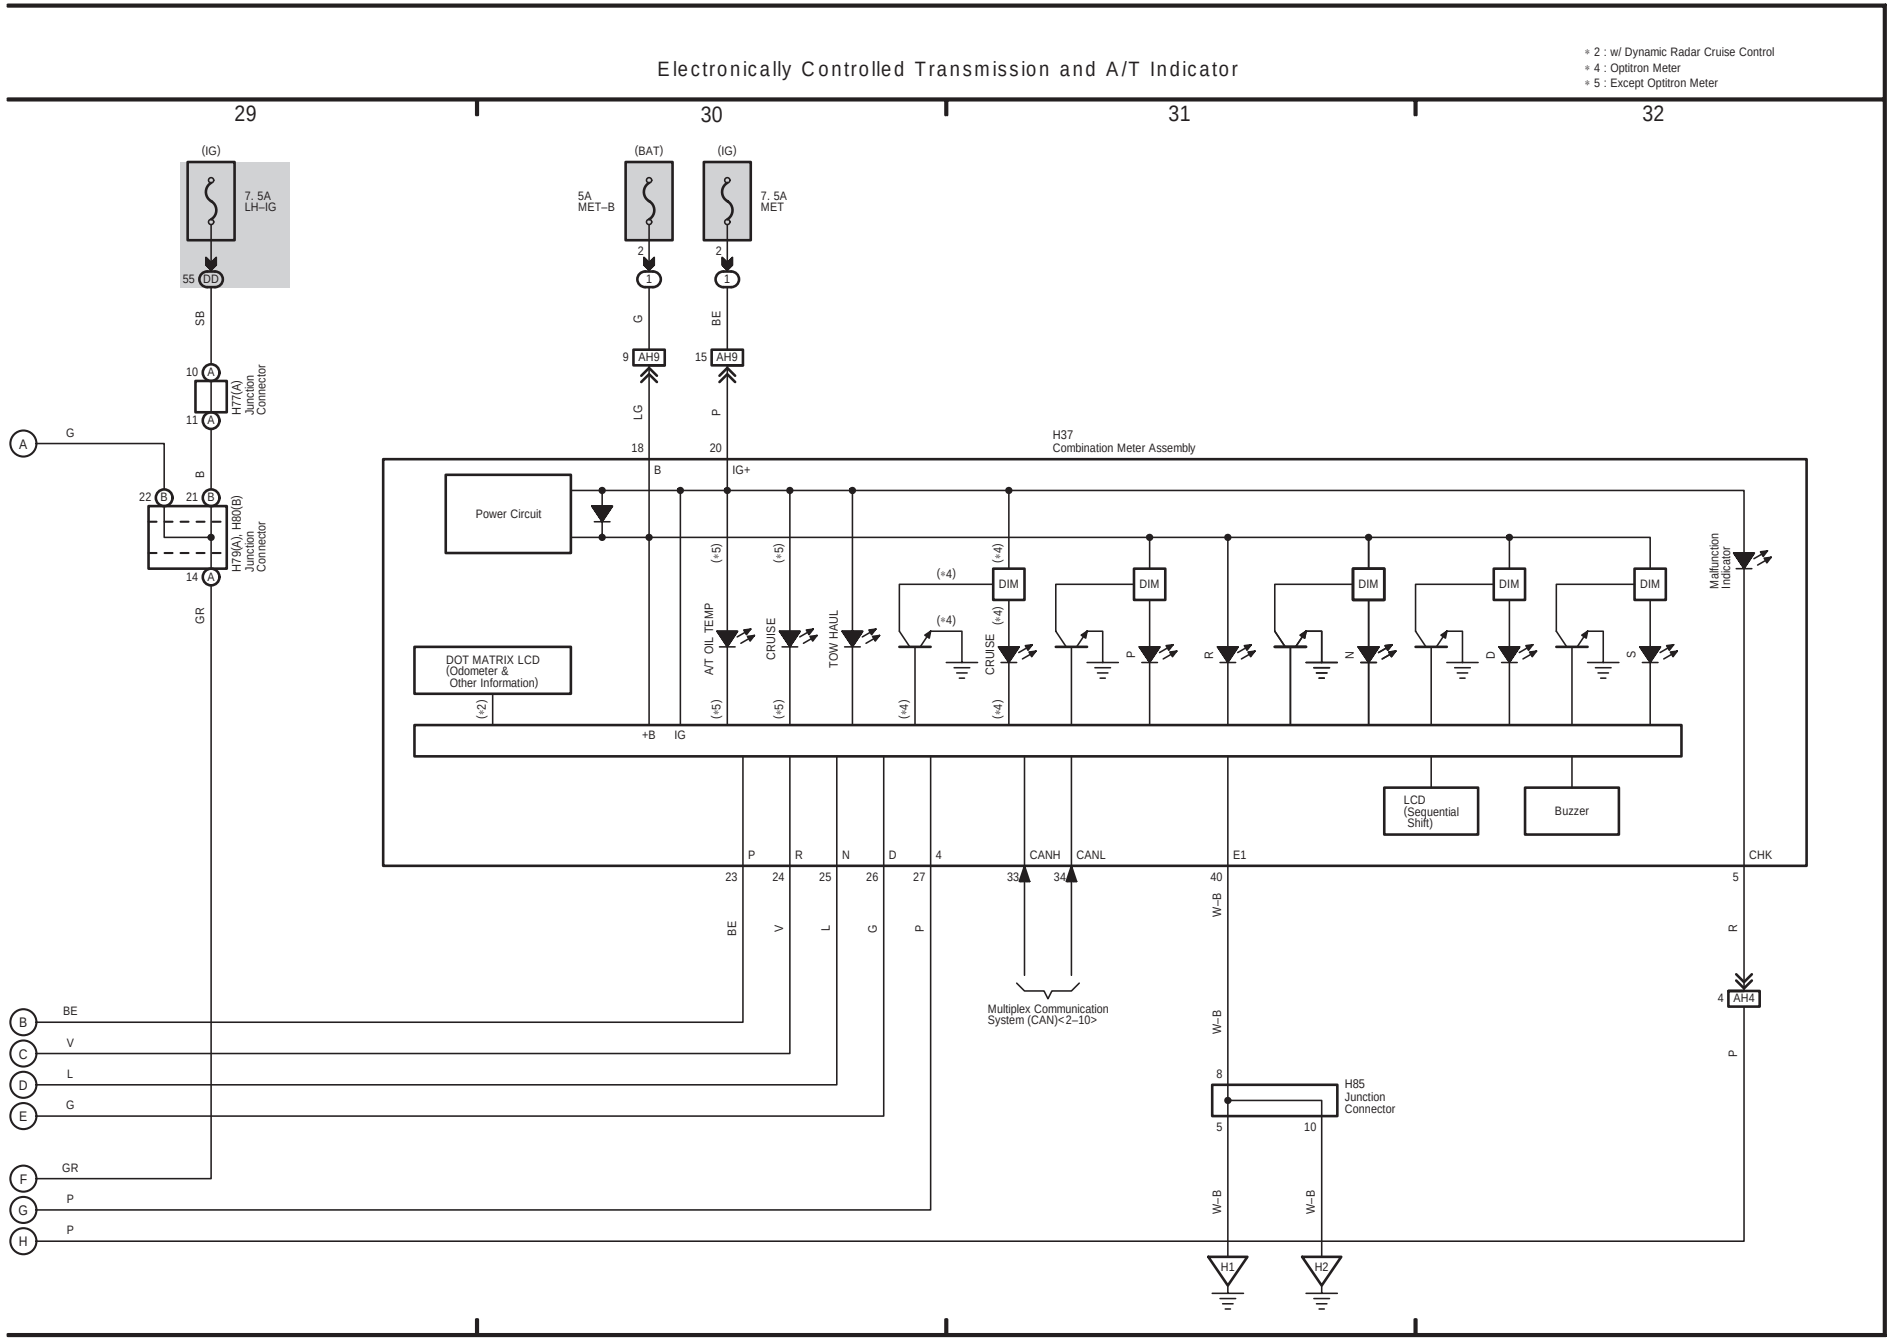
Electronically Controlled Transmission and A/T Indicator
* 2 : w/ Dynamic Radar Cruise Control
* 4 : Optitron Meter
* 5 : Except Optitron Meter
29
30
31
32
(IG)
7. 5A LH–IG
55 DD
SB
10 A
H77(A) Junction Connector
11 A
G
A
B
22 B
21 B
H79(A), H80(B) Junction Connector
14 A
GR
(BAT)
5A MET–B
2
1
G
9 AH9
LG
18
B
(IG)
7. 5A MET
2
1
BE
15 AH9
P
20
IG+
H37 Combination Meter Assembly
Power Circuit
DOT MATRIX LCD (Odometer & Other Information)
(*2)
+B
IG
A/T OIL TEMP
CRUISE
TOW HAUL
(*5)
(*4)
DIM
P
R
N
D
S
Malfunction Indicator
LCD (Sequential Shift)
Buzzer
P
R
N
D
4
CANH
CANL
E1
CHK
23
24
25
26
27
33
34
40
5
BE
V
L
G
P
W–B
R
Multiplex Communication System (CAN)<2–10>
4 AH4
8
H85 Junction Connector
5
10
H1
H2
B
C
D
E
F
G
H