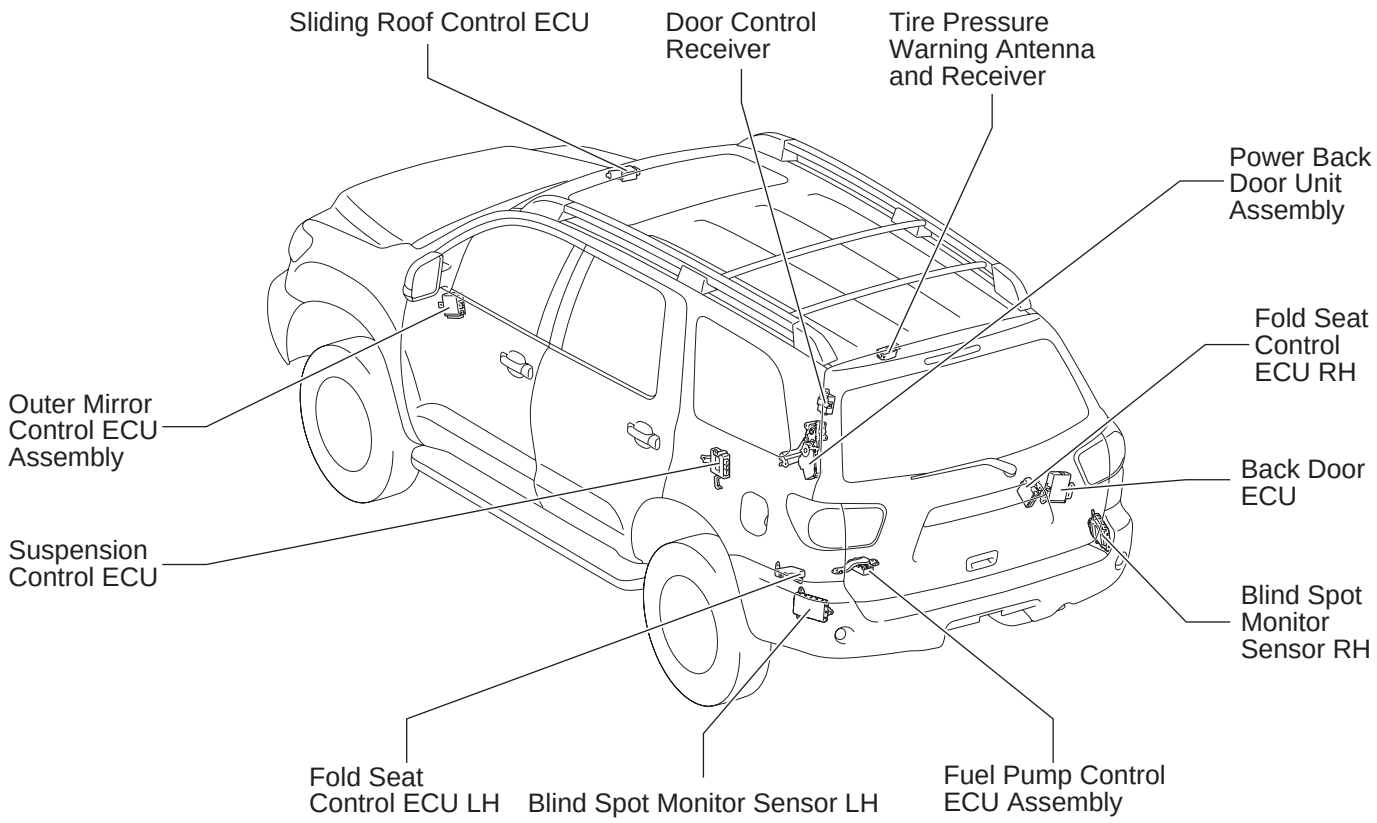
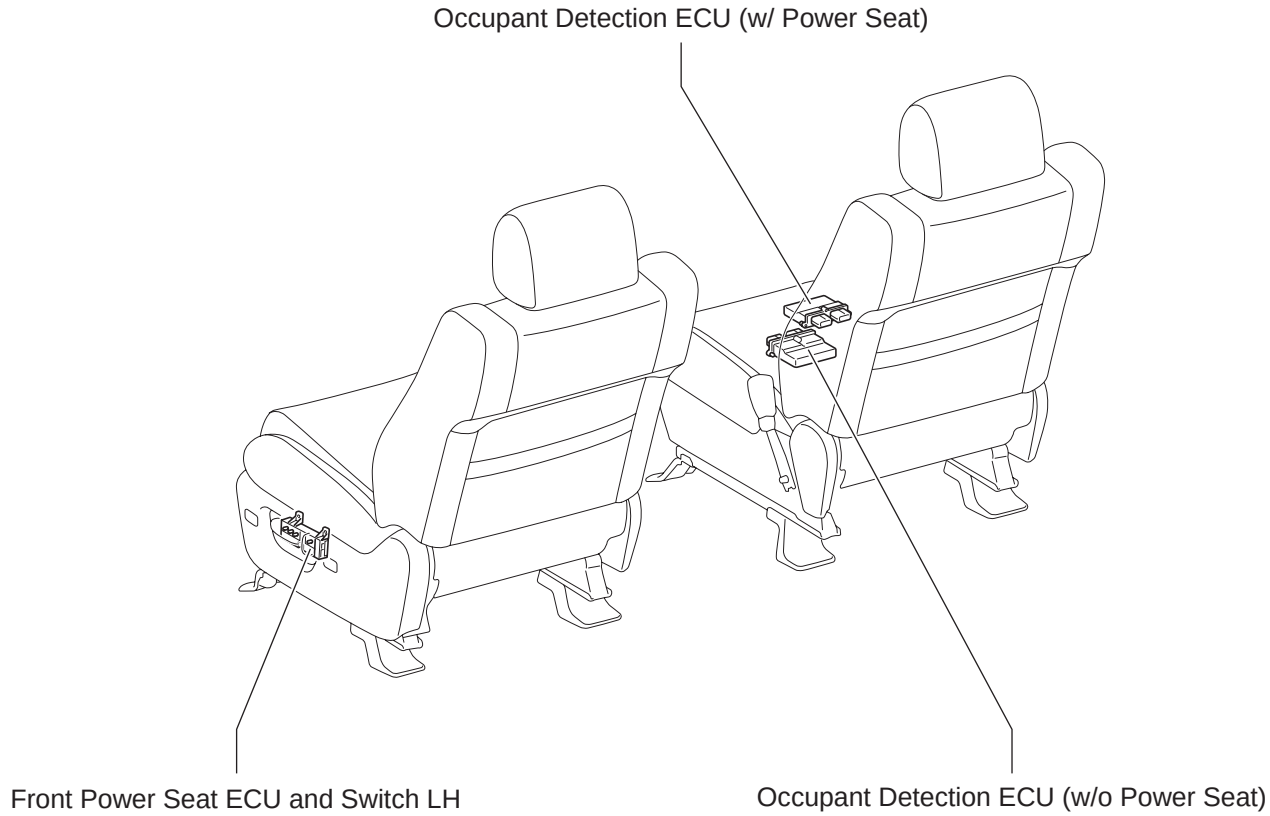
[Body]


Sliding Roof Control ECU
Door Control Receiver
Tire Pressure Warning Antenna and Receiver
Power Back Door Unit Assembly
Fold Seat Control ECU RH
Back Door ECU
Blind Spot Monitor Sensor RH
Outer Mirror Control ECU Assembly
Suspension Control ECU
Fold Seat Control ECU LH
Blind Spot Monitor Sensor LH
Fuel Pump Control ECU Assembly

[Seat]


Occupant Detection ECU (w/ Power Seat)
Front Power Seat ECU and Switch LH
Occupant Detection ECU (w/o Power Seat)