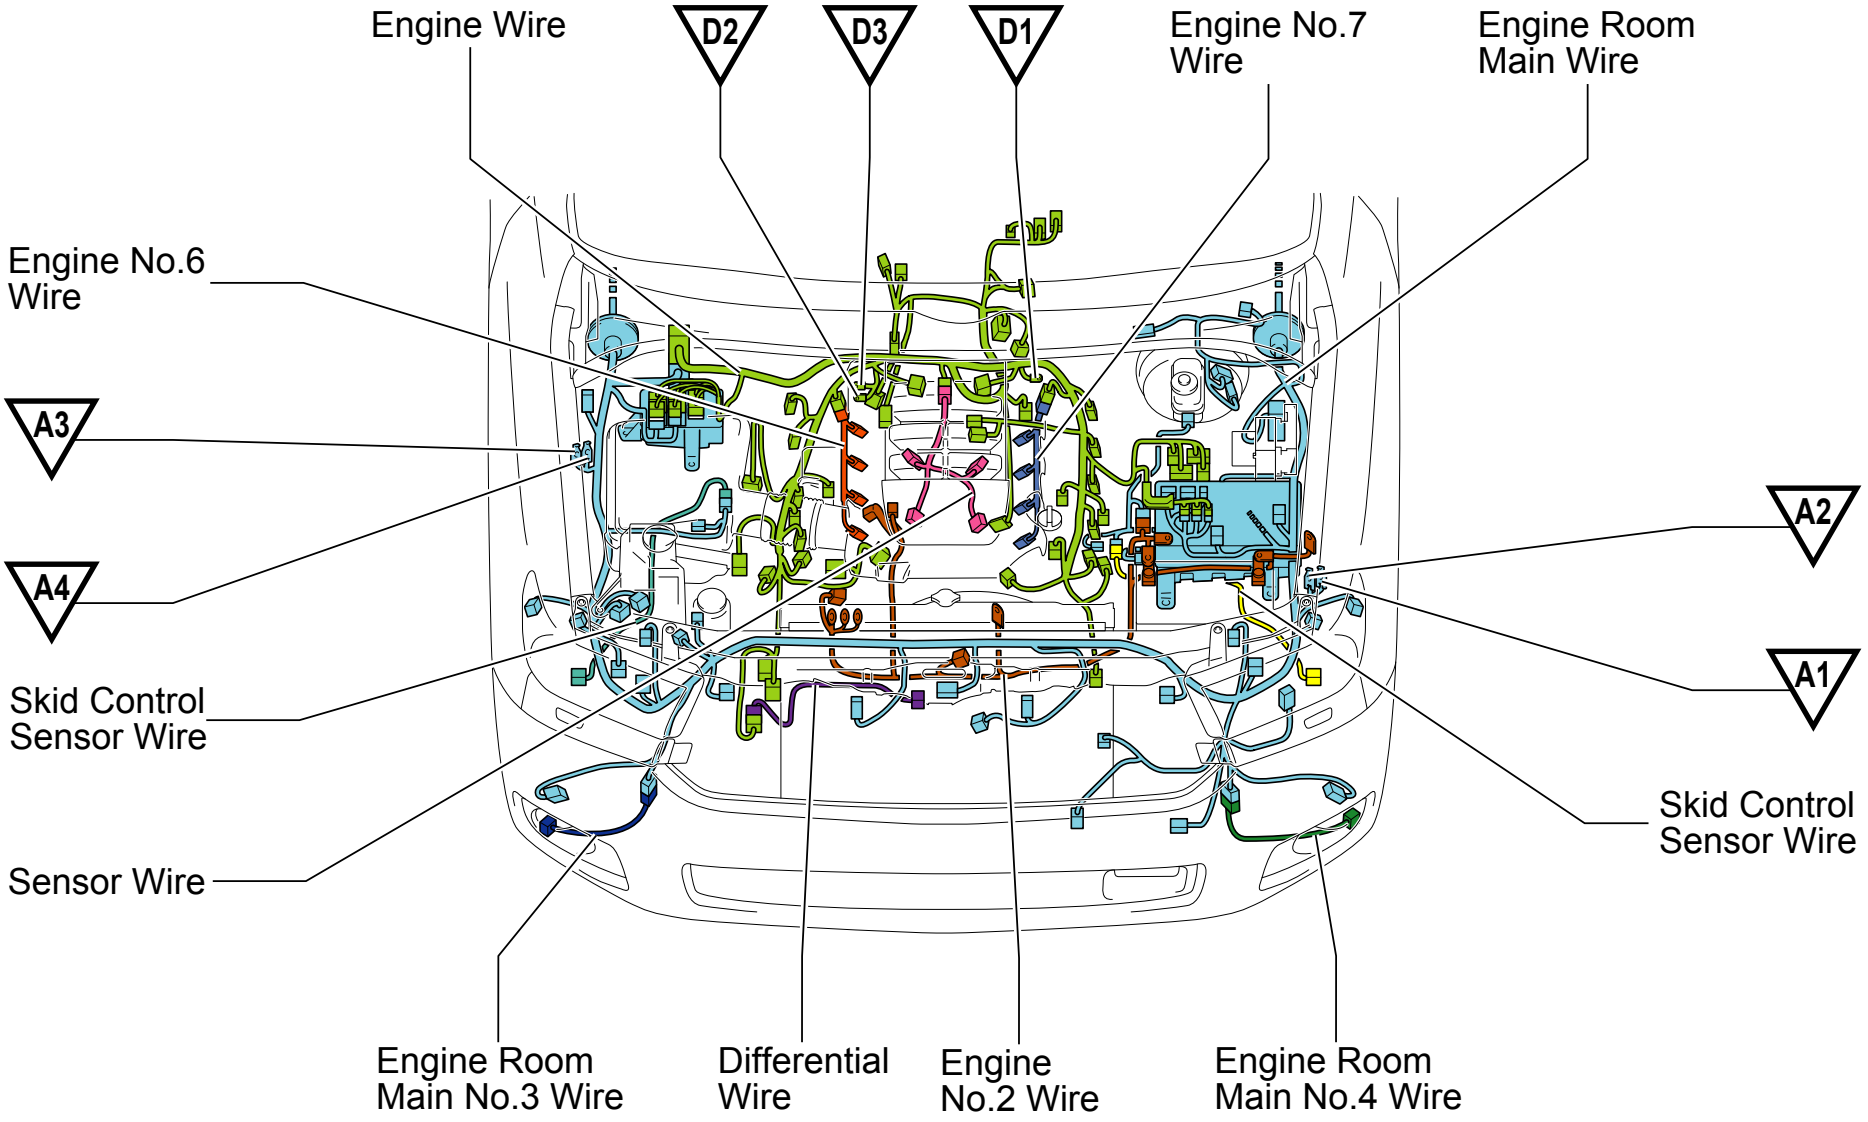

Engine Wire
D2
D3
D1
Engine No.7 Wire
Engine Room Main Wire
Engine No.6 Wire
A3
A4
Skid Control Sensor Wire
Sensor Wire
A2
A1
Skid Control Sensor Wire
Engine Room Main No.3 Wire
Differential Wire
Engine No.2 Wire
Engine Room Main No.4 Wire