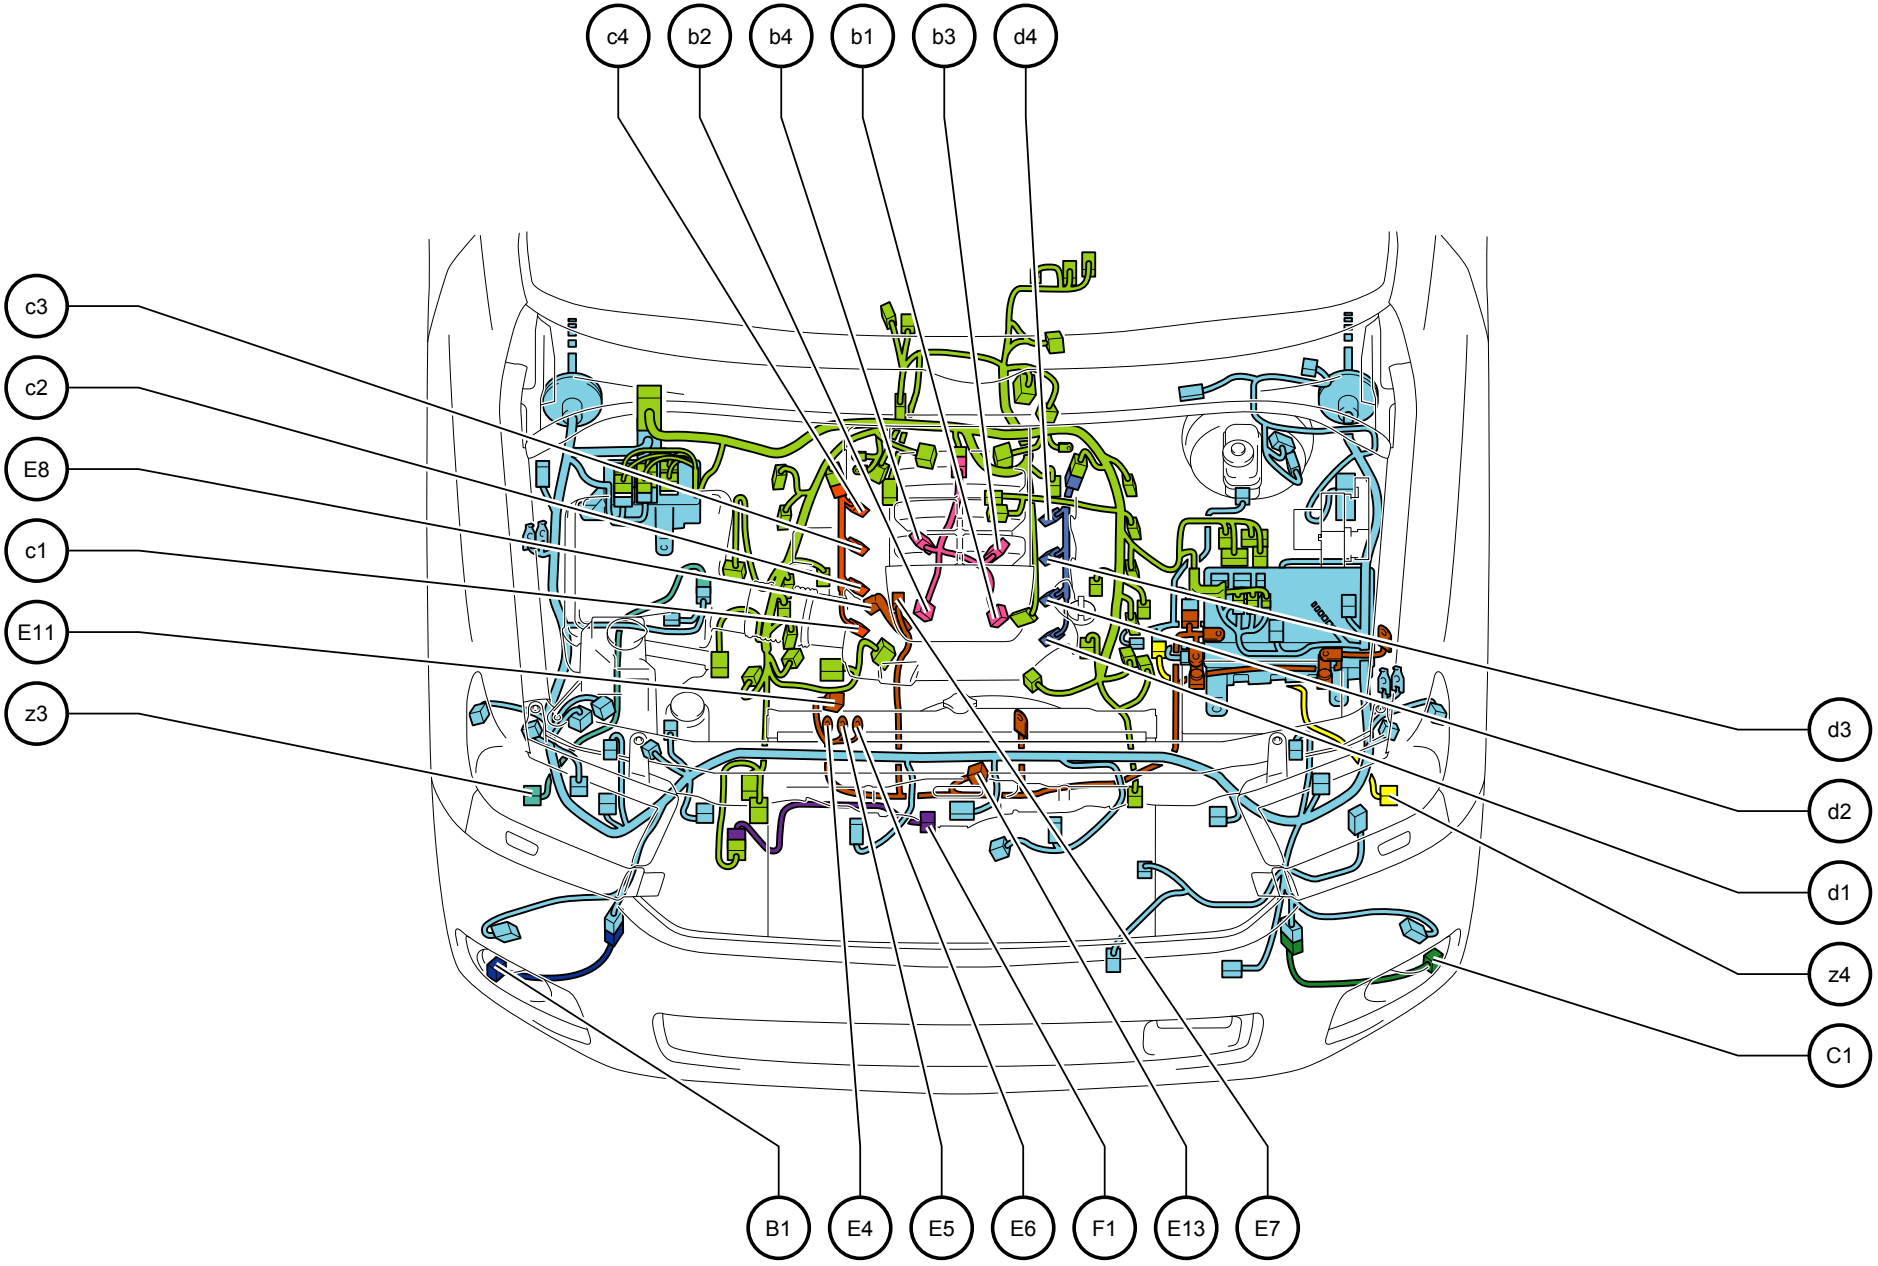

c4
b2
b4
b1
b3
d4
c3
c2
E8
c1
E11
z3
d3
d2
d1
z4
C1
B1
E4
E5
E6
F1
E13
E7

B 1 Front No.1 Ultrasonic Sensor RH

C 1 Front No.1 Ultrasonic Sensor LH

E 4 Generator Assembly
E 5 Generator Assembly
E 6 Generator Assembly
E 7 Starter Assembly
E 8 Starter Assembly
E 11 Generator Assembly
E 13 Oil Pressure Sender Gage Assembly

F 1 Differential Vacuum Actuator Assembly


b 1 Knock Control Sensor (Bank 1 Sensor 1)
b 2 Knock Control Sensor (Bank 2 Sensor 1)
b 3 Knock Control Sensor (Bank 1 Sensor 2)
b 4 Knock Control Sensor (Bank 2 Sensor 2)

c 1 Fuel Injector Assembly No.2
c 2 Fuel Injector Assembly No.4
c 3 Fuel Injector Assembly No.6
c 4 Fuel Injector Assembly No.8


d 1 Fuel Injector Assembly No.1
d 2 Fuel Injector Assembly No.3
d 3 Fuel Injector Assembly No.5
d 4 Fuel Injector Assembly No.7

z 3 Front Speed Sensor RH
z 4 Front Speed Sensor LH


B 1
Black

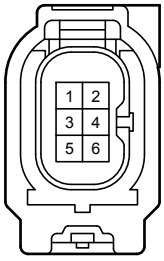


C 1
Black

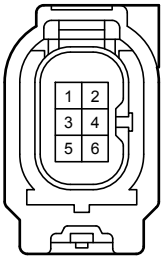


E 4



E 5




E 6



E 7
Black



E 8




E 11
Black




E 13
Black




F 1
Black

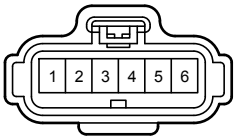


b 1
Black




b 2
Gray

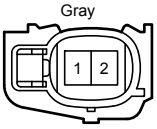


b 3
Black




b 4
Gray

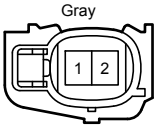


c 1
Black

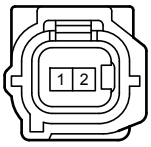


c 2
Black

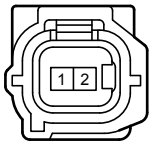


c 3
Black

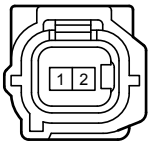


c 4
Black

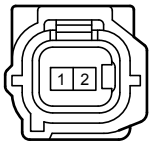


d 1
Black

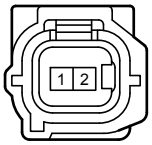


d 2
Black

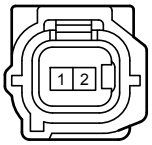


d 3
Black

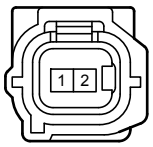

d 4
Black

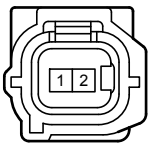

z 3
Black

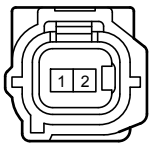

z 4
Black

