



D3
D11
D10
D20
D18
D21
D16
D17
D19
D8
D7
D6
D22
D24
D5
D12
D25
D13
D27
D23
D4
D1
D15
D2
D26
D28

D 1 Crank Position Sensor
D 2 Cam Position Sensor
D 3 Mass Air Flow Meter
D 4 Throttle with Motor Body Assembly
D 5 Ignition Coil Assembly No.1
D 6 Ignition Coil Assembly No.3
D 7 Ignition Coil Assembly No.5
D 8 Ignition Coil Assembly No.7
D 10 Ignition Coil Assembly No.8
D 11 Ignition Coil Assembly No.6
D 12 Ignition Coil Assembly No.4
D 13 Ignition Coil Assembly No.2
D 15 E.F.I. Engine Coolant Temperature Sensor
D 16 Purge VSV
D 17 Oxygen Sensor (Bank 1 Sensor 2)
D 18 Oxygen Sensor (Bank 2 Sensor 2)
D 19 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D 20 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
D 21 Park/Neutral Position Switch Assembly
D 22 VVT Sensor (Bank 1 Intake Side)
D 23 VVT Sensor (Bank 2 Intake Side)
D 24 VVT Sensor (Bank 1 Exhaust Side)
D 25 VVT Sensor (Bank 2 Exhaust Side)
D 26 Cam Timing Oil Control Valve (Bank 1 Intake Side)
D 27 Cam Timing Oil Control Valve (Bank 2 Intake Side)
D 28 Cam Timing Oil Control Valve (Bank 1 Exhaust Side)


D 1
Black

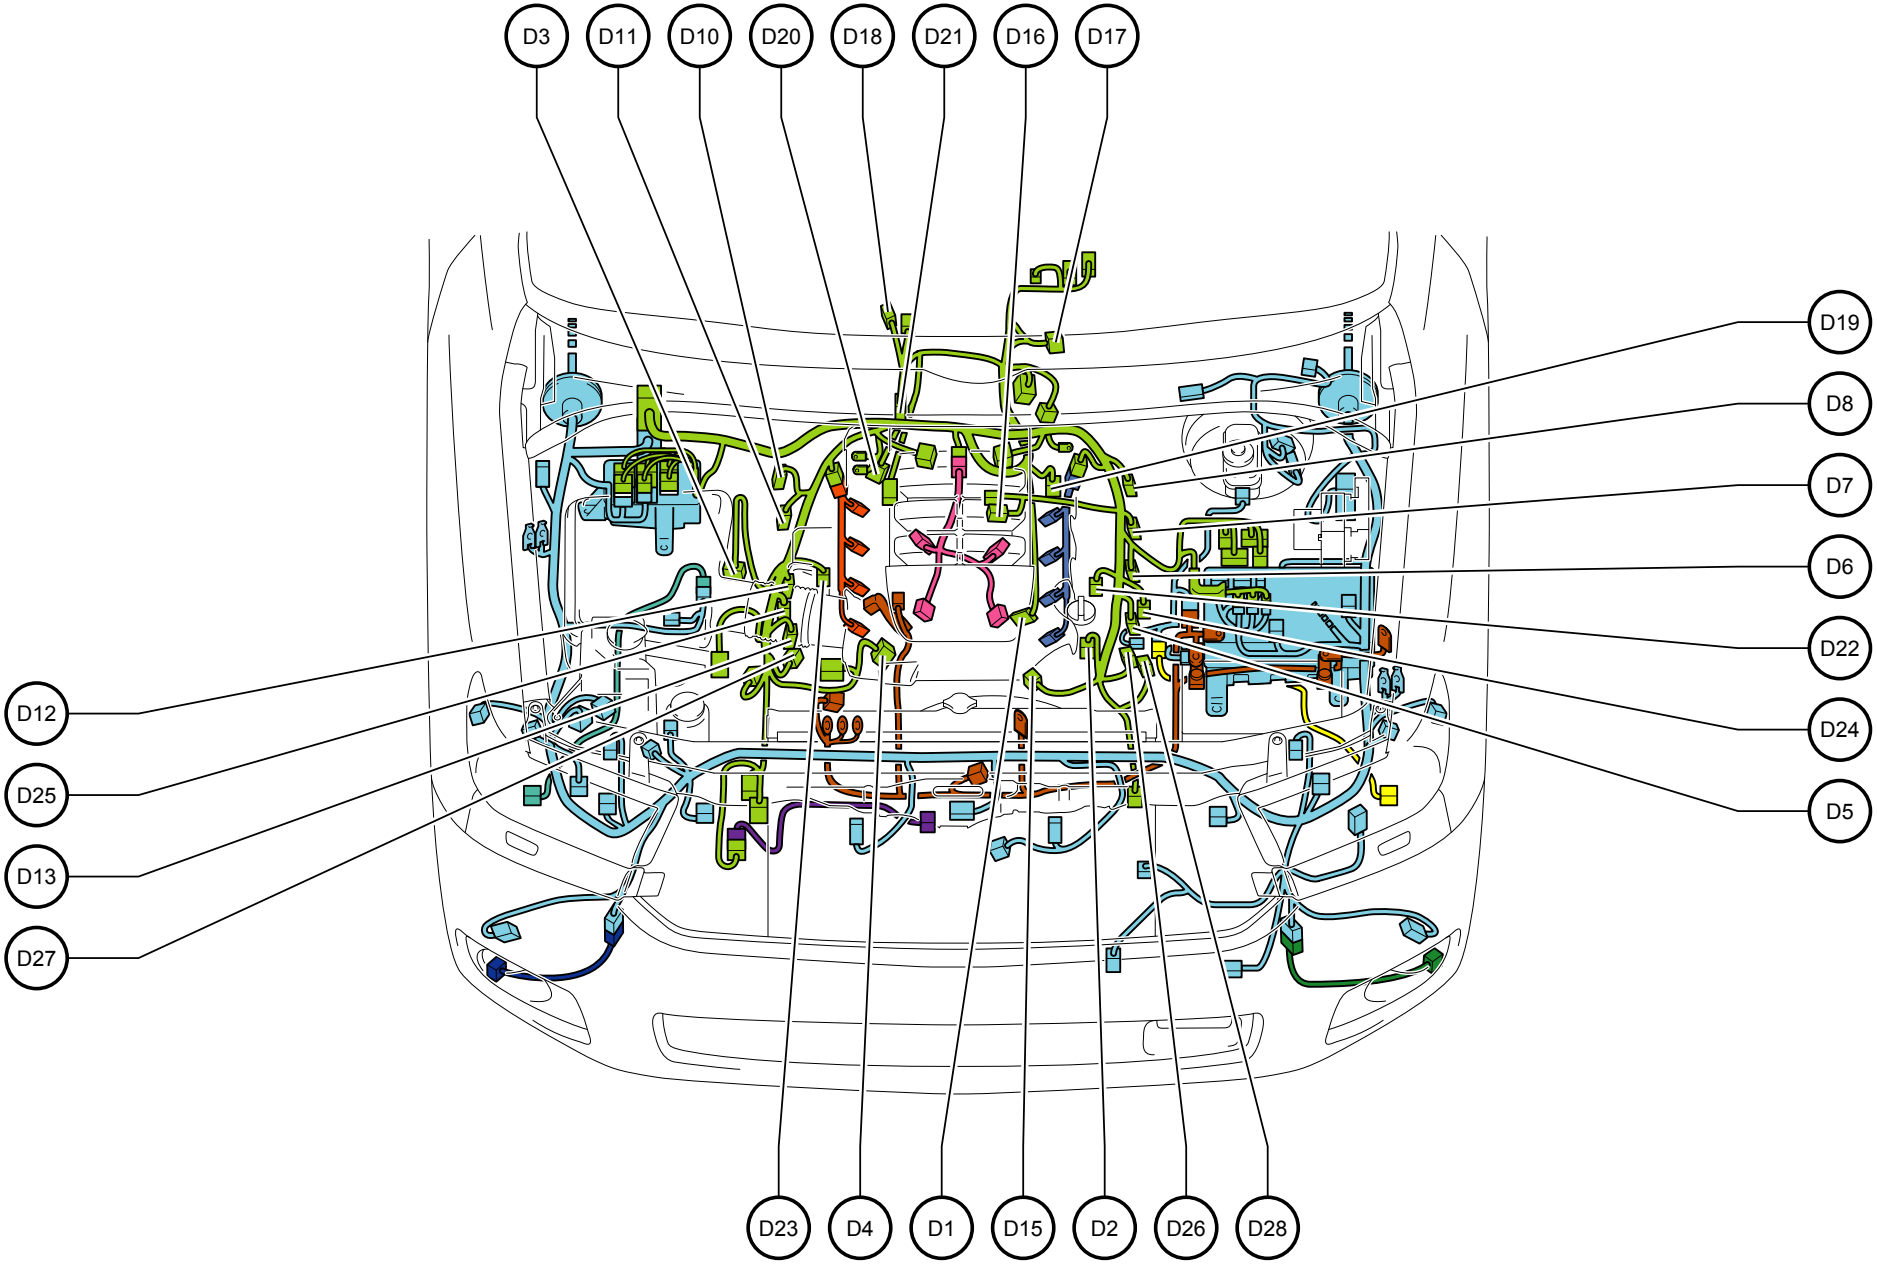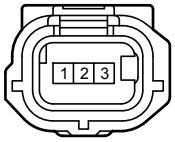


D 2
Black

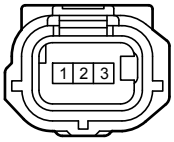


D 3
Black

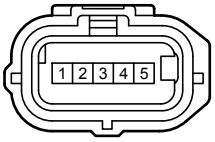


D 4
Black

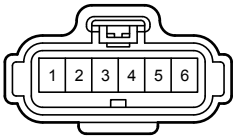


D 5
Black




D 6
Black




D 7
Black




D 8
Black




D 10
Black




D 11
Black



D 12
Black




D 13
Black



D 15
Dark Gray



D 16
Black

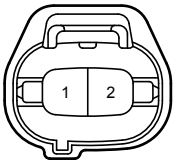

D 17
Dark Gray



D 18
Dark Gray




D 19
Dark Gray




D 20
Dark Gray




D 21
Gray

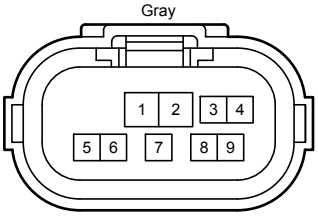


D 22
Black

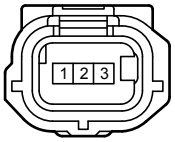


D 23
Black

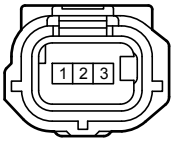

D 24
Black

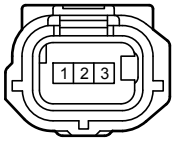

D 25
Black

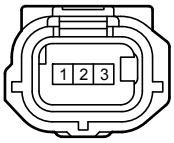

D 26
Black



D 27
Black



D 28
Black

