


D53
D56
D43
D38
D40
D44
D37
D41
D50
D46
D45
D42
D33
D32
D55
D54
D36
D30
D31
D34
D39
D51
D29
D35

D 29 Cam Timing Oil Control Valve (Bank 2 Exhaust Side)
D 30 Power Steering Oil Pressure Sensor
D 31 Air Injection Control Driver (Bank 1)
D 32 Air Injection Control Driver (Bank 1)
D 33 Air Injection Control Driver (Bank 2)
D 34 Air Injection Control Driver (Bank 2)
D 35 Air Pump Assembly (Bank 1)
D 36 Air Pump Assembly (Bank 2)
D 37 Air Switching Valve (Bank 1)
D 38 Air Switching Valve (Bank 2)
D 39 Cooler Compressor Assembly
D 40 VSV (ACIS)
D 41 Electronically Controlled Transmission Solenoid
D 42 Electronically Controlled Transmission Solenoid
D 43 Transmission Revolution Sensor (Turbine)
D 44 Transmission Revolution Sensor (Counter Gear)
D 45 Transfer Shift Actuator Assembly
D 46 Transfer Shift Actuator Assembly
D 50 Transfer Shift Actuator Assembly
D 51 Vane Pump Assembly
D 53 Junction Connector
D 54 Junction Connector
D 55 Junction Connector
D 56 ECM


D 29
Black

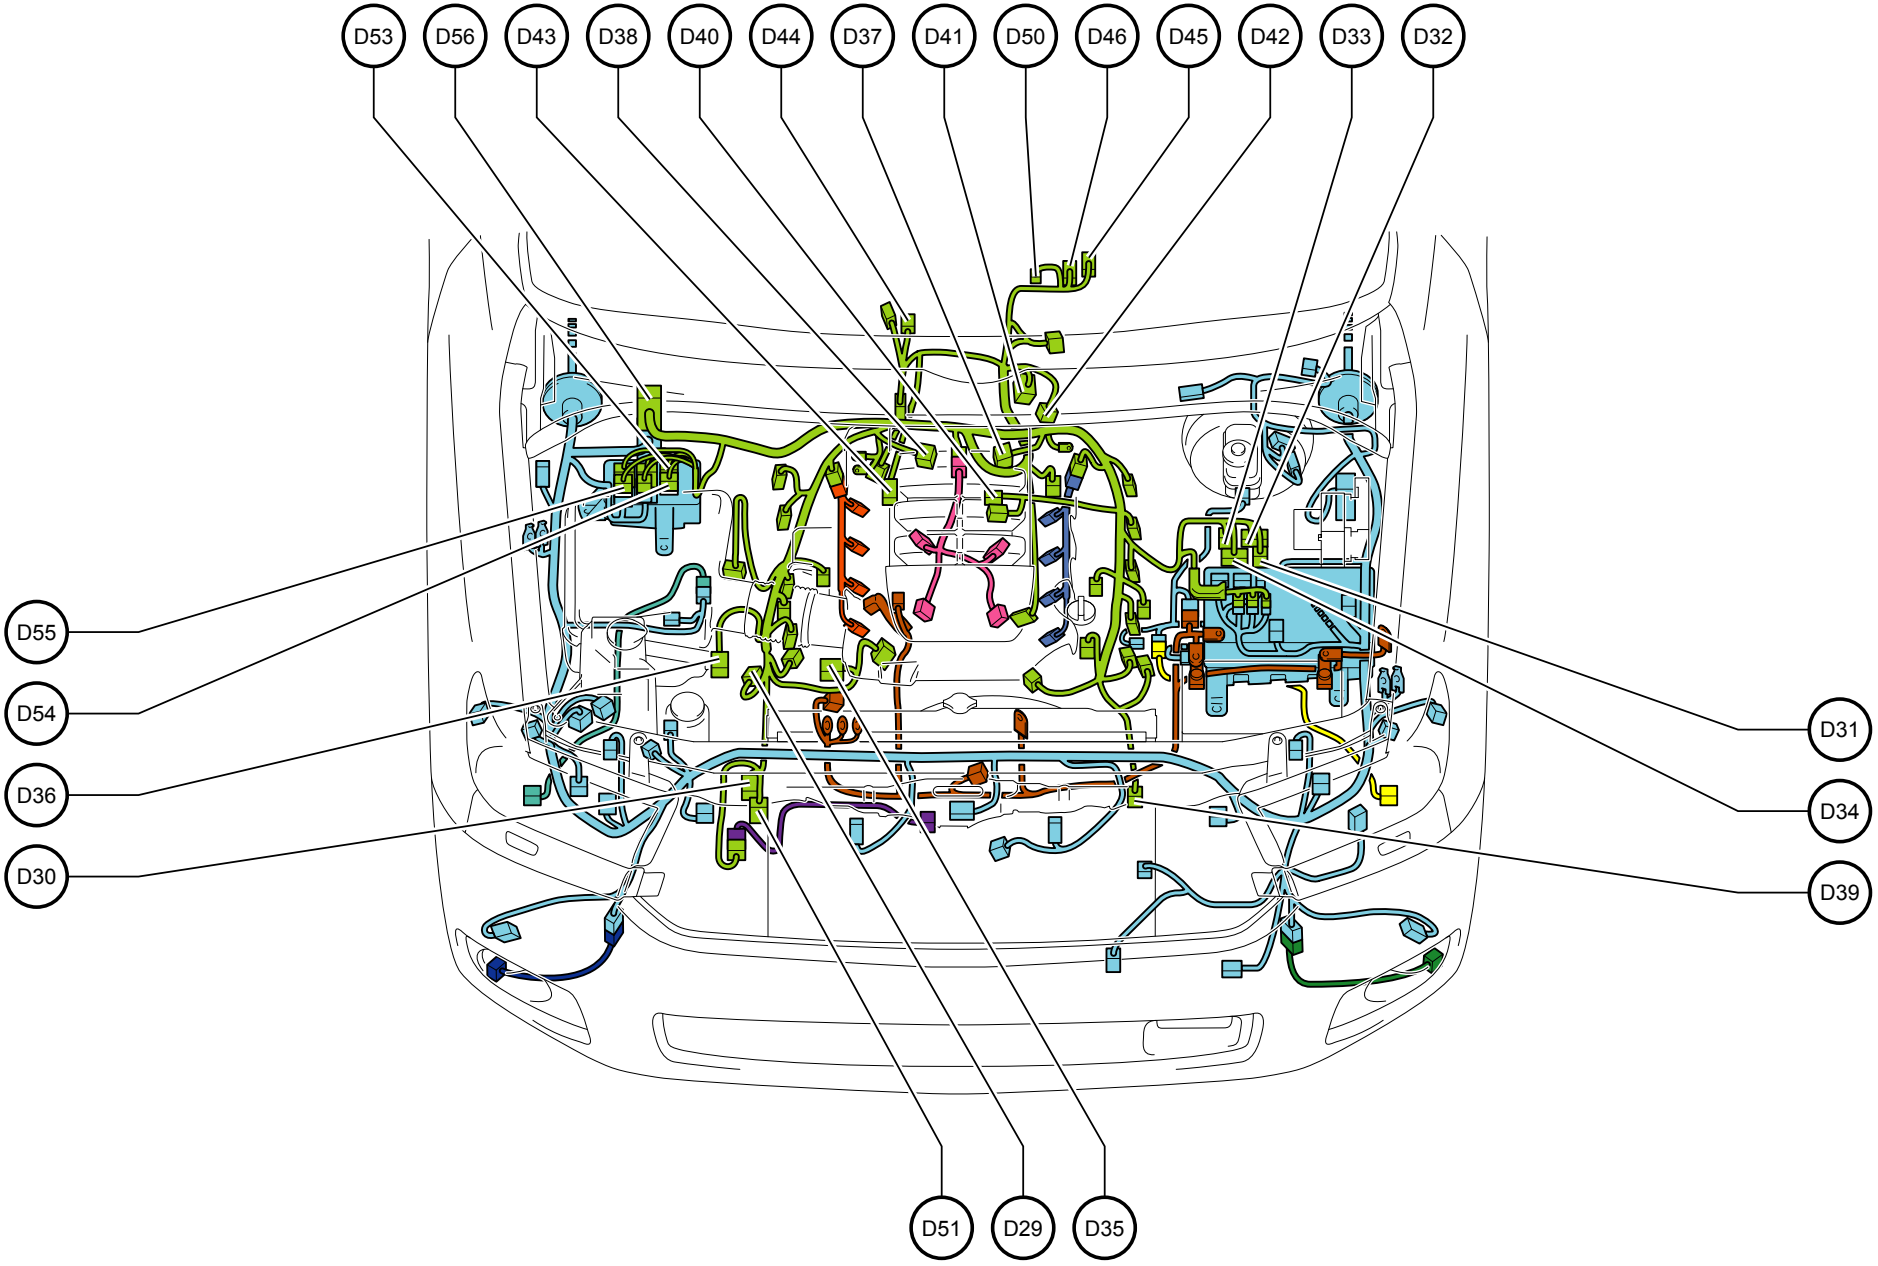


D 30
Gray

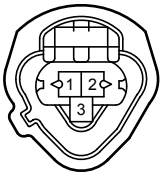


D 31
Black

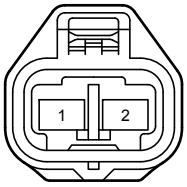


D 32
Black

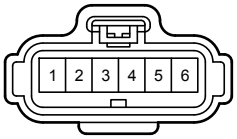


D 33
Gray

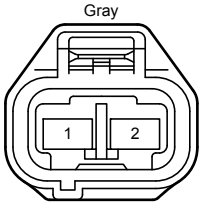


D 34
Gray

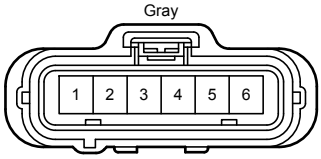


D 35
Black

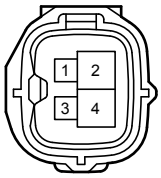


D 36
Black

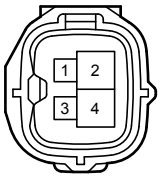

D 37
Black

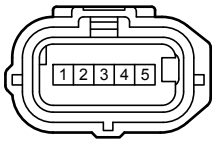


D 38
Black

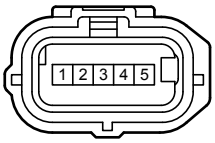


D 39
Gray




D 40
Black

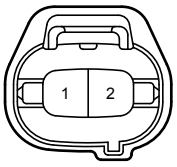


D 41
Gray

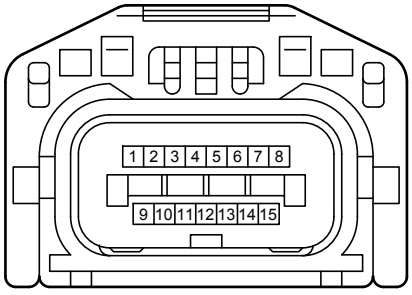


D 42
Gray

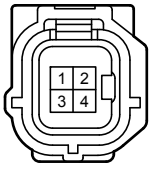


D 43
Black

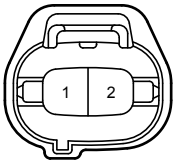


D 44
Black

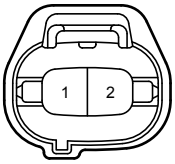


D 45
Black

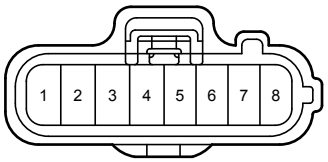


D 46
Dark Gray

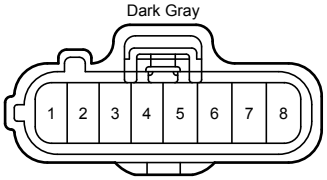


D 50
Black

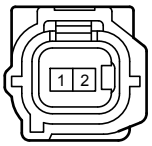


D 51
Black

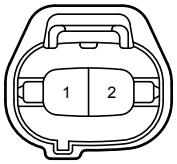


D 53
White

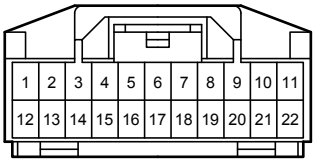

D 54
White

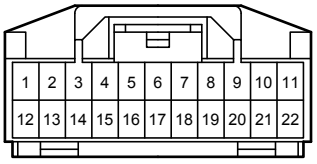

D 55
Blue

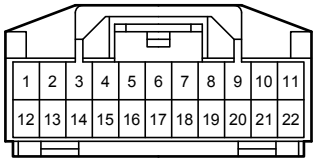

D 56
Black

