



H37
H10
H28
H55
H14
H32
H9
H45
H57
H11
H4
H5
H3
H2
H39
H44
H1
H19
H40
H41
(*2)
H48
(*1)
H49
H47
H24
H51
H17
H21
H6
H13
H54
H15
H52
H16
H29
H56
H35
H30
H31
* 1:w/ Climate Control Seat
* 2:w/o Climate Control Seat

H 1 Main Body ECU
H 2 Main Body ECU
H 3 Main Body ECU
H 4 Main Body ECU
H 5 Skid Control Buzzer Assembly
H 6 Steering Sensor
H 9 Back Door Power Window Regulator Switch Assembly
H 10 Ignition or Starter Switch Assembly
H 11 Headlight Dimmer Switch Assembly
H 13 Spiral Cable Sub-Assembly
H 14 Windshield Wiper Switch Assembly
H 15 Windshield Wiper Switch Assembly
H 16 Front Room Temperature Sensor (Cooler Thermistor)
H 17 Cigarette Lighter Assembly
H 19 DLC3
H 21 Un-Lock Warning Switch Assembly
H 24 A/C Amplifier Assembly
H 28 Key Inter Lock Solenoid
H 29 VSC Off Switch
H 30 Pattern Select Switch Assembly
H 31 Transmission Control Switch
H 32 Transponder Key ECU Assembly
H 35 Shift Lock Control ECU Sub-Assembly
H 37 Combination Meter Assembly
H 39 Turn Signal Flasher Assembly
H 40 Tire Pressure Warning ECU
H 41 Front Blower with Fan Motor Sub-Assembly
H 44 Towing Brake Controller
H 45 Integration Control and Panel Assembly
H 47 Front Seat Heater Switch LH
H 48 Front Seat Heater Switch RH
H 49 Front Seat Heater Switch RH
H 51 Front Power Point Socket Assembly
H 52 Tire Pressure Warning Reset Switch
H 54 Spiral Cable Sub-Assembly
H 55 Back Up Light Relay
H 56 Center Airbag Sensor Assembly
H 57 Multiplex Tilt and Telescopic ECU


H 1
White

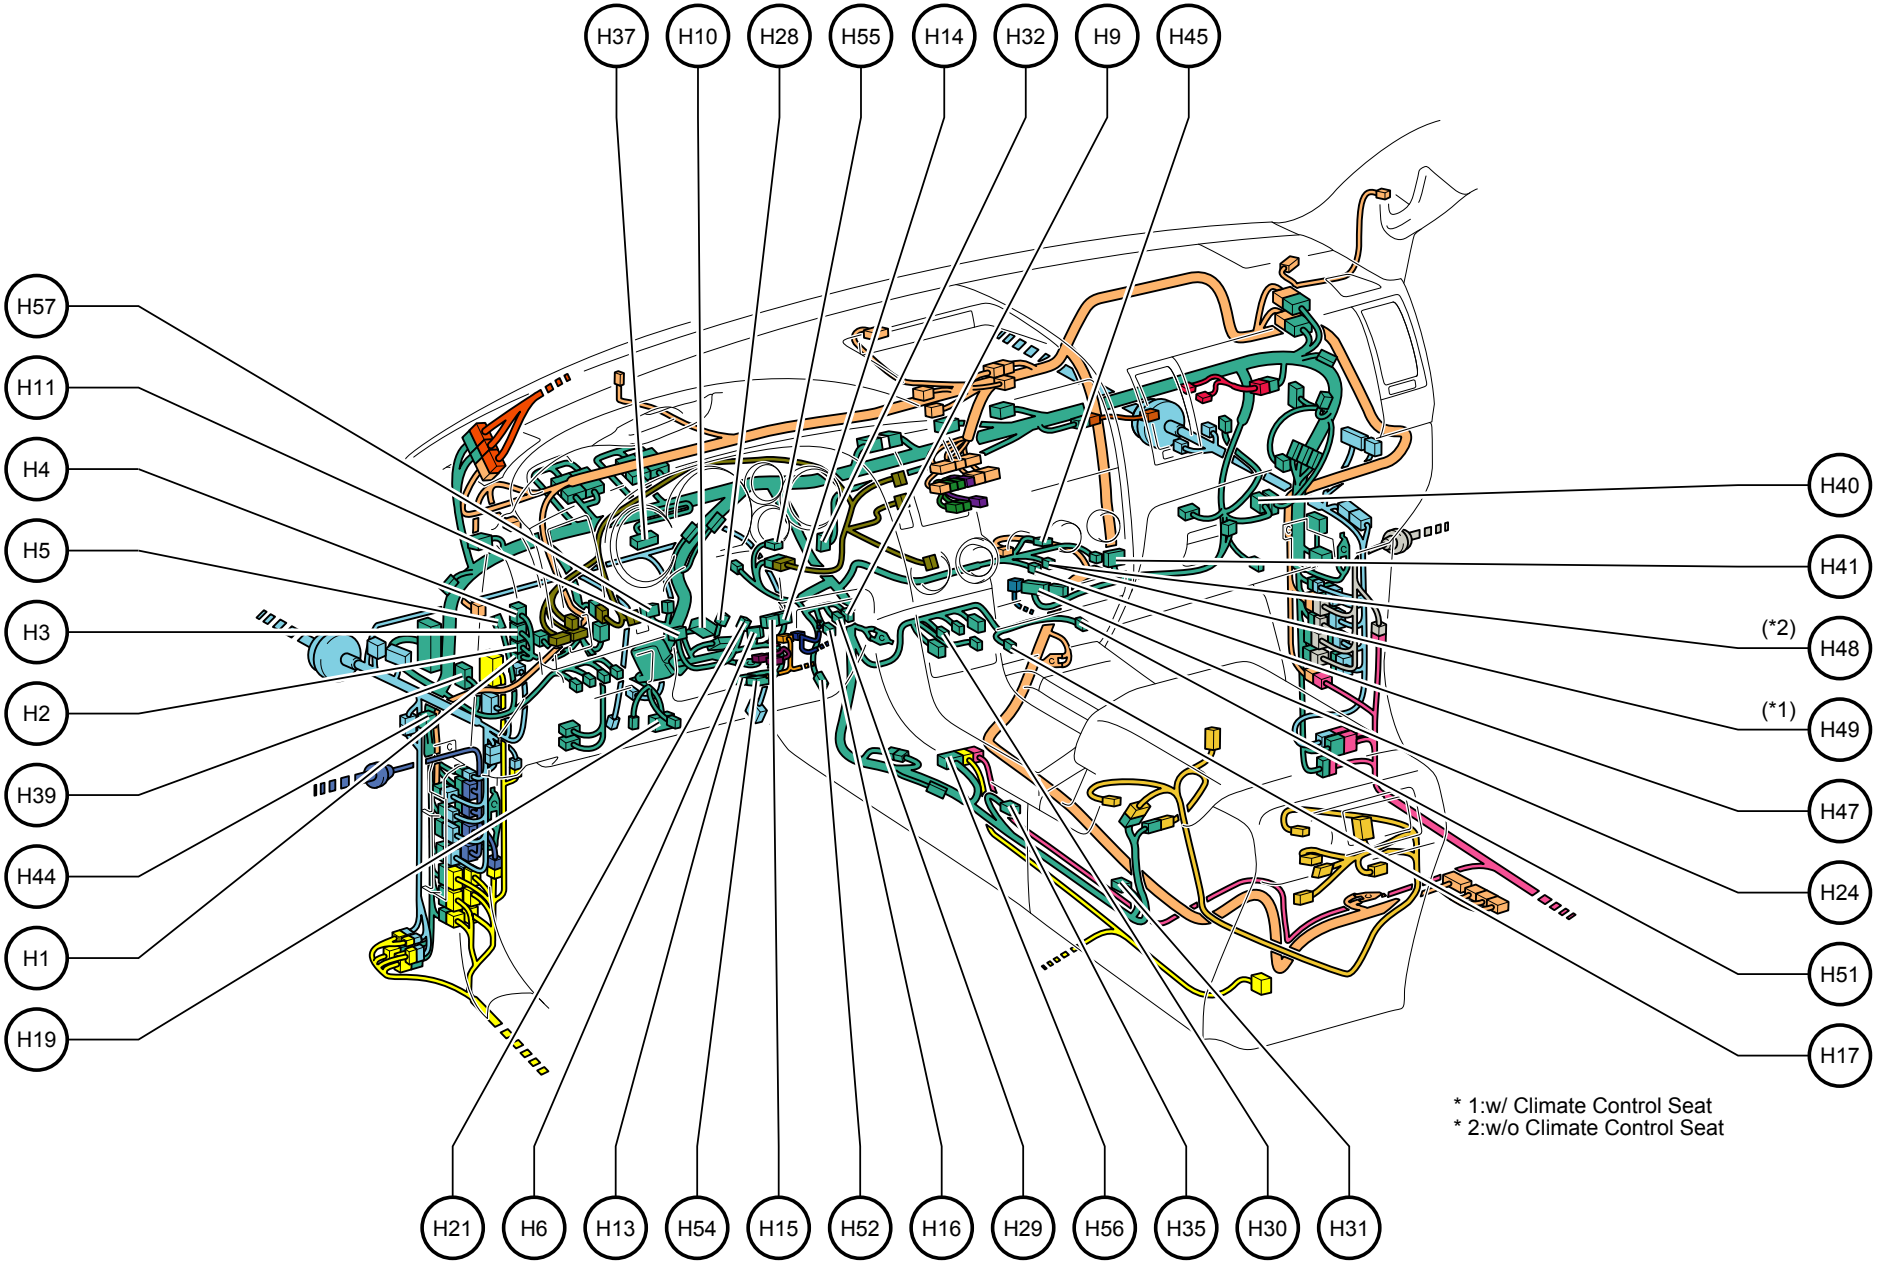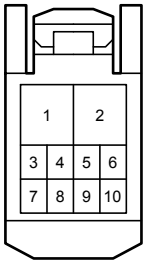


H 2
White

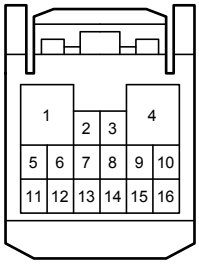


H 3
White

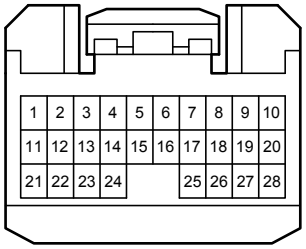


H 4
White

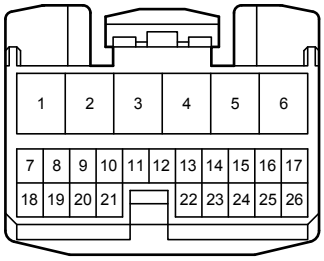


H 5
Black




H 6
Gray

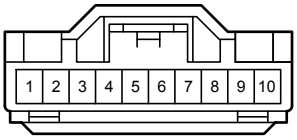


H 9
White

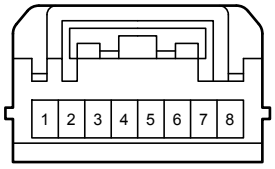


H 10
White

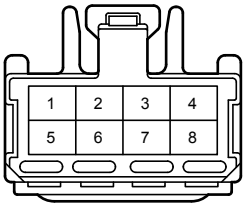


H 11
White

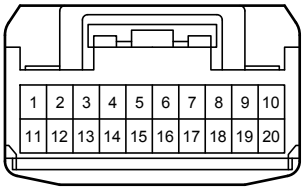


H 13
Yellow

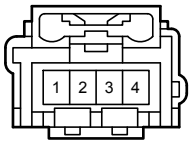


H 14
White

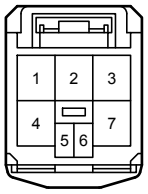


H 15
White

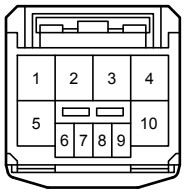


H 16
Black



H 17
White




H 19
White

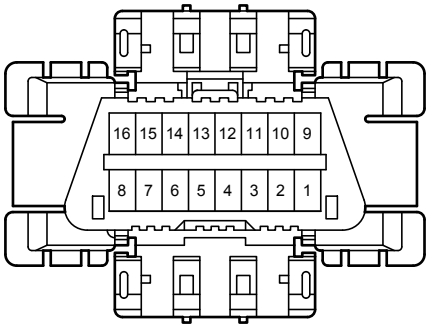

H 21
White




H 24
White

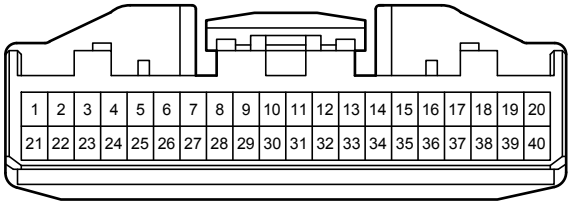


H 28
Black




H 29
Black

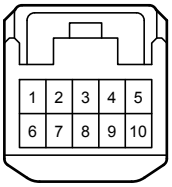


H 30
Black

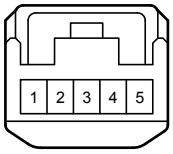


H 31
Black

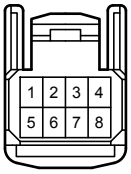


H 32
White

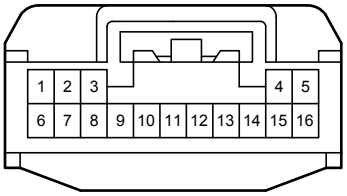


H 35
White

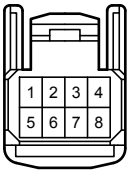


H 37
White

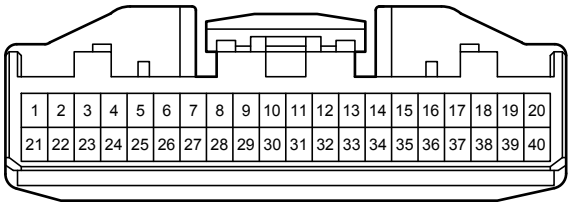


H 39
White

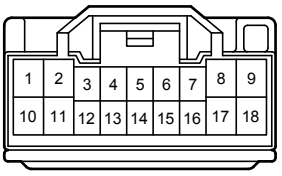


H 40
White

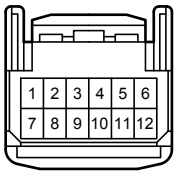


H 41
Black

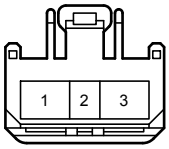


H 44
White

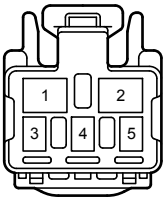


H 45
White

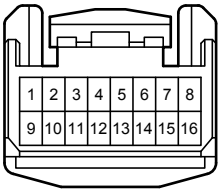


H 47
Black

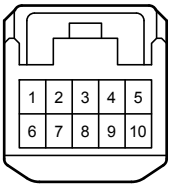

H 48
Black

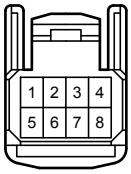


H 49
Black

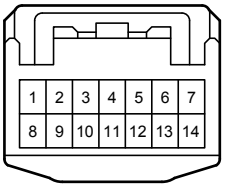


H 51
White




H 52
Black




H 54
Black

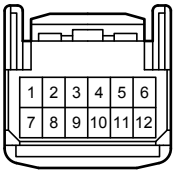

H 55
White

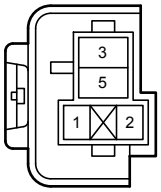

H 56
Yellow

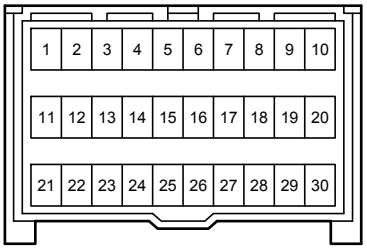

H 57
White

