


A43
J5
J7
J6
J4
J3
(*7)
f1
(*8)
f5
(*8)
f6
(*7)
f3
A41
A46
A28
A29
A50
A51
(*7)
e1
(*8)
e2
e3
f4
f2
J2
A47
A48
A49
A52
A53
A5
A4
A17
O1
P1
O11
(*4)
O12
(*3)
J1
* 3:4WD
* 4:2WD
* 7:w/ Navigation System
* 8:w/o Navigation System

A	4	Stop Light Switch Assembly
A	5	Parking Brake Switch Assembly
A	17	Accelerator Pedal Sensor Assembly
A	28	Four Wheel Drive Control ECU
A	29	Four Wheel Drive Control ECU
A	41	Diode (Starting)
A	43	Distance Control ECU Assembly
A	46	Junction Connector
A	47	Junction Connector
A	48	Junction Connector
A	49	Junction Connector
A	50	Junction Connector
A	51	Junction Connector
A	52	Junction Connector
A	53	Junction Connector
J	1	4 Wheel Drive Control Switch
J	2	Drive Monitor Switch
J	3	Hazard Warning Signal Switch Assembly
J	4	Light Control Rheostat
J	5	Outer Mirror Switch Assembly
J	6	Outer Mirror Switch Assembly
J	7	Interior Dome Light Switch Assembly
O	1	Center Airbag Sensor Assembly
O	11	Yaw Rate Sensor Assembly
O	12	Yaw Rate Sensor Assembly
P	1	Center Airbag Sensor Assembly
e	1	Navigation Receiver Assembly
e	2	Radio & Display Receiver Assembly
e	3	Stereo Component Tuner Assembly
f	1	Navigation Receiver Assembly
f	2	Stereo Component Tuner Assembly
f	3	Navigation Receiver Assembly
f	4	Stereo Component Tuner Assembly
f	5	Radio & Display Receiver Assembly
f	6	Radio & Display Receiver Assembly


A 4
White

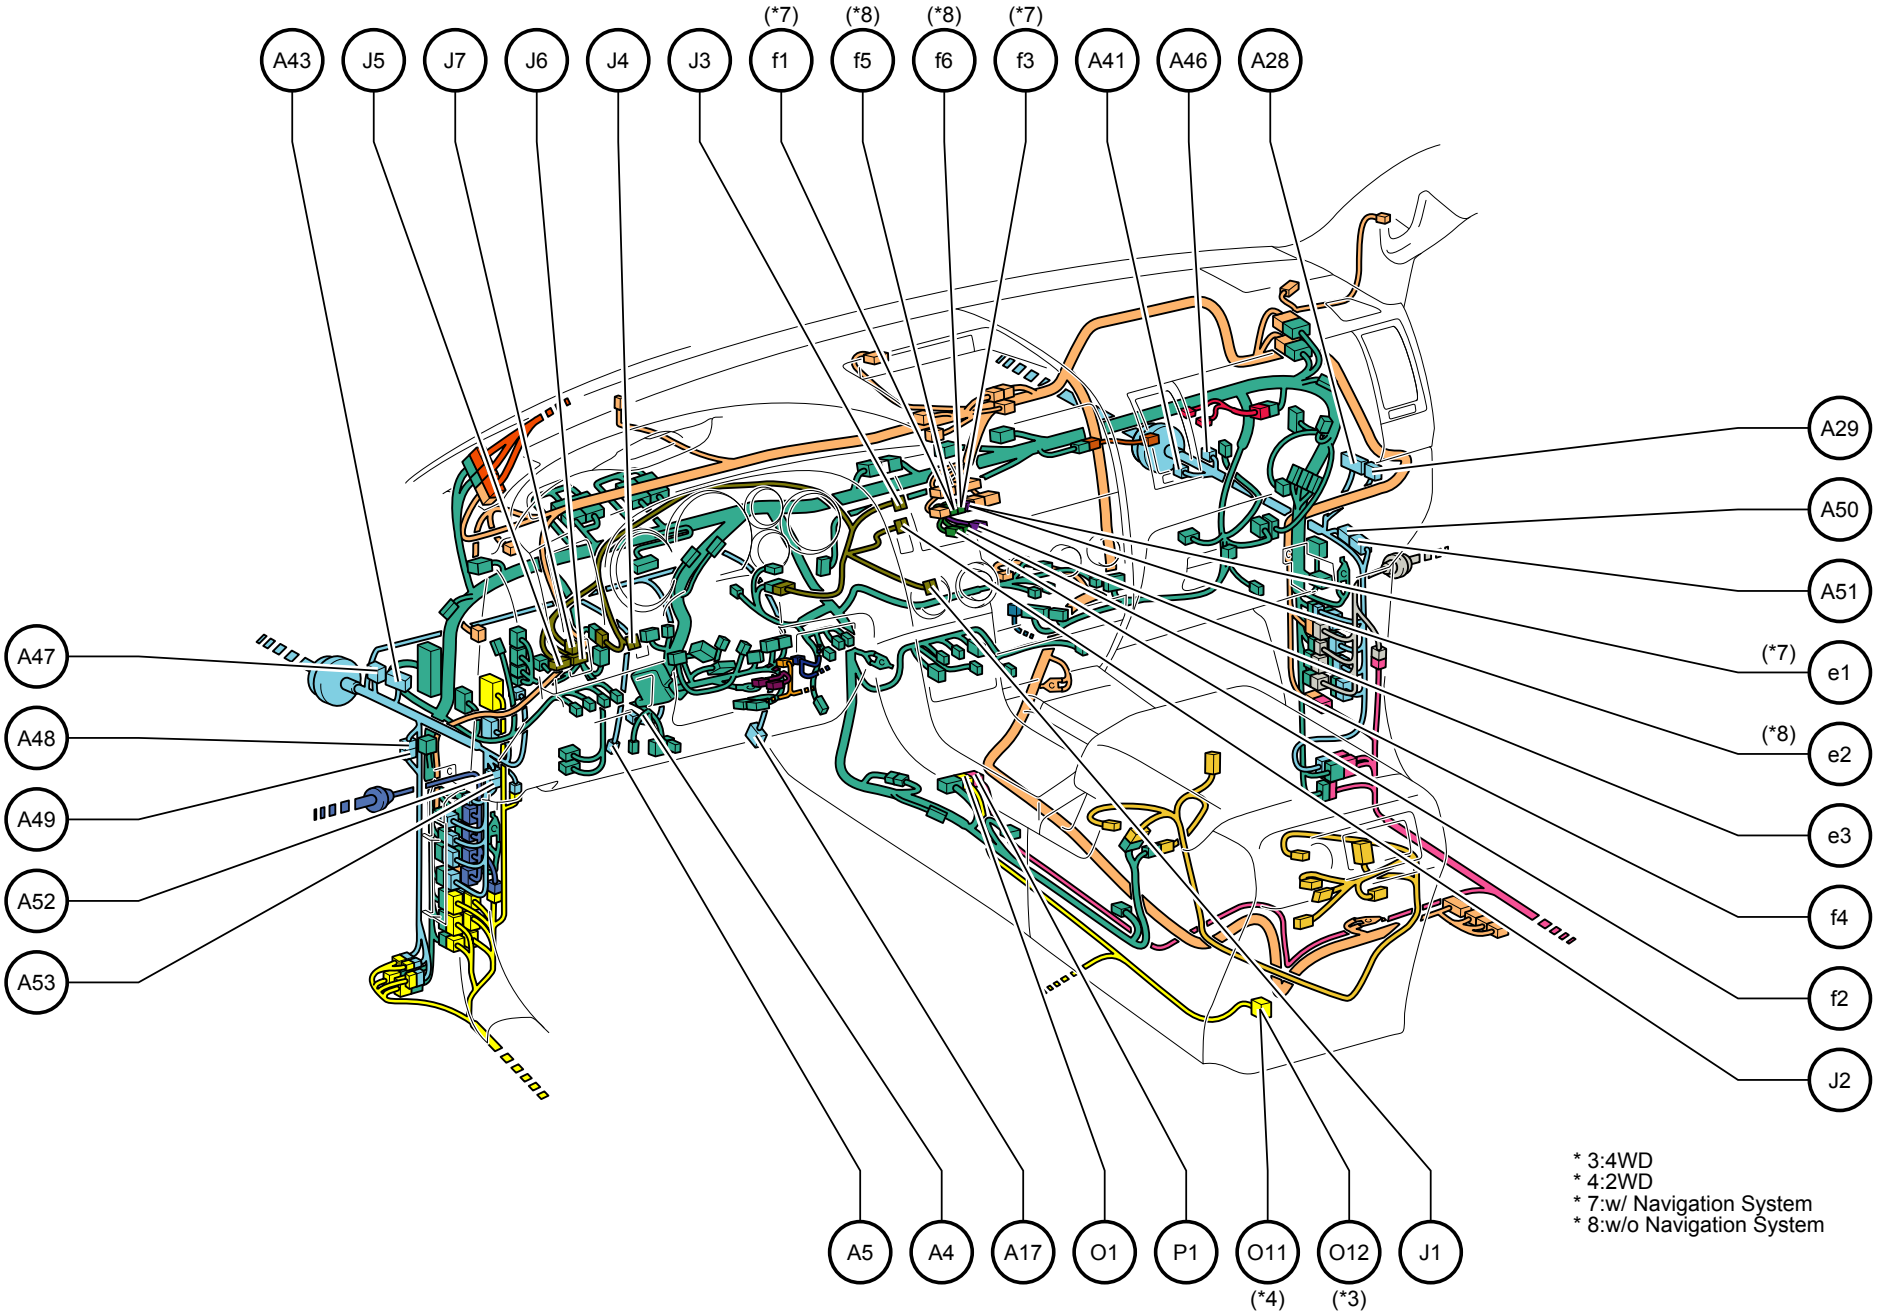


A 5
White

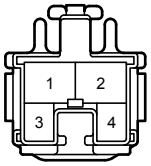


A 17
Black

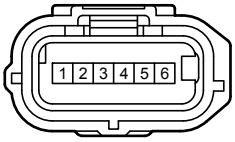

A 28
Black

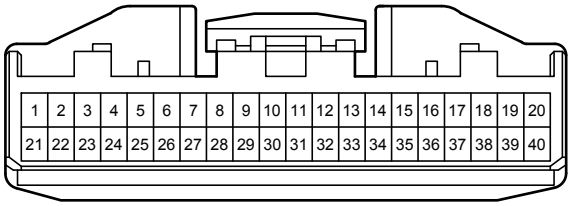


A 29
Black

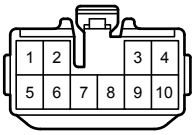


A 41
Black




A 43
White

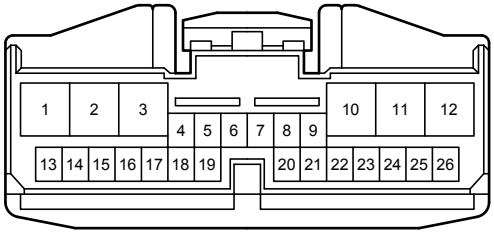


A 46
White

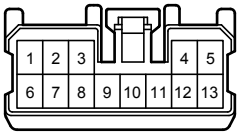


A 47
White

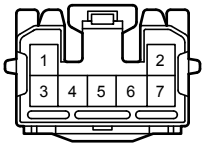


A 48
White

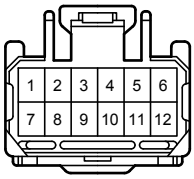


A 49
White

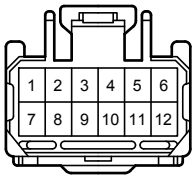


A 50
White

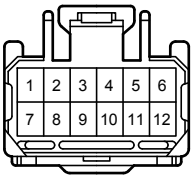


A 51
White

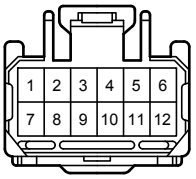


A 52
White

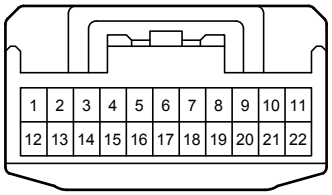


A 53
White

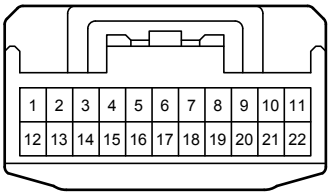


J 1
Black

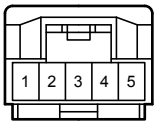


J 2
Black

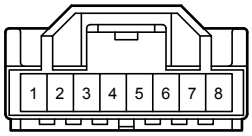


J 3
Gray

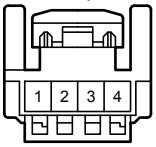


J 4
White

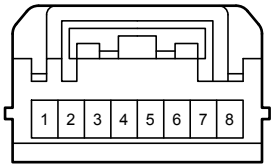


J 5
White

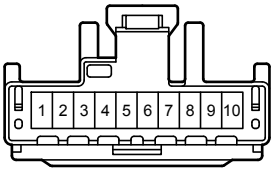


J 6
Black

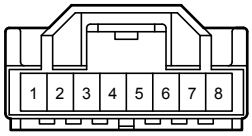


J 7
Black

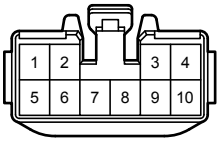


O 1
Yellow

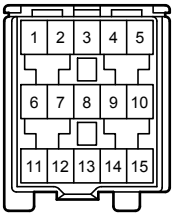


O 11
Black

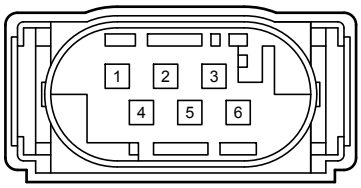


O 12
Black

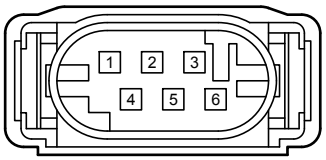


P 1
Yellow

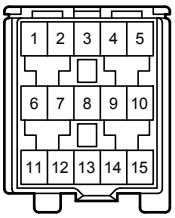


e 1
White

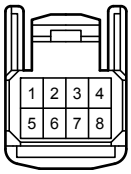


e 2
White

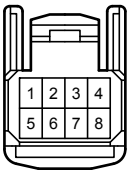


e 3
White

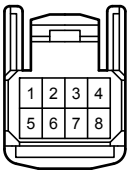


f 1
Brown

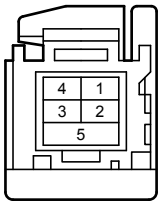


f 2
Brown

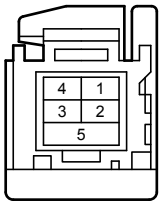


f 3
White



f 4
White



f 5
Brown

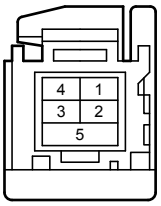

f 6
White

